

# **RFXtrx**

## **USB RF transceiver**

## **Manuel Utilisateur**



[www.rfxcom.com](http://www.rfxcom.com)

# 1. Sommaire

1. Sommaire.....	2
2. Informations générales sur le Transceiver RFXtrx .....	3
2.1. RFXtrx315 liste des protocoles supportés .....	3
2.1.1. RFXtrx315 configured for 310MHz .....	3
2.1.2. RFXtrx315 configured for 315MHz .....	3
2.1.3. RFXtrx868X .....	3
2.2. RFXtrx433 Type1/Type2 liste des protocoles supportés.....	4
2.2.1. By function .....	4
2.2.2. Alphabetic list.....	7
2.3. Undec on.....	11
2.4. Influence des protocoles activés sur la sensibilité.....	12
2.5. RF range reduction.....	13
2.6. Logiciels domotique compatibles.....	13
2.7. Dimensions .....	13
2.8. Electrical .....	13
2.9. Condition d'utilisation.....	13
3. Installation du driver USB .....	14
4. Lancement du programme RFXflash sous Linux avec Mono.....	14
5. Programme de test RFXmngr.....	15
5.1. Récepteur .....	16
5.2. Emetteur .....	16
6. Mise à jour du RFXtrx.....	18
6.1. Mise à jour du firmware RFXtrx .....	18
6.2. Mise à jour du firmware RFXtrx pas à pas.....	19
7. RFXtrx433 Code tables .....	21
7.1. Remote commands .....	21
7.1.1. X10 RF Remote .....	21
7.1.2. ATI Remote Wonder.....	22
7.1.3. ATI Remote Wonder Plus.....	23
7.1.4. Medion Remote.....	24
7.2. Harrison address conversion to switch settings .....	25
7.3. Flamingo, AB400, IMPULS, Sartano,Brennenstuhl switch settings.....	26
7.4. Energenie 5-gang 429.950 .....	27
7.5. Phenix, IDK YC-4000S switch settings .....	28
7.6. HE105 switch settings .....	29
7.7. MDREMOTE .....	30
7.8. Aoke relay .....	30
8. commande Blyss .....	31
9. Comment obtenir l'ID du bandeau de led RGB dx.com.....	31
10. How to find the dx.com RGB LED strip driver ID (rev. 2).....	31
11. How to find the Eurodomest ID .....	31
12. Somfy RTS .....	32
13. BlindsT6.....	32
14. Lucci Air fan .....	32
15. Transmit undecoded ARC commands.....	33
16. Known Lighting4 devices .....	34
16.1. Proluxx projection screen.....	34
16.2. Kingpin (KP100) projection screen.....	34
16.3. Mercury remote control mains sockets.....	34
16.4. Conrad 034911 sockets .....	34
17. EC Declaration of Conformity.....	35
18. Précautions.....	36
19. License .....	36
20. Copyright notice .....	36
21. Traduction française .....	36
22. Historique des modifications .....	37

## 2. Informations générales sur le Transceiver RFXtrx

Le transceiver RFXtrx et le récepteur RFXrec communiquent avec l'application PC par l'intermédiaire d'un port USB. Le port USB sert aussi à alimenter les modules RFXtrx/rec. Au démarrage, le RFXtrx entre dans l'état Bootloader pendant 2 secondes (la led est rouge fixe), puis il passe automatiquement en mode émetteur/récepteur RF.

Si des paquets valides sont reçus, la led jaune clignote.

Le RFXtrx315 et le RFXrec433 sont principalement utilisés pour les US. RFXtrx315 permet la réception de signaux X10 US (standard et sécurisé) OU les signaux Visonic PowerCode en fréquence 315Mhz

Le RFXtrx433 permet la réception de signaux de différentes marques de station météo en 433.92Mhz. Le RFXtrx433 est un transceiver (émetteur et récepteur), il permet de contrôler une large gamme de capteurs et de périphériques radio en 433.92Mhz

Le RFXtrx433E est une version étendue du transceiver RFXtrx433.

Remarque : Tous les protocoles et marques listés sont supportés.

### 2.1. RFXtrx315 liste des protocoles supportés

#### 2.1.1. RFXtrx315 configured for 310MHz

Protocol	Enable	receive	transmit
US X10 lighting	X10	Y	Y
US X10 security	X10	Y	Y

#### 2.1.2. RFXtrx315 configured for 315MHz

Protocol	Enable	receive	transmit
Aoke relay - <a href="http://www.aliexpress.com/store/product/whose-sale-prices-DC12V10A-Learning-Code-Wireless-Remote-Control-Switch-System-1-Receiver-and-1-Transmitter/1211856_1774391429.html">http://www.aliexpress.com/store/product/whose-sale-prices-DC12V10A-Learning-Code-Wireless-Remote-Control-Switch-System-1-Receiver-and-1-Transmitter/1211856_1774391429.html</a>	-	-	Y
Visonic CodeSecure	-	planned	-
Visonic PowerCode	Visonic	Y	Y

#### 2.1.3. RFXtrx868X

Protocol	Protocol	receive	transmit
FS20	-	-	Y
Itho CVE RFT	-	-	Y
Keeloq (unencrypted part only)	Keeloq	Y	Y
Visonic CodeSecure (unencrypted part only)	Visonic	Y	-
Visonic PowerCode	Visonic	Y	Y

## 2.2. RFXtrx433 Type1/Type2 liste des protocoles supportés

### 2.2.1. By function

Curtains, shades, projection screen, awning, gate openers
A-OK blind motors (RF01,AC114,AC123 controlled) - <a href="http://www.motorisationplus.com/">http://www.motorisationplus.com/</a>
ASA ETR blind motors - <a href="http://www.asa-mingardi.org/en/home.php">http://www.asa-mingardi.org/en/home.php</a>
BOFU blind motors - <a href="http://www.bofumotor.com/">http://www.bofumotor.com/</a>
BTX blind motors - <a href="http://www.btxinc.com">http://www.btxinc.com</a>
Brel blind motors - <a href="http://www.brel-motors.nl/webshop/motoren/">http://www.brel-motors.nl/webshop/motoren/</a>
Chamberlain CS433OCN <a href="http://www.chamberlain24.de/epages/es122868.sf/en_GB/?ObjectPath=/Shops/es122868/Products/RA4336">http://www.chamberlain24.de/epages/es122868.sf/en_GB/?ObjectPath=/Shops/es122868/Products/RA4336</a>
Dolat DLM-1 controlled motors - <a href="http://www.dolat.com.cn/product1.asp?id=538">http://www.dolat.com.cn/product1.asp?id=538</a>
Dooya blind motors remotes tested: DC305,DC306,DC307,DC313,DC1650,DC1651
Ematronic - <a href="http://www.ematronic.com/moteurs-volet-roulant/">http://www.ematronic.com/moteurs-volet-roulant/</a>
ESMO Blind motors
Forest blind/curtain motors - <a href="http://www.forestgroup.nl/index_nl.html">http://www.forestgroup.nl/index_nl.html</a>
Harrison curtain - <a href="http://www.harrison.nl/home2.htm">http://www.harrison.nl/home2.htm</a>
Hasta blind motors - <a href="http://www.hasta.se/">http://www.hasta.se/</a>
JVS screens - <a href="http://www.screen-discount.nl/">http://www.screen-discount.nl/</a>
Kingpin KP100 projection screen
Louvolite one touch motorised blinds
Luxaflex (RFXtrx433E only) - <a href="http://www.luxaflex.se/produkter/luxaflex/rullgardiner/">http://www.luxaflex.se/produkter/luxaflex/rullgardiner/</a>
Media Mount Projector screen
Proluxx projection screen
Quotidom - <a href="http://www.quotidom.com/moteur-tubulaire-radio-quotidom-10-ou-20-nm-volet-roulant-ou-store-banne.html">http://www.quotidom.com/moteur-tubulaire-radio-quotidom-10-ou-20-nm-volet-roulant-ou-store-banne.html</a>
RAEX blind motor (YR1326 controlled)
Simu (RFXtrx433E only) - <a href="http://www.simu.com/">http://www.simu.com/</a>
Somfy (RFXtrx433E only) - <a href="http://www.somfy.co.uk/">http://www.somfy.co.uk/</a>
Sunpery blind motors
RohrMotor24 RMF blind motors - <a href="http://www.rohrmotor24.eu/rohrmotor24">http://www.rohrmotor24.eu/rohrmotor24</a>
RollerTrol blind motors - <a href="http://rollertrol.com/">http://rollertrol.com/</a>
YODA blind motors - <a href="http://www.sukcesgroup.pl">http://www.sukcesgroup.pl</a>

Temperature, humidity, weather sensors
Alecto - WS1200, WS1700, WS3500, WS4500
Auriol - H13726
Banggood – SKU174397 <a href="http://www.banggood.com/433MHz-Wireless-Weather-Station-Digital-Thermometer-Humidity-Sensor-p-965559.html">http://www.banggood.com/433MHz-Wireless-Weather-Station-Digital-Thermometer-Humidity-Sensor-p-965559.html</a>
Cresta
Digimax
Hama - EWS1500
Hideki weather sensors
Honeywell - TF-ATS34C
Inovalley SM80 with plant probes - <a href="http://www.inovalley.com/detail.php?item_id=289">http://www.inovalley.com/detail.php?item_id=289</a>
La Crosse
Lexibook - SM883
Maverick ET-732 BBQ/Smoke temperature
Meade - TS33F-M, TS34C-M <a href="http://www.meade.com/products/weatherstations/sensors.html">http://www.meade.com/products/weatherstations/sensors.html</a>
Meteoscan - W155, W160
mi.sol WH2 <a href="http://www.ebay.com/itm/Transmitter-for-Wireless-Weather-Station-wireless-temperature-sensor-/121664060899">http://www.ebay.com/itm/Transmitter-for-Wireless-Weather-Station-wireless-temperature-sensor-/121664060899</a>
NEXUS - I008T
Opus XT300 /Imagintronix Soil sensor <a href="http://www.plantcaretools.com/en/webshop/wireless-moisture-sensor-en-detail">http://www.plantcaretools.com/en/webshop/wireless-moisture-sensor-en-detail</a> <a href="http://www.ebay.co.uk/itm/Wireless-Soil-Moisture-Sensor-/251380900939?pt=UK_Home_Garden_Garden_Plants_Fertiliser_CV&amp;hash=item3a8778244b">http://www.ebay.co.uk/itm/Wireless-Soil-Moisture-Sensor-/251380900939?pt=UK_Home_Garden_Garden_Plants_Fertiliser_CV&amp;hash=item3a8778244b</a>
Oregon Scientific / Huger
Prego P-8426 <a href="http://www.summarket.fi/tuote.asp?TID=11990">http://www.summarket.fi/tuote.asp?TID=11990</a>
Proove - TSS320 & TSS330 fridge/freezer thermometer & outdoor sensors 311346,311501
RFXSensor

RUBiCS ON - stektermometer 48659, 48695 -pool sensor p48019
Sunvic TLX1206
Sunvic TLX7506
TechnoLine/Proficell <a href="http://www.elv.de/output/controller.aspx?cid=74&amp;detail=10&amp;detail2=27621">http://www.elv.de/output/controller.aspx?cid=74&amp;detail=10&amp;detail2=27621</a> - TX95-TH
TFA
UPM/Esic (very short receiving range)
Ventus - WS155
Viking
WT0122 pool thermometer
Xiron – EN6

Appliance modules, dimmers, relays, LED controllers
ANSLUT (learning mode)
Aoke relay <a href="http://www.aliexpress.com/store/product/whose-sale-prices-DC12V10A-Learning-Code-Wireless-Remote-Control-Switch-System-1-Receiver-and-1-Transmitter/1211856_1774391429.html">http://www.aliexpress.com/store/product/whose-sale-prices-DC12V10A-Learning-Code-Wireless-Remote-Control-Switch-System-1-Receiver-and-1-Transmitter/1211856_1774391429.html</a>
ByeByeStandBy
Blyss lighting - <a href="http://www.castorama.fr/store/Prise-telecommandee-et-telecommande-BLYSS---Interieur-prod4470026.html">http://www.castorama.fr/store/Prise-telecommandee-et-telecommande-BLYSS---Interieur-prod4470026.html</a>
Brennenstuhl
Chacon - <a href="http://www.chacon.be/">http://www.chacon.be/</a>
CoCo - <a href="http://www.coco-technology.com/en/home/">http://www.coco-technology.com/en/home/</a>
Conrad RSL2 - <a href="http://www.conrad.com/ce/en/product/640466/FUNK-STECKDOSENSCHALTER-RSLR2">http://www.conrad.com/ce/en/product/640466/FUNK-STECKDOSENSCHALTER-RSLR2</a>
DI.O - <a href="http://www.di-o.be/">http://www.di-o.be/</a>
DomiaLite
Ebode
ELRO AB400/AB600 - <a href="http://www.elro.eu/en/products/cat/home-automation/home-control1">http://www.elro.eu/en/products/cat/home-automation/home-control1</a>
Energenie ENER010 – 429.935, 5-gang 429.950 - <a href="https://energenie4u.co.uk/">https://energenie4u.co.uk/</a>
Etekcity - <a href="http://etekcity.com/p-300-5-pack-wireless-remote-control-outlet-switch-set-with-2-remote-controls-zap-5lx.aspx">http://etekcity.com/p-300-5-pack-wireless-remote-control-outlet-switch-set-with-2-remote-controls-zap-5lx.aspx</a>
Eurodomest NL - Action
Everflourish EMW100
Flamingo
Home Confort - <a href="http://www.home-confort.net/en">http://www.home-confort.net/en</a>
HomeEasy EU - <a href="http://www.elro.eu/en/products/cat/home-automation/">http://www.elro.eu/en/products/cat/home-automation/</a>
HomeEasy UK (including HE105 relay) - <a href="http://www.homeeasy.eu/">http://www.homeeasy.eu/</a>
Ikea Koppla
Impuls - NL - Action
Intertecho - <a href="http://www.intertecho.at/">http://www.intertecho.at/</a>
Kambrook RF3672 - <a href="http://www.bunnings.com.au/kambrook-4-piece-indoor-powerpoint-kit-with-remote-control_p7030054">http://www.bunnings.com.au/kambrook-4-piece-indoor-powerpoint-kit-with-remote-control_p7030054</a>
KlikAanKlikUit - <a href="http://www.klikaanklikuit.nl/home/">http://www.klikaanklikuit.nl/home/</a>
Legrand CAD radio - <a href="http://docdif.fr.grpleg.com/general/legrand-fr/NP-FT-GT/FA181DFR.pdf">http://docdif.fr.grpleg.com/general/legrand-fr/NP-FT-GT/FA181DFR.pdf</a>
LightwaveRF – <a href="http://www.lightwaverf.co.uk/">http://www.lightwaverf.co.uk/</a>
Livolo - <a href="http://www.livolo-France.com/fr/">http://www.livolo-France.com/fr/</a> <a href="http://nl.aliexpress.com/w/wholesale-livolo-touch-switch.html">http://nl.aliexpress.com/w/wholesale-livolo-touch-switch.html</a>
Maplin <a href="http://www.maplin.co.uk/p/remote-controlled-mains-socket-set-single-n78ka">http://www.maplin.co.uk/p/remote-controlled-mains-socket-set-single-n78ka</a> (use Lighting1 – COCO GDR2)
Mdremote LED dimmer - <a href="http://www.ultraleds.co.uk">www.ultraleds.co.uk</a>
Mercury appliance modules – <a href="http://mercury.avsl.com/product?range=ME5124">http://mercury.avsl.com/product?range=ME5124</a>
NEXA - <a href="http://www.nexa.se/">http://www.nexa.se/</a>
OTIO
Phenix
Philips SBC SP370 series
Proove - <a href="http://proove.se/">http://proove.se/</a>
RGB LED strip driver dx.com - <a href="http://www.dx.com/">http://www.dx.com/</a> order nbr : 130913 ( <b>new TRC02 not supported</b> ), 67412
RisingSun
Sartano
Siemens (UK)
Waveman
X10 RTS10 / RFS10
X10 lighting
Xdom

## Door/window, smoke and other security sensors

Aidebao security  
Alecto – SA30 smoke detector  
Atlantic security  
Chacon KD101 smoke detector  
Flamingo KD101 smoke detector  
Meiantech security  
NEXA KD101 smoke detector  
Oregon MSR939 <https://www.redealer.de/multimedia/home-living/wetterstationen/bewegungssensor-msr939/a-200667/>  
Visonic CodeSecure  
Visonic PowerCode  
X10 security

## Remotes

ATI Remote Wonder  
ATI Remote Wonder Plus  
ATI Remote Wonder II  
X10 PC Remote

## Chimes

1Byone Easy Chime  
Byron SX chime - <http://www.chbyron.eu/Byron/ByronSXRange/68/89/>  
Byron MP001  
Chacon  
Envivo – ENV1348  
HomeEasy  
KlikAanKlikUit  
SelectPlus200689101 & SelectPlus200689103 (Action NL)

## Power, gas water metering

cent-a-meter  
Electrisave  
OWL CM113, CM180, CM119, CM160, CM180, CM180i - <http://www.theowl.com/>  
Revolt NC5461 - <http://www.pearl.de/a-NC5462-5452.shtml>  
RFXMeter

## Specials

1byone Driveway Alarm <http://www.1byone.co.uk/Home-Security/Alarms/O00QH-0511>  
DEA receivers <http://www.deasystem.com/en/accessory/7/receivers> (unencrypted only)  
Lucci Air fan - <http://www.lucciair.com/>  
Mertik Maxitrol – Fire Place controllers  
Oregon Scientific Body weight scales – BWR101, BWR102, GR101  
Prego P-8426 – sauna temperature sensor <http://www.sunmarket.fi/tuote.asp?TID=11990>  
Smartwares radiator valve <http://www.homewizard.nl/smartwares-draadloze-radiatorkraan.html>  
Siemens SF01 - LF959RA50/LF259RB50/LF959RB50 extractor hood  
Wave Design extractor hood  
X10 Ninja/Robocam – camera motor

## 2.2.2. Alphabetic list

Notes Importantes :

- Le firmware « Ext » n'est pas compatible avec le modèle RFXtrx433
- RFXrec firmware is equal to RFXtrx433 – Type1 firmware without the transmit functions.

L'activation des protocoles n'est nécessaire que pour la réception. Pour la transmission, les protocoles sont toujours TOUS actif. »

Device	Type 1	Type 2	Ext	Protocol	rec	xmit
1byone Driveway Alarm - <a href="http://www.1byone.co.uk/Home-Security/Alarms/O00QH-0511">http://www.1byone.co.uk/Home-Security/Alarms/O00QH-0511</a>	-	Y	Y	ByronSX	Y	Y
1byone Easy Chime	-	Y	Y	ByronSX	Y	Y
A-OK blind motors RF01,AC114,AC123 - <a href="http://www.motorisationplus.com/">http://www.motorisationplus.com/</a>	Y	Y	-	BlindsT1	Y	Y
Aidebaeo security	Y	Y	Y	Meiantech	Y	Y
Alecto – SA30 smoke detector	Y	Y	Y	Oregon	Y	Y
Alecto – WS1200	Y	Y	Y	LaCrosse	Y	-
Alecto – WS1700 and compatibles, WS3500, WS4500	-	-	Y	Rubicson	Y	-
ANSLUT (learning mode)	Y	Y	Y	AC	Y	Y
Aoke relay - <a href="http://www.aliexpress.com/store/product/whose-sale-prices-DC12V10A-Learning-Code-Wireless-Remote-Control-Switch-System-1-Receiver-and-1-Transmitter/1211856_1774391429.html">http://www.aliexpress.com/store/product/whose-sale-prices-DC12V10A-Learning-Code-Wireless-Remote-Control-Switch-System-1-Receiver-and-1-Transmitter/1211856_1774391429.html</a>	Y	Y	Y	Lighting5 Aoke or Lighting1 ARC	N	Y
ASA ETR blind motors - <a href="http://www.asa-mingardi.org/en/home.php">http://www.asa-mingardi.org/en/home.php</a>	-	-	Y	RFY	N	Y
ATI Remote Wonder	Y	-	-	ATI	Y	Y
ATI Remote Wonder Plus	Y	-	-	ATI	Y	Y
ATI Remote Wonder II (only available in hardware version 1.0)	Y	-	-	ATI	Y	-
Atlantic security	Y	Y	Y	Meiantech	Y	Y
Banggood – SKU174397	-	-	Y	Rubicson	Y	-
ByeByeStandBy	Y	Y	Y	ARC	Y	Y
Byron SX chime - <a href="http://www.chbyron.eu/Byron/ByronSXRange/68/89/">http://www.chbyron.eu/Byron/ByronSXRange/68/89/</a>	Y	Y	Y	ByronSX	Y	Y
Byron MP001 chime	-	-	Y	Chime Byron MP001	N	Y
Blyss lighting - <a href="http://www.castorama.fr/store/Prise-telecommandee-et-telecommande-BLYSS---Interieur-prod4470026.html">http://www.castorama.fr/store/Prise-telecommandee-et-telecommande-BLYSS---Interieur-prod4470026.html</a>	Y	Y	Y	AE	Y	Y
BOFU blind motors - <a href="http://www.bofumotor.com/">http://www.bofumotor.com/</a>	Y	Y	Y	BlindsT0	Y*	Y
* = receive only in Type2 used to get the remote ID.						
Brennenstuhl	Y	Y	Y	Lighting4	Y	Y
Brel blind motors – <a href="http://www.brel-motors.nl/webshop/motoren/">http://www.brel-motors.nl/webshop/motoren/</a>	Y	Y	Y	BlindsT6	N	Y
BTX blind motors – <a href="http://www.btxinc.com">http://www.btxinc.com</a>	-	Y	-	BlindsT9	N	Y
cent-a-meter	Y	Y	Y	Oregon	Y	-
Chacon (learning mode) - <a href="http://www.chacon.be/">http://www.chacon.be/</a>	Y	Y	Y	AC	Y	Y
Chacon (with address code wheels)	Y	Y	Y	ARC	Y	Y
Chacon EMW200	Y	Y	Y	Lighting1 EMW200	N	Y
Chacon 54660 (equal COCO GDR2)	Y	Y	Y	Lighting1 COCO GDR2	N	Y
Chacon KD101 smoke detector	Y	Y	Y	always on	Y	Y
Chamberlain CS4330CN <a href="http://www.chamberlain24.de/epages/es122868.sf/en_GB/?ObjectPath=/Shops/es122868/Products/RA4336">http://www.chamberlain24.de/epages/es122868.sf/en_GB/?ObjectPath=/Shops/es122868/Products/RA4336</a>	-	-	Y	BlindsT8	N	Y
CoCo (learning mode) - <a href="http://www.coco-technology.com/en/home/">http://www.coco-technology.com/en/home/</a>	Y	Y	Y	AC	Y	Y
CoCo (with address code wheels)	Y	Y	Y	ARC	Y	Y
CoCo GDR2 (equal Chacon 54660)	Y	Y	Y	Lighting1 COCO GDR2	N	Y
Conrad RSL2	Y	Y	-	RSL	Y	Y

- <a href="http://www.conrad.com/ce/en/product/640466/FUNK-STECKDOSENSCHALTER-RSLR2">http://www.conrad.com/ce/en/product/640466/FUNK-STECKDOSENSCHALTER-RSLR2</a>						
Conrad RSL sensors	-	Y	-	RSL	Y	Y
Conrad RSL2 motion/door-window sensors	-	Y	-	RSL	Y	Y
Cresta - TX-320, TS34C, anemometer, UV sensor, rain sensor	Y	Y	Y	Hideki	Y	-
DEA receivers (unencrypted) <a href="http://www.deasystem.com/en/accessory/7/receivers">http://www.deasystem.com/en/accessory/7/receivers</a>	-	-	Y	KeeLoq	Y	Y
Digimax	Y	Y	Y	X10	Y	-
DI.O (learning mode) - <a href="http://www.di-o.be/">http://www.di-o.be/</a>	Y	Y	Y	AC	Y	Y
DI.O (with address code wheels)	Y	Y	Y	ARC	Y	Y
Dolat DLM-1 controlled motors - <a href="http://www.dolat.com.cn/product1.asp?id=538">http://www.dolat.com.cn/product1.asp?id=538</a>	-	Y	-	BlindsT10	N	Y
DomiaLite (with address code wheels)	Y	Y	Y	ARC	Y	Y
Dooya blind motors, emulate remotes: DC305,DC306,DC307,DC313,DC1650,DC1651	Y	Y	Y	BlindsT6	N	Y
Ebode	Y	Y	Y	X10	Y	Y
Electrisave	Y	Y	Y	Oregon	Y	-
ELRO AB400 - <a href="http://www.elro.eu/en/products/cat/home-automation/home-control1">http://www.elro.eu/en/products/cat/home-automation/home-control1</a>	Y	Y	Y	Lighting4	Y	Y
ELRO AB600	Y	Y	Y	ARC	Y	Y
Ematronic RF01, AC114, AC123 - <a href="http://www.ematronic.com/moteurs-violet-roulant/">http://www.ematronic.com/moteurs-violet-roulant/</a>	Y	Y	-	BlindsT1	Y	Y
Energenie - <a href="https://energenie4u.co.uk/">https://energenie4u.co.uk/</a> - ENER010 – 429.935, 5-gang 429.950	Y	Y	Y	Lighting1 Energenie Energenie5	N	Y
Envivo – Chime ENV1348	-	-	Y	Chime Envivo	N	Y
ESMO blind motors	Y	Y	Y	BlindsT6	N	Y
Etekcity – <a href="http://etekcity.com/p-300-5-pack-wireless-remote-control-outlet-switch-set-with-2-remote-controls-zap-5lx.aspx">http://etekcity.com/p-300-5-pack-wireless-remote-control-outlet-switch-set-with-2-remote-controls-zap-5lx.aspx</a>	Y	Y	Y	Lighting1 Energenie5	N	Y
Eurodomest (NL – Action) * ARC only	Y*	Y	Y*	Lighting1 ARC Or Lighting5 Eurodomest	N	Y
Everflourish EMW100	Y	Y	Y		N	Y
Flamingo	Y	Y	Y	Lighting4	Y	Y
Flamingo KD101 smoke detector	Y	Y	Y	always on	Y	Y
Forest blind/curtain motors - <a href="http://www.forestgroup.nl/index_nl.html">http://www.forestgroup.nl/index_nl.html</a>	Y	Y	Y	BlindsT7	N	Y
Harrison curtain - <a href="http://www.harrison.nl/home2.htm">http://www.harrison.nl/home2.htm</a>	Y	Y	Y	Curtain Harrison	N	Y
Hasta new blind motors - <a href="http://www.hasta.se/">http://www.hasta.se/</a> * = receive only in Type2 used to get the remote ID.	Y	Y	Y	BlindsT0	Y*	Y
Hasta old blind motors	Y	Y	-	BlindsT1	Y	Y
Hideki weather sensors	Y	Y	Y	Hideki	-	-
Home Confort - <a href="http://www.home-confort.net/en">http://www.home-confort.net/en</a>	-	-	Y	HomeConfort	Y	Y
HomeEasy EU (learning mode) - <a href="http://www.elro.eu/en/products/cat/home-automation/">http://www.elro.eu/en/products/cat/home-automation/</a>	Y	Y	Y	HE EU	Y	Y
HomeEasy UK – HE105 - <a href="http://www.homeeasy.eu/">http://www.homeeasy.eu/</a>	Y	Y	Y	Thermostat2 HE105	N	Y
HomeEasy UK (learning mode)	Y	Y	Y	AC	Y	Y
HomeEasy UK (with address code wheels)	Y	Y	Y	ARC	Y	Y
Honeywell - TF-ATS34C	Y	Y	Y	Hideki	-	-
Ikea Koppla	Y	-	-	Lighting3	N	Y
Impuls (NL – Action)	Y	Y	Y	Lighting1 Impuls	N	Y
Inovalley SM80 with plant probes - <a href="http://www.inovalley.com/detail.php?item_id=289">http://www.inovalley.com/detail.php?item_id=289</a>	-	-	Y	Rubicson	Y	-
Intertechno (learning mode) - <a href="http://www.intertechno.at/">http://www.intertechno.at/</a>	Y	Y	Y	AC	Y	Y
Intertechno (with address code wheels)	Y	Y	Y	ARC	Y	Y

JVS screens - <a href="http://www.screen-discount.nl/">http://www.screen-discount.nl/</a>	Y	Y	Y	BlindsT6	N	Y
Kambrook RF3672 – <a href="http://www.bunnings.com.au/kambrook-4-piece-indoor-powerpoint-kit-with-remote-control_p7030054">http://www.bunnings.com.au/kambrook-4-piece-indoor-powerpoint-kit-with-remote-control_p7030054</a>	-	Y	Y	Lighting2 Kambrook	N	Y
Kingpin KP100 projection screen	Y	Y	Y	Lighting4	N	Y
KlikAanKlikUit (learning mode) - <a href="http://www.klikaanklikuit.nl/home/">http://www.klikaanklikuit.nl/home/</a>	Y	Y	Y	AC	Y	Y
KlikAanKlikUit (with address code wheels)	Y	Y	Y	ARC	Y	Y
La Crosse - TX2, TX3, TX3P, TX4, TX7, TX17, WS2300	Y	Y	Y	LaCrosse	Y	-
Legrand CAD radio	-	-	Y	Lighting5 LeGrand CAD	N	Y
Lexibook - SM883	Y	Y	Y	Hideki	Y	-
LightwaveRF - <a href="http://www.lightwaverf.co.uk/">http://www.lightwaverf.co.uk/</a>	Y	Y	Y	AD	Y	Y
Livolo	Y	Y	Y	Lighting5 Livolo	N	Y
- <a href="http://www.livolonederland.nl/">http://www.livolonederland.nl/</a> - <a href="http://www.livolo-France.com/fr/">http://www.livolo-France.com/fr/</a> - <a href="http://nl.aliexpress.com/w/wholesale-livolo-touch-switch.html">http://nl.aliexpress.com/w/wholesale-livolo-touch-switch.html</a>	Y	Y	Y	Lighting5 Livolo	N	Y
Louvolute one touch motorised blinds * = receive only in Type2 used to get the remote ID.	Y	Y	Y	BlindsT0	Y*	Y
Lucci Air fan – <a href="http://www.lucciair.com/">http://www.lucciair.com/</a>	-	-	Y	Fan LucciAir	N	Y
Luxaflex - <a href="http://www.luxaflex.se/produkter/luxaflex/rullgardiner/">http://www.luxaflex.se/produkter/luxaflex/rullgardiner/</a>	-	-	Y	RFY	N	Y
Maplin <a href="http://www.maplin.co.uk/p/remote-controlled-mains-socket-set-single-n78ka">http://www.maplin.co.uk/p/remote-controlled-mains-socket-set-single-n78ka</a>	Y	Y	Y	Lighting1 COCO GDR2	N	Y
Maverick ET-732 BBQ/Smoke temperature	Y	Y	Y	Hideki	Y	-
MDremote LED dimmer - <a href="http://www.ultraleds.co.uk">www.ultraleds.co.uk</a>	Y	Y	Y	Lighting5 MDRemote	N	Y
Meade – TS33F-M, TS34C-M <a href="http://www.meade.com/products/weatherstations/sensors.html">http://www.meade.com/products/weatherstations/sensors.html</a>	Y	Y	Y	Hideki	Y	-
Meiantech security	Y	Y	Y	Meiantech	Y	Y
Media Mount Projector screen	-	Y	-	Lighting4	N	Y
Mercury appliance modules - <a href="http://mercury.avsl.com/product?range=ME5124">http://mercury.avsl.com/product?range=ME5124</a>	Y	Y	Y	Lighting1 Energenie5	N	Y
Mertik Maxitrol Fire Place controllers - G6R-H4T1, G6R-H4T5, G6R-H4T ,G6R-H4TB, G6R-H4T21-Z22	Y	Y	Y	Mertik	Y	Y
mi.sol WH2 <a href="http://www.ebay.com/itm/Transmitter-for-Wireless-Weather-Station-wireless-temperature-sensor-/121664060899">http://www.ebay.com/itm/Transmitter-for-Wireless-Weather-Station-wireless-temperature-sensor-/121664060899</a>	Y	Y	Y	FineOffset	Y	-
NEXA (learning mode) - <a href="http://www.nexa.se/">http://www.nexa.se/</a>	Y	Y	Y	AC	Y	Y
NEXA (with address code wheels)	Y	Y	Y	ARC	Y	Y
NEXA KD101 smoke detector	Y	Y	Y	always on	Y	Y
NEXUS - I008T	Y	Y	Y	Hideki	Y	-
Opus XT300 /Imagintronix Soil sensor <a href="http://www.plantcaretools.com/en/webshop/wireless-moisture-sensor-en-detail">http://www.plantcaretools.com/en/webshop/wireless-moisture-sensor-en-detail</a> <a href="http://www.ebay.co.uk/itm/Wireless-Soil-Moisture-Sensor-/251380900939?pt=UK_Home_Garden_Garden_Plants_Fertiliser_CV&amp;hash=item3a8778244b">http://www.ebay.co.uk/itm/Wireless-Soil-Moisture-Sensor-/251380900939?pt=UK_Home_Garden_Garden_Plants_Fertiliser_CV&amp;hash=item3a8778244b</a>	Y	Y	Y	XT300	Y	-
Oregon Scientific / Huger BBQ and weather sensors - AW129, AW131, BTHGN129, BTHR918, BTHR918N, BTHR968, EW109, PCR800, RGR126, RGR682, RGR918, RGR928, RTGN318, RTGR328N, RTGR328N, RTGR368N, RTGR383, RTHN318, STR918, STR928, ,TGHN800, TGHN801, THC138, THC238, THC268, THGN122NX, THGN123N, THGN132ES, THGN132N, THGN500, THGR122(N/NX), THGR228(N/NF), THGR238, THGR268, THGR328N, THGR810, THGR918, THGR928, THGRN228NX, THN122N, THN132N, THR128, THR138, THR288(N/NF), THRN122N, THWR288A, THWR800, UV138, UVN128, UVN800, UVR128, WGR800, WGR918, WTGR800, WTGR800	Y	Y	Y	Oregon	Y	-
Oregon Scientific weighting scales - BWR101, BWR102, GR101	Y	-	-	Oregon	Y	-
Oregon MSR939 <a href="https://www.redealer.de/multimedia/home-living/wetterstationen/bewegungssensor-msr939/a-200667/">https://www.redealer.de/multimedia/home-living/wetterstationen/bewegungssensor-msr939/a-200667/</a>	-	-	Y	Oregon	Y	-
OTIO Lighting	Y	Y	-	RSL	Y	Y

OWL - <a href="http://www.theowl.com/">http://www.theowl.com/</a> - CM113, CM119, CM160, CM180, CM180i	Y	Y	Y	Oregon	Y	-
Phenix	Y	Y	Y	Lighting4	Y	Y
Philips SBC SP370 series	-	Y	-	Lighting1 Philips SBC	N	Y
Prego P-8426 <a href="http://www.sunmarket.fi/tuote.asp?TID=11990">http://www.sunmarket.fi/tuote.asp?TID=11990</a>	Y	Y	Y	X10	Y	-
Proluxx projection screen	Y	Y	Y	Lighting4	N	Y
Proove –TSS320 & TSS330 fridge/freezer thermometer & outdoor sensors 311346,311501	Y	Y	Y	FineOffset or Rubicson	Y	-
Quotidom - <a href="http://www.quotidom.com/moteur-tubulaire-radio-quotidom-10-ou-20-nm-volet-roulant-ou-store-banne.html">http://www.quotidom.com/moteur-tubulaire-radio-quotidom-10-ou-20-nm-volet-roulant-ou-store-banne.html</a>	Y	Y	Y	BlindsT6	N	Y
RAEX blind motor (YR1326 controlled)	-	Y	-	BlindsT1	Y	Y
Revolt NC5461 - <a href="http://www.pearl.de/a-NC5462-5452.shtml">http://www.pearl.de/a-NC5462-5452.shtml</a>	-	Y	-	RSL	Y	-
RFXSensor	Y	Y	Y	X10	Y	-
RFXMeter	Y	Y	Y	X10	Y	-
RGB LED strip driver dx.com - <a href="http://www.dx.com/">http://www.dx.com/</a> order nbr: 130913, (new TRC02 NOT supported) - <a href="http://www.dx.com/">http://www.dx.com/</a> order nbr: 67412 * = receive only in Type2 used to get the RGB remote ID.	Y*	Y	y*	AD	Y*	Y
RGB LED controller <a href="http://www.ebay.com/itm/191481664563">http://www.ebay.com/itm/191481664563</a> (maybe dx.com 227892)	Y	Y	Y	Lighting5 RGB432W	N	Y
RisingSun	Y	Y	Y	Lighting4	Y	Y
RUBiCSOn - stektermometer 48659, 48695 -pool sensor p48019	Y	-	Y	Rubicson	Y	-
RohrMotor24 RMF blind motors - <a href="http://www.rohrmotor24.eu/rohrmotor24">http://www.rohrmotor24.eu/rohrmotor24</a>	Y	Y	Y	BlindsT6	N	Y
RollerTrol blind motors - <a href="http://rollertrol.com/">http://rollertrol.com/</a> * = receive only in Type2 used to get the remote ID.	Y	Y	Y	BlindsT0	Y*	Y
Sartano	Y	Y	Y	Lighting4	Y	Y
SelectPlus200689101 & SelectPlus200689103 (Action NL)	-	Y	Y	ByronSX	Y	Y
Siemens SF01 LF959RA50/LF259RB50/LF959RB50 extractor hood	Y	Y	Y	Fan SF01	N	Y
Siemens (UK)	Y	Y	Y	AD	Y	Y
Simu / RTS (RFXtrx433E only) - <a href="http://www.simu.com/">http://www.simu.com/</a>	-	-	Y	RFY	N	Y
Smartwares radiator valve - <a href="http://www.homewizard.nl/smartwares-draadloze-radiatorkraan.html">http://www.homewizard.nl/smartwares-draadloze-radiatorkraan.html</a>	-	-	Y	Radiator1 Smartwares	N	Y
Somfy / RTS - <a href="http://www.somfy.co.uk/">http://www.somfy.co.uk/</a>	-	-	Y	RFY	N	Y
Sunpury blind motors	-	Y	-	BlindsT9	N	Y
Sunvic TLX1206	Y	Y	Y	X10	Y	Y
Sunvic TLX7506	Y	Y	Y	X10	Y	-
TechnoLine/Proficell <a href="http://www.elv.de/output/controller.aspx?cid=74&amp;detail=10&amp;detail2=27621">http://www.elv.de/output/controller.aspx?cid=74&amp;detail=10&amp;detail2=27621</a> - TX95-TH	Y	Y	Y	Hideki	Y	-
TFA - TS15C, TS34C, external temperature sensor 30.3133, anemometer 30.3149, UV sensor, rain sensor 30.3148, pool sensor 30.3160	Y	Y	Y	Hideki	Y	-
UPM/Esic (very short receiving range) - WT260,WT260H,WT440H,WT450,WT450H,WDS500,RG700	Y	-	-	Hideki	Y	-
Viking - 02035, 02038, 02811	Y	Y	Y	FineOffset	Y	-
Visonic CodeSecure	Y	Y	Y	Visonic	Y	-
Visonic PowerCode	Y	Y	Y	Visonic	Y	Y
Wave Design extractor hood	Y	Y	Y	Fan SF01	N	Y
Waveman	Y	Y	Y	Lighting1 Waveman	N	Y
WT0122 pool sensor	-	-	Y	FineOffset	Y	-

	Y	Y	Y	BlindsT6	N	Y
YOODA blind motors - <a href="http://www.sukcesgroup.pl">http://www.sukcesgroup.pl</a>	-	Y	-	X10	Y	Y
X10 Ninja/Robocam	Y	-	-	X10	Y	Y
X10 PC Remote	Y	Y	Y	X10	Y	Y
X10 RTS10 / RFS10	Y	Y	Y	X10	Y	Y
X10 lighting	Y	Y	Y	X10	Y	Y
X10 security	Y	Y	Y	X10	Y	Y
Xdom	Y	Y	Y	X10	Y	Y
Xiron – EN6	Y	-	Y	Rubicson	Y	-

### 2.3. Undec on

Ce paramètre est pour une utilisation interne par RFXCOM!!!

Si un nouveau type de capteur apparaît, il ne sera peut-être pas décodé par le firmware du RFXtrx. C'est pour cette raison qu'il y a un mode permettant d'afficher les messages reçus, mais non décodé.

Cela permet d'afficher les trames reçus par le RFXtrx pour permettre à RFXCOM de les ajouter ensuite dans les prochains firmware.

Si le mode Undec on est actif, l'application va recevoir un grand nombre de messages liés pour la plupart à des trames incorrectes ou des informations mal décodées.

Il est donc important de désactiver l'option "undec on" pour une utilisation courante du produit.

## 2.4. Influence des protocoles activés sur la sensibilité.

La sensibilité du récepteur est très sensible au nombre de protocoles activés. Moins le nombre de protocoles activés est important, plus la sensibilité est grande.

Certains protocoles réduisent fortement, voire inhibent les autres protocoles qui sont proches. Par exemple le protocole AD (LightwaveRF, Siemens) peut perturber de manière significative la réception des protocoles Meiantech/Atlantic, Oregon 3.0, Visonic et Mertik.

Il est conseillé de désactiver les protocoles que vous ne souhaitez pas utiliser afin de maximiser les performances de réception.


Voici un tableau décrivant les protocoles susceptibles de se perturber :

	X10	ARC	AC	HomeEasy EU	Meiantech/Atlantic	Oregon 1.0	Oregon 2.1	Oregon 3.0 / OWL	ATI	Visonic/Keeloq	Mertik	AD (LWRF)	Hideki/UPM	La Crosse	FS20	ProGuard	BlindsT0	BlindsT1/T2/T3/T4	AE (Blyss)	Rubicson/Alecto	FineOffset/Viking	Lighting4	RSL/Revolt	Byron SX	Imagintronix/Opus	HomeConfort
X10																										
ARC																										
AC																										
HomeEasy EU																										
Meiantech/Atlantic																										
Oregon																										
ATI																										
Visonic/Keeloq																										
Mertik																										
AD (LWRF)																										
Hideki/UPM																										
La Crosse																										
FS20																										
ProGuard																										
BlindsT0																										
BlindsT1/T2/T3																										
AE (Blyss)																										
Rubicson																										
FineOffset/Viking																										
Lighting4																										
RSL																										
Byron SX																										
Imagintronix																										
HomeConfort																										

Verte = enabled by default

## 2.5. RF range reduction

The RF signals operating distance is reduced when the signal has to pass through walls.

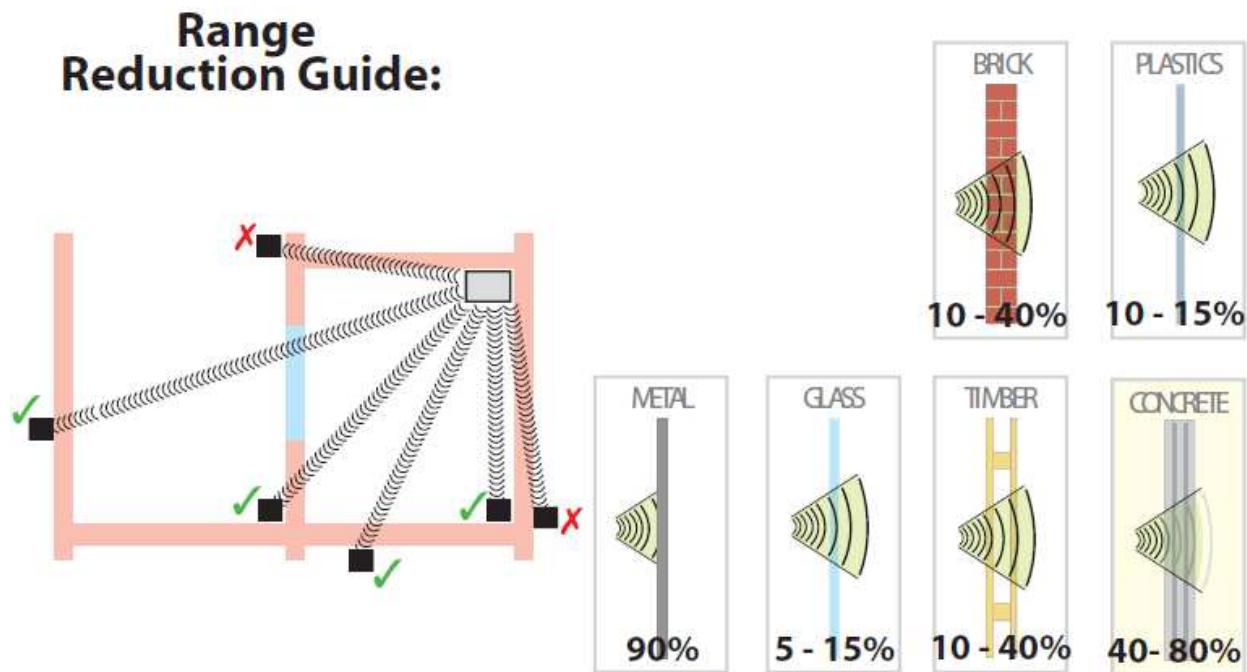

## 2.6. Logiciels domotique compatibles

La liste des logiciels compatibles avec le RFXtrx est disponible sur [www.rfxcom.com](http://www.rfxcom.com)

## 2.7. Dimensions

Les dimensions du RFXtrx : 83.5 x 42 x 15 mm

La hauteur totale en incluant l'antenne est : 122mm

Les dimensions du RFXtrx433E : 83 x 59 x 22 mm

La hauteur totale en incluant l'antenne est : 130mm

## 2.8. Electrical

Le RFXtrx est alimenté par les 5 Volt de l'interface USB.

Courant consommé :

Receive mode: 28 mA (0.14Watt)

Transmit mode: 45 mA

The RFXtrx Radiated RF power is 10dBm max.

## 2.9. Condition d'utilisation

Température normal : 15°C à 35°C

Température extrême : -10°C à 55°C

### **3. Installation du driver USB**

Le RFXtrx dispose du l'interface USB avec chipset FTDI FT232R.

Le driver est disponible sur le site FTDI : <http://www.ftdichip.com/Drivers/VCP.htm>

### **4. Lancement du programme RFXflash sous Linux avec Mono**

Lancer un terminal Linux (Ctrl-Alt-T)

Exécuter les commandes suivantes au moins une fois (si mono n'est pas installé) :

*Installer Mono:*

[sudo] **apt-get install mono-runtime**

*Installer la librairie VisualBasic :*

[sudo] **apt-get install libmono-microsoft-visualbasic8.0-cil**

Si le périphérique USB est détecté sous la forme /dev/ttyACMx, vous devez créer un lien symbolique vers un port série virtuel /dev/ttysx.

Cela n'est pas nécessaire si le périphérique est directement créé sous la forme /dev/ttyUSBx !!

[sudo] **ln -sf /dev/ttyACM1 /dev/ttys3**

Note : Les crochets [] indique que sudo est facultatif. Vous devez utiliser sudo (sans crochet) uniquement si vous utilisez un compte qui n'est pas super utilisateur (root).

*Lancer le program RFXflash :*


[sudo] **mono RFXflash.exe**

Remarque: RFXmngr ne fonctionne pas sous mono!

## 5. Programme de test RFXmngr

L'application RFXmngr permet le décodage des trames reçues et l'émission de commande dans les différents protocoles supportés par le RFXCOM.

Lors de la connexion du RFXtrx, l'application RFXmngr émet automatiquement un Reset suivi d'une commande Get Status qui permet de lire les paramètres courants du module RFXtrx.

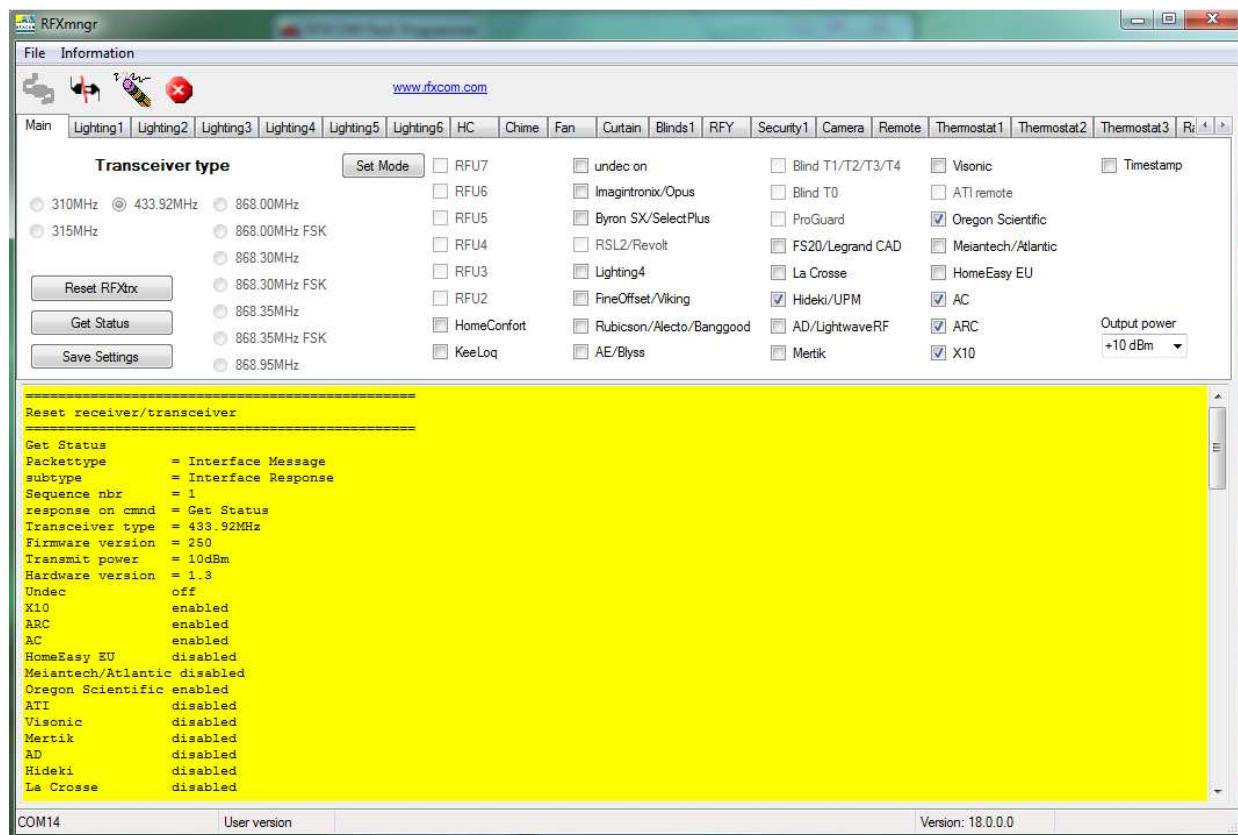

Tous les protocoles sont toujours actifs en transmission. En réception par contre, il est possible de désactiver certains protocoles.

Moins le nombre de protocole activé est important et plus la sensibilité est accrue.  
Il est donc conseillé de n'activer que les protocoles que vous utilisez réellement.

A noter que ces paramètres sont remis à zéro lors d'une mise à jour de firmware Type1 ou Type2.


## 5.1. Récepteur

Les protocoles radio qui sont autorisés pour la réception doivent être configurés dans l'onglet « Main »

Cliquez sur le bouton « Save Settings » afin d'enregistrer la configuration courante dans la mémoire non volatile du RFXtrx, elle sera ainsi rechargée même après un redémarrage du module.

Ces paramètres sont automatiquement effacés lors de la mise à jour du firmware.

Les données reçues par le RFXtrx sont décodées et affichées dans la fenêtre jaune :

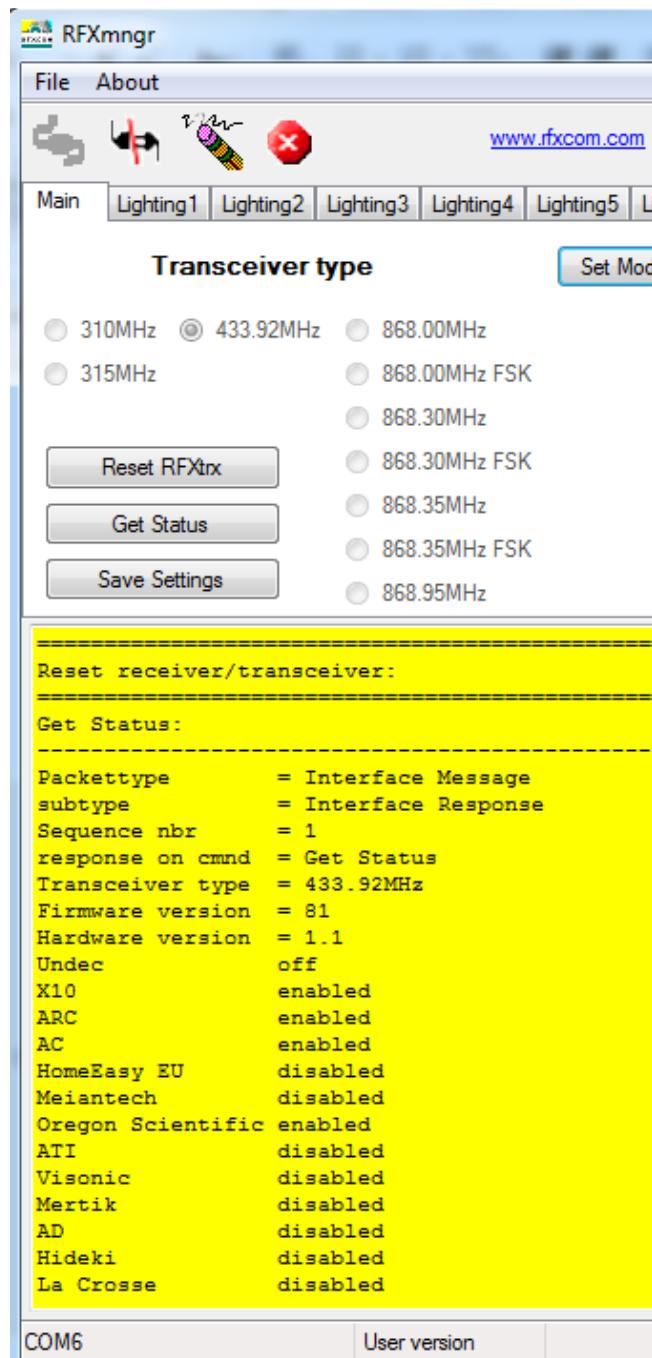


## 5.2. Emetteur

Les différents onglets à la suite de l'onglet « Main » permettent d'émettre des commandes dans les différents protocoles supportés par le RFXtrx.

Les protocoles sont regroupés suivant la configuration qui leur est nécessaire.  
Par exemple, Lighting1 est utilisée pour émettre en X10, ARC, etc...

Il faut se reporter à la documentation du SDK pour avoir une liste complète des protocoles pour chaque onglet.

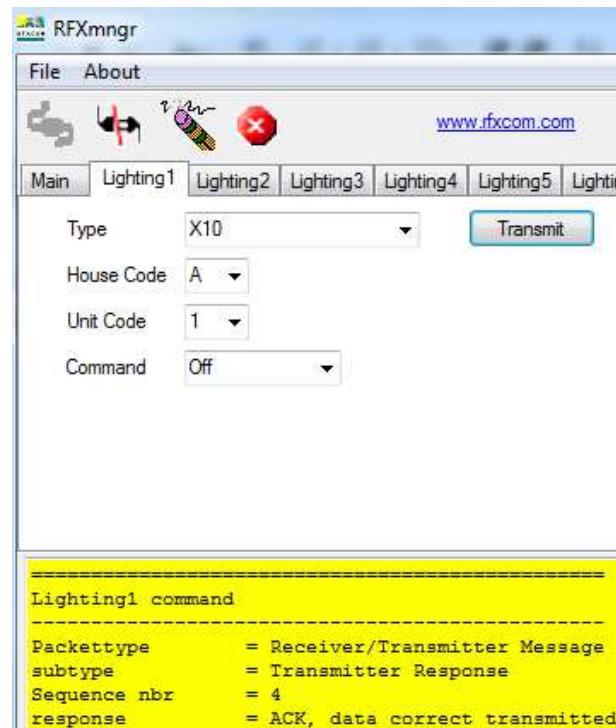

Les commandes émises sont affichées dans la fenêtre jaune.

L'acquittement renvoyé par le RFXtrx est aussi affiché.

Dans l'exemple, L'acquittement ACK indique que les données ont été transmises correctement.

## 6. Mise à jour du RFXtrx

### 6.1. Mise à jour du firmware RFXtrx

Le Firmware du RFXtrx433 peut être mis jour en utilisant la procédure suivante :

1. Télécharger la dernière version du firmware: RFXtrx315\_yy.hex, :RFXrec433\_yy.hex ou RFXtrx433\_yy.hex.
2. Connecter le RFXtrx sur un PC Windows ou Linux (avec MONO)
3. Arrêter toute application utilisant le RFXtrx
4. Démarrer le programme de mise à jour (RFXflash version 4.0.0.0 minimum).
5. Sélectionner le port COM ou TCP/IP port correspondant à votre RFXtrx dans le logiciel RFXflash et cliquer sur le bouton « CONNECT »,  
(La LED rouge doit s'allumer)
6. Charger le fichier .hex correspondant au firmware,
7. Cliquer sur le bouton WRITE,
8. Cliquer sur le bouton « Normal Execution Mode ».

#### IMPORTANT:

1. Ne jamais interrompre la procédure de flash une fois qu'elle a démarrée.
2. Il est possible que vous ayez une boîte de dialogue indiquant qu'il y a eu une erreur.  
Dans ce cas, déconnecter et reconnecter le RFXtrx, puis reprendre à l'étape 5 ci-dessus jusqu'à ce que la procédure se déroule correctement.


Si la LED rouge ne s'allume pas lorsque vous cliquez sur le bouton Connect :

1. Vérifiez que vous avez choisi le bon port COM USB.
2. Si vous avez flashé le RFXtrx et que la procédure c'est mal passée, il est possible que le module soit dans un état qui ne permet plus de le mettre à jour. Dans ce cas, contactez directement le support RFXCOM : [support@rfxcom.com](mailto:support@rfxcom.com).

**Note:** Les paramètres du RFXtrx seront automatiquement écrasés lors d'une mise à jour de firmware (Type1/Type2) et devront être reconfigurés.


## 6.2. Mise à jour du firmware RFXtrx pas à pas

- Cliquer sur le bouton *Connect to Device* :

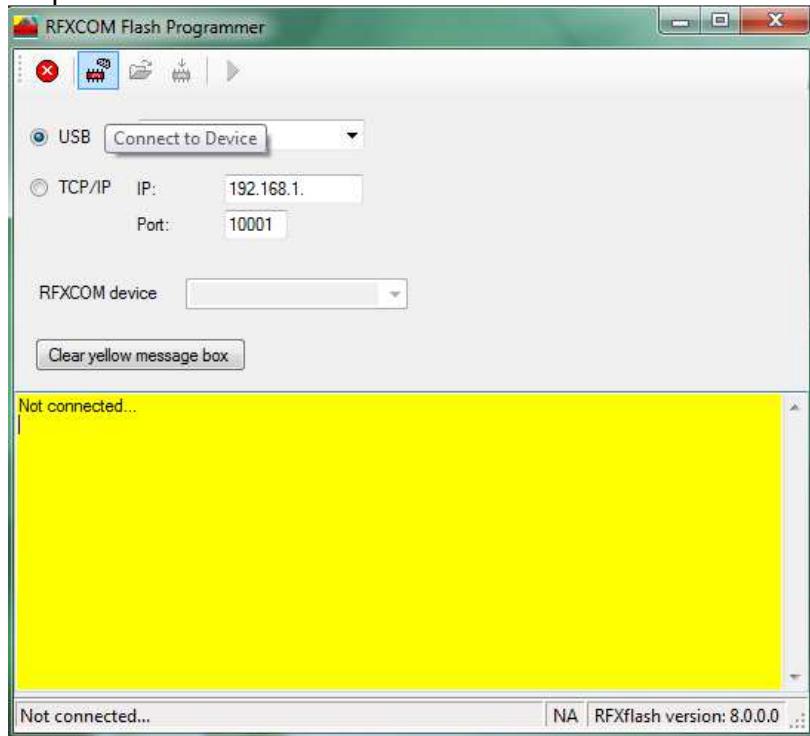


Le RFXtrx va automatiquement basculer en mode Mise à jour.  
Si le bootloader n'est pas chargé (mode mise à jour), consultez le paragraphe « forcer le bootloader ».


- Cliquer le bouton *Open HEX file* et charger le fichier RFXtrxyyy\_xx.hex  
Prenez bien attention à toujours charger le dernier firmware disponible.  
**yyy** correspond à la fréquence RFXtrx433 pour un module RFXtrx433!  
**xx** correspond à la version du firmware.

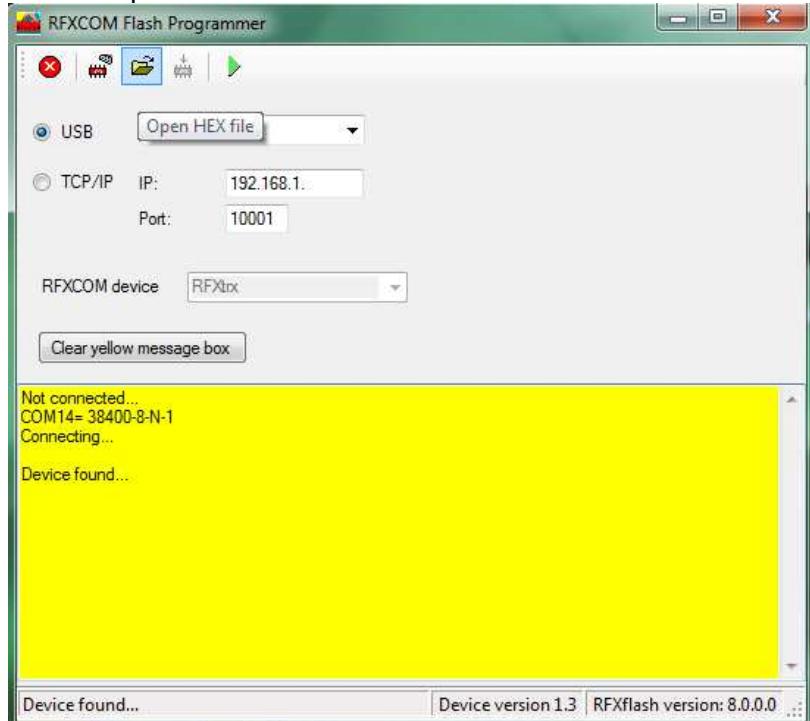

- Cliquez sur le bouton « Write device button » pour flasher le RFXtrx.

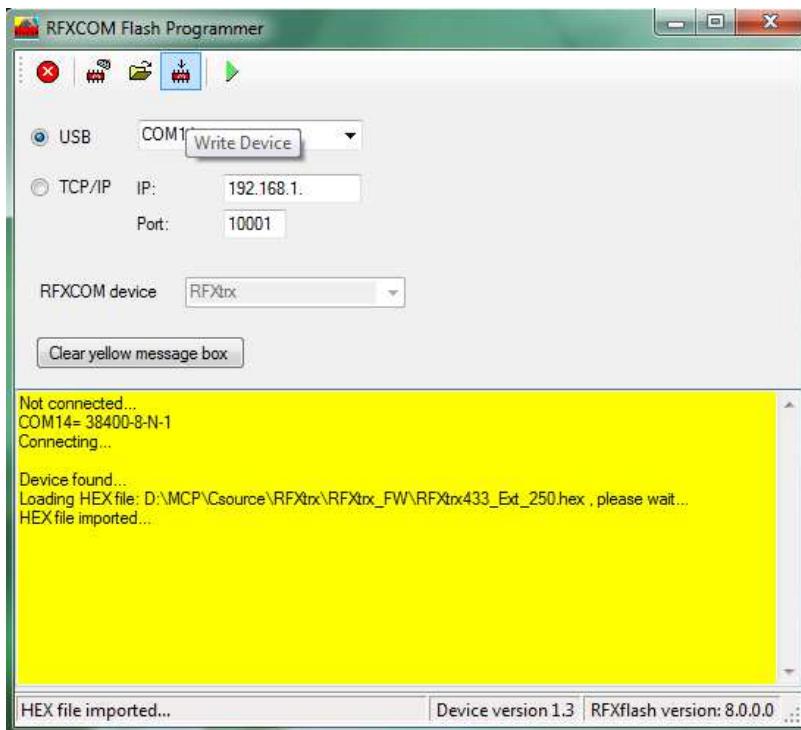

- Cliquez sur le bouton « Normal Execution Mode » pour passer le RFXtrx en mode exécution.

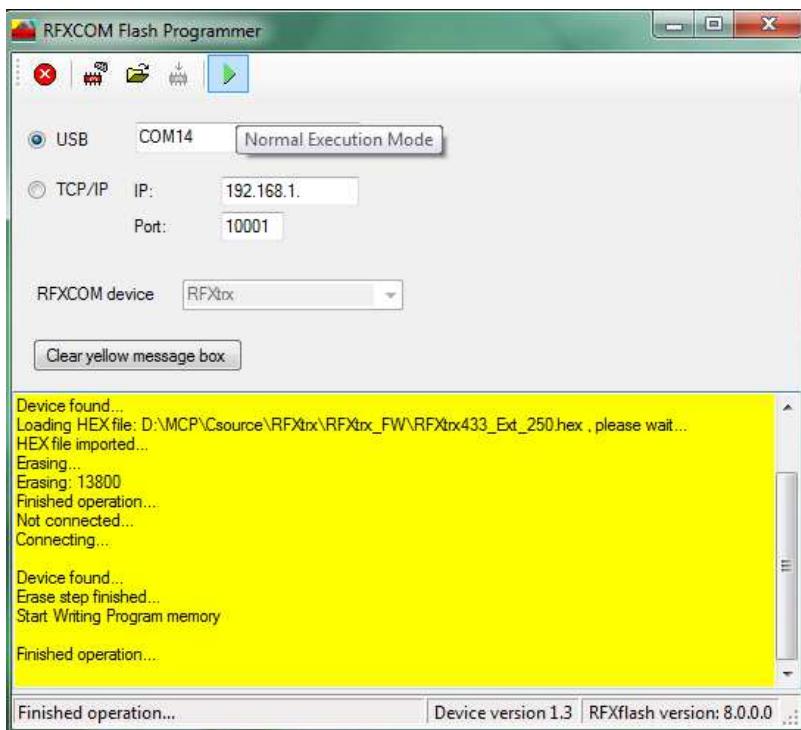

**Note:** Les paramètres du RFXtrx seront automatiquement écrasés lors d'une mise à jour de firmware (Type1/Type2) et devront être reconfigurés.

## 7. RFXtrx433 Code tables

### 7.1. Remote commands

#### 7.1.1. X10 RF Remote

Dec	Hex	Button
2	02	0
18	12	8
34	22	4
56	38	Rewind
58	3A	Info
64	40	CHAN+
66	42	2
82	52	Ent
96	60	VOL+
98	62	6
99	63	Stop
100	64	Pause
112	70	Cursor-left
113	71	Cursor-right
114	72	Cursor-up
115	73	Cursor-down
116	74	Cursor-up-left
117	75	Cursor-up-right
118	76	Cursor-down-right
119	77	Cursor-down-left
120	78	left mouse
121	79	left mouse-End
123	7B	Drag
124	7C	right mouse
125	7D	right mouse-End
130	82	1
146	92	9
160	A0	MUTE
162	A2	5
176	B0	Play
182	B6	Menu
184	B8	Fast Forward
186	BA	A+B
192	C0	CHAN-
194	C2	3
201	C9	Exit
209	D1	MP3
210	D2	DVD
211	D3	CD
212	D4	PC / Shift-4
213	D5	Shift-5
214	D6	Shift-Ent
215	D7	Shift-Teletext
216	D8	Text
217	D9	Shift-Text
224	E0	VOL-
226	E2	7
242	F2	Teletext
255	FF	Record

## 7.1.2. ATI Remote Wonder

Dec	Hex	Button	56	38	edit image
0	00	A	57	39	Full screen
1	01	B	58	3A	DVD Audio
2	02	power	112	70	Cursor-left
3	03	TV	113	71	Cursor-right
4	04	DVD	114	72	Cursor-up
5	05	?	115	73	Cursor-down
6	06	Guide	116	74	Cursor-up-left
7	07	Drag	117	75	Cursor-up-right
8	08	VOL+	118	76	Cursor-down-right
9	09	VOL-	119	77	Cursor-down-left
10	0A	MUTE	120	78	V
11	0B	CHAN+	121	79	V-End
12	0C	CHAN-	124	7C	X
13	0D	1	125	7D	X-End
14	0E	2			
15	0F	3			
16	10	4			
17	11	5			
18	12	6			
19	13	7			
20	14	8			
21	15	9			
22	16	txt			
23	17	0			
24	18	snapshot ESC			
25	19	C			
26	1A	^			
27	1B	D			
28	1C	TV/RADIO			
29	1D	<			
30	1E	OK			
31	1F	>			
32	20	<-			
33	21	E			
34	22	v			
35	23	F			
36	24	Rewind			
37	25	Play			
38	26	Fast forward			
39	27	Record			
40	28	Stop			
41	29	Pause			
44	2C	TV			
45	2D	VCR			
46	2E	RADIO			
47	2F	TV Preview			
48	30	Channel list			
49	31	Video Desktop			
50	32	red			
51	33	green			
52	34	yellow			
53	35	blue			
54	36	rename TAB			
55	37	Acquire image			

### 7.1.3. ATI Remote Wonder Plus

Dec	Hex	Button				F
0	00	A	35	23		Rewind
1	01	B	36	24		Play
2	02	power	37	25		Fast forward
3	03	TV	38	26		Record
4	04	DVD	39	27		Stop
5	05	?	40	28		Pause
6	06	Guide	41	29		TV2
7	07	Drag	42	2A		Clock
8	08	VOL+	43	2B		TV
9	09	VOL-	44	2C		VCR
10	0A	MUTE	45	2D		RADIO
11	0B	CHAN+	46	2E		TV Preview
12	0C	CHAN-	47	2F		Channel list
13	0D	1	48	30		Video Desktop
14	0E	2	49	31		red
15	0F	3	50	32		green
16	10	4	51	33		yellow
17	11	5	52	34		blue
18	12	6	53	35		rename TAB
19	13	7	54	36		Acquire image
20	14	8	55	37		edit image
21	15	9	56	38		Full screen
22	16	txt	57	39		DVD Audio
23	17	0	58	3A		Cursor-left
24	18	Open Setup Menu	112	70		Cursor-right
25	19	C	113	71		Cursor-up
26	1A	^	114	72		Cursor-down
27	1B	D	115	73		Cursor-up-left
28	1C	FM	116	74		Cursor-up-right
29	1D	<	117	75		Cursor-down-right
30	1E	OK	118	76		Cursor-down-left
31	1F	>	119	77		Left Mouse Button
32	20	Max/Restore Window	120	78		V-End
33	21	E	121	79		Right Mouse Button
34	22	v	124	7C		X-End
			125	7D		

### 7.1.4. Medion Remote

Dec	Hex	Button		54	36	rename TAB
0	00	Mute		55	37	Acquire image
1	01	B		56	38	edit image
2	02	power		57	39	Full screen
3	03	TV		58	3A	DVD Audio
4	04	DVD		112	70	Cursor-left
5	05	Photo		113	71	Cursor-right
6	06	Music		114	72	Cursor-up
7	07	Drag		115	73	Cursor-down
8	08	VOL-		116	74	Cursor-up-left
9	09	VOL+		117	75	Cursor-up-right
10	0A	MUTE		118	76	Cursor-down-right
11	0B	CHAN+		119	77	Cursor-down-left
12	0C	CHAN-		120	78	V
13	0D	1		121	79	V-End
14	0E	2		124	7C	X
15	0F	3		125	7D	X-End
16	10	4				
17	11	5				
18	12	6				
19	13	7				
20	14	8				
21	15	9				
22	16	txt				
23	17	0				
24	18	snapshot ESC				
25	19	DVD MENU				
26	1A	^				
27	1B	Setup				
28	1C	TV/RADIO				
29	1D	<				
30	1E	OK				
31	1F	>				
32	20	<-				
33	21	E				
34	22	v				
35	23	F				
36	24	Rewind				
37	25	Play				
38	26	Fast forward				
39	27	Record				
40	28	Stop				
41	29	Pause				
44	2C	TV				
45	2D	VCR				
46	2E	RADIO				
47	2F	TV Preview				
48	30	Channel list				
49	31	Video Desktop				
50	32	red				
51	33	green				
52	34	yellow				
53	35	blue				

## **7.2. Harrison address conversion to switch settings**

The address used is converted to the address selected in the Harrison curtain motor using the table below.

switch	1	2	3	4		5	6	7	8
	H	H	H	H		X	X	X	X
A	0	1	1	0		1	0	0	0
B	0	1	1	1		2	0	0	0
C	0	1	0	0		3	0	0	1
D	0	1	0	1		4	0	0	1
E	1	0	0	0		5	0	1	0
F	1	0	0	1		6	0	1	0
G	1	0	1	0		7	0	1	1
H	1	0	1	1		8	0	1	1
I	1	1	1	0		9	1	0	0
J	1	1	1	1		10	1	0	0
K	1	1	0	0		11	1	0	1
L	1	1	0	1		12	1	0	1
M	0	0	0	0		13	1	1	0
N	0	0	0	1		14	1	1	0
O	0	0	1	0		15	1	1	1
P	0	0	1	1		16	1	1	1

H H H H = House code

X X X X = device code

Switch position in the motor:

Up = 1

Middle = not used!!!!

Down = 0

Examples:

If you assign the address E7 (1000 0110) to the curtain motor then set the switches to: 1=up, 2=down, 3=down, 4=down, 5=down, 6=up, 7=up, 8=down

If you assign the address A2 (0110 0001) to the curtain motor then set the switches to: 1=down, 2=up, 3=up, 4=down, 5=down, 6=down, 7=down, 8=up

### **7.3. Flamingo, AB400, IMPULS, Sartano, Brennenstuhl switch settings**

Utiliser ELRO AB400D

Remarque : Le code HC (House Code A-P) correspond au code maison utilisé dans l'application, et n'a aucune relation avec les codes A, B, C, D, E correspondant aux boutons des télécommandes.

```
1 2 3 4    <== switches
HC=====
A 0 0 0 0
B 0 0 0 1
C 0 0 1 0
D 0 0 1 1
E 0 1 0 0
F 0 1 0 1
G 0 1 1 0
H 0 1 1 1
I 1 0 0 0
J 1 0 0 1
K 1 0 1 0
L 1 0 1 1
M 1 1 0 0
N 1 1 0 1
O 1 1 1 0
P 1 1 1 1

      5 A B C D E      5 A B C D E    <== switches
      5 6 7 8 9 10      5 6 7 8 9 10    <== OR switches
DC=====DC=====
1 0 0 0 0 0 0 33 0 0 0 0 0 1
2 0 0 0 1 0 0 34 0 0 0 1 0 1
3 0 0 1 0 0 0 35 0 0 1 0 0 1
4 0 0 1 1 0 0 36 0 0 1 1 0 1
5 0 1 0 0 0 0 37 0 1 0 0 0 1
6 0 1 0 1 0 0 38 0 1 0 1 0 1
7 0 1 1 0 0 0 39 0 1 1 0 0 1
8 0 1 1 1 0 0 40 0 1 1 1 0 1
9 1 0 0 0 0 0 41 1 0 0 0 0 1
10 1 0 0 1 0 0 42 1 0 0 1 0 1
11 1 0 1 0 0 0 43 1 0 1 0 0 1
12 1 0 1 1 0 0 44 1 0 1 1 0 1
13 1 1 0 0 0 0 45 1 1 0 0 0 1
14 1 1 0 1 0 0 46 1 1 0 1 0 1
15 1 1 1 0 0 0 47 1 1 1 0 0 1
16 1 1 1 1 0 0 48 1 1 1 1 0 1
17 0 0 0 0 1 0 49 0 0 0 0 1 1
18 0 0 0 1 1 0 50 0 0 0 1 1 1
19 0 0 1 0 1 0 51 0 0 1 0 1 1
20 0 0 1 1 1 0 52 0 0 1 1 1 1
21 0 1 0 0 1 0 53 0 1 0 0 1 1
22 0 1 0 1 1 0 54 0 1 0 1 1 1
23 0 1 1 0 1 0 55 0 1 1 0 1 1
24 0 1 1 1 1 0 56 0 1 1 1 1 1
25 1 0 0 0 1 0 57 1 0 0 0 1 1
26 1 0 0 1 1 0 58 1 0 0 1 1 1
27 1 0 1 0 1 0 59 1 0 1 0 1 1
28 1 0 1 1 1 0 60 1 0 1 1 1 1
29 1 1 0 0 1 0 61 1 1 0 0 1 1
30 1 1 0 1 1 0 62 1 1 0 1 1 1
31 1 1 1 0 1 0 63 1 1 1 0 1 1
32 1 1 1 1 1 0 64 1 1 1 1 1 1
```

Examples:

A1	0 0 0 0 0 0 0 0 0 0 0 0
A15	0 0 0 0 1 1 1 0 0 0
N2	1 1 0 1 0 0 0 1 0 0
N11	1 1 0 1 1 0 1 0 0 0

0 = switch off

1 = switch on

## **7.4. Energenie 5-gang 429.950**

To know the codes to use open the remote and check the 1 to 5 jumpers connected.  
If a jumper connection is open it is a 1. If connected it is a 0 (zero)

	1	2	3	4	jumper setting in the remote
HC=====					
A	0	0	0	0	
B	0	0	0	1	
C	0	0	1	0	
D	0	0	1	1	
E	0	1	0	0	
F	0	1	0	1	
G	0	1	1	0	
H	0	1	1	1	
I	1	0	0	0	
J	1	0	0	1	
K	1	0	1	0	
L	1	0	1	1	
M	1	1	0	0	
N	1	1	0	1	
O	1	1	1	0	
P	1	1	1	1	

If jumper 5 is open (1) than add 5 to the remote code.

Examples:

Button	Code
1 2 3 4 5	
1 0 0 0 0	1 I1
1 0 0 0 1	1 I6

## **7.5. Phenix, IDK YC-4000S switch settings**

Utiliser ELRO AB400D

Remarque : Le code HC (House Code A-P) correspond au code maison utilisé dans l'application, et n'a aucune relation avec les codes A, B, C, D, E correspondant aux boutons des télécommandes.

```
HC  switch
  1 2 3 4
=====
A  0 0 0 0
B  0 0 0 1
C  0 0 1 0
D  0 0 1 1
E  0 1 0 0
F  0 1 0 1
G  0 1 1 0
H  0 1 1 1
I  1 0 0 0
J  1 0 0 1
K  1 0 1 0
L  1 0 1 1
M  1 1 0 0
N  1 1 0 1
O  1 1 1 0
P  1 1 1 1

DC  switch
  5 A B C D
=====
1  0 0 0 0 0
2  0 0 0 1 0
3  0 0 1 0 0
4  0 0 1 1 0
5  0 1 0 0 0
6  0 1 0 1 0
7  0 1 1 0 0
8  0 1 1 1 0
9  1 0 0 0 0
10 1 0 0 1 0
11 1 0 1 0 0
12 1 0 1 1 0
13 1 1 0 0 0
14 1 1 0 1 0
15 1 1 1 0 0
16 1 1 1 1 0
17 0 0 0 0 1
18 0 0 0 1 1
19 0 0 1 0 1
20 0 0 1 1 1
21 0 1 0 0 1
22 0 1 0 1 1
23 0 1 1 0 1
24 0 1 1 1 1
25 1 0 0 0 1
26 1 0 0 1 1
27 1 0 1 0 1
28 1 0 1 1 1
29 1 1 0 0 1
30 1 1 0 1 1
31 1 1 1 0 1
32 1 1 1 1 1
```

## **7.6. HE105 switch settings**

Unitnr	HE105 switches
	1 2 3 4 5
0	0 0 0 0 0
1	0 0 0 0 1
2	0 0 0 1 0
3	0 0 0 1 1
4	0 0 1 0 0
5	0 0 1 0 1
6	0 0 1 1 0
7	0 0 1 1 1
8	0 1 0 0 0
9	0 1 0 0 1
10	0 1 0 1 0
11	0 1 0 1 1
12	0 1 1 0 0
13	0 1 1 0 1
14	0 1 1 1 0
15	0 1 1 1 1
16	1 0 0 0 0
17	1 0 0 0 1
18	1 0 0 1 0
19	1 0 0 1 1
20	1 0 1 0 0
21	1 0 1 0 1
22	1 0 1 1 0
23	1 0 1 1 1
24	1 1 0 0 0
25	1 1 0 0 1
26	1 1 0 1 0
27	1 1 0 1 1
28	1 1 1 0 0
29	1 1 1 0 1
30	1 1 1 1 0
31	1 1 1 1 1

## 7.7. MDREMOTE

This MDREMOTE has been tested.

<http://www.ultraleds.co.uk/mini-dimmer-with-rf-remote-control-12-or-24v-dc-12a-maximum.html>

The RFXtrx433 can only transmit MDREMOTE commands.

Procedure to find the ID of the MDREMOTE:

In RFXmngr enable the X10 protocol and enable “Undec on”

Press a button on the MDREMOTE remote.

The undecoded message contains the ID in the 2<sup>nd</sup> and 3<sup>rd</sup> byte, for example:

Packettype = UNDECODER RF Message

UNDECODER NEC:20AF6801D1

The 2 bytes after 20 is the MDREMOTE ID, in this example AF 68

## 7.8. Aoke relay

The Aoke 12V DC - 315MHz or 433.92MHz 1 channel relay is available at [www.aliexpress.com](http://www.aliexpress.com) store No.110758. Indicate clearly the required frequency when ordering!

The 1 channel learning relays can be used, see the picture below.

For example, for 1 relay:

[http://www.aliexpress.com/store/product/DC12V-1CH-wireless-switch-remote-control-system-remote-control-switch-for-guard-door-window-curtain/110758\\_936534863.html](http://www.aliexpress.com/store/product/DC12V-1CH-wireless-switch-remote-control-system-remote-control-switch-for-guard-door-window-curtain/110758_936534863.html)

or for 6 relays:

[http://www.aliexpress.com/store/product/ak-DC12V-1CH-RF-rocker-switch-livolo-switch-system-in-china-j-12a-108d-smart-house/110758\\_1007306574.html](http://www.aliexpress.com/store/product/ak-DC12V-1CH-RF-rocker-switch-livolo-switch-system-in-china-j-12a-108d-smart-house/110758_1007306574.html)

The jumper next to the learning button defines to operating mode:

Open = momentary

1-2 = toggle mode

2-3 = on/off mode (to be used with the RFXtrx)



## 8. commande Blyss

Certains périphériques Blyss comme les moteurs nécessitent des commandes spéciales incluant un numéro de séquence. Pour simplifier 0,1,2,3,4,0,1,....

Ce numéro de séquence est créé par les télécommandes Blyss, mais aussi par le RFXtrx433.

Si vous utilisez une télécommande Blyss en parallèle, il est possible qu'ensuite l'application (Homeseer, Domoticz, Domotiga...) utilisant le RFXtrx433 ne soit pas synchronisée avec votre périphérique Blyss. Il faudra alors envoyer plusieurs commandes afin de resynchroniser le module.

Le problème est le même si vous utilisez le RFXtrx433 pour piloter le module Blyss et que vous utilisez ensuite la télécommande. Celle-ci ne fonctionnera qu'après s'être resynchronisée, nécessitant parfois l'émission de plusieurs commandes avant que le périphérique ne fonctionne.

## 9. Comment obtenir l'ID du bandeau de led RGB dx.com

Flasher le RFXtrx433 avec le firmware Type2 pour permettre la réception de l'ID grâce au logiciel RFXmngr.

Dans le logiciel RFXmngr, activer uniquement le protocol LightwaveRF (AD).

```
Packettype      = Lighting5
subtype        = RGB TRC02
Sequence nbr   = 5
ID             = FCC48B
Command        = On
Signal level   = 8
```

Si le firmware Type2 ne supporte pas votre périphérique, essayez en utilisant le firmware Type1/ext (Voir chapitre 2.2)

## 10. How to find the dx.com RGB LED strip driver ID (rev. 2)

Valid for the old TRC02 remote with 3 batteries and ebay.com 191481664563.

In RFXmngr enable only the Lighting4 protocol.

```
Packettype      = Lighting4
subtype        = PT2262
Sequence nbr   = 29
Code           = 161C84
```

The ID is: 16 1C

## 11. How to find the Eurodomest ID

You can assign a random ID to the Eurodomest. If you want to use the same ID as the remote you can find the ID of the remote using RFXmngr.

Start RFXmngr and enable only the Lighting4 protocol.

Press a button on the remote and you will receive a message like:

```
Packettype      = Lighting4
subtype        = PT2262
Sequence nbr   = 12
Code           = 6DFE0F
```

The ID is: 6 DF E0

Note: Eurodomest can also be controlled using ARC.

## 12. Somfy RTS

Les périphériques Somfy RTS\* peuvent être piloté uniquement par le RFXtrx433E. (Pas par le RFXtrx433 simple)

La version RFXtrx433E intègre une extension matériel permettant la gestion du protocole RFY utilisé par les périphériques Somfy RTS.

Pour associer un périphérique Somfy :

\* Sélectionner un identifiant unique (ID) et un code unité (unitcode) pour le périphérique RFXCOM RFY.

\* Déconnecter l'alimentation de tous les modules Somfy RTS sauf celui à associer.

\* Appuyer sur le bouton d'association pendant 2 secondes sur la télécommande Somfy d'origine jusqu'à ce que le périphérique Somfy réagisse.

\* Transmettre un code de programmation avec le RFXtrx433E. Le périphérique Somfy doit réagir pour confirmer la prise en compte de l'association.

La télécommande RFXCOM RFY est alors enregistrée dans le RFXtrx433E

Il est possible d'enregistrer jusqu'à 40 télécommande Somfy sur le RFXtrx433E.

Les télécommandes enregistrées peuvent être supprimées en utilisant le logiciel RFXmngr.

Les périphériques Somfy peuvent être contrôlés par plusieurs applications différentes si l'identifiant ID et le code unité unitcode est utilisé.

Par exemple, si un périphérique RTS est associé avec le RFXtrx433E en utilisant le RFXMngr avec l'ID 1 02 03 et le code Unité 1, le périphérique pourra être contrôlé dans Homeseer en utilisant les mêmes informations.

\* Somfy RTS est une marque déposée de la société Somfy System, Inc.

## 13. BlindsT6

Pour ajouter un émetteur RFXtrx433(E) (protocole Blinds T6) au moteur du volet :

- appuyer sur la touche "program" (P2) de la télécommande d'origine 2 fois ==> 2 bips
- transmettre la commande "confirm" avec le RFXtrx433(E) ==> 5 bips de confirmation

## 14. Lucci Air fan

Select the ID for switch settings:

ID	Remote switches
0	1 2 3 4 0 0 0 0
1	0 0 0 1
2	0 0 1 0
3	0 0 1 1
4	0 1 0 0
5	0 1 0 1
6	0 1 1 0
7	0 1 1 1
8	1 0 0 0
9	1 0 0 1
A	1 0 1 0
B	1 0 1 1
C	1 1 0 0
D	1 1 0 1
E	1 1 1 0
F	1 1 1 1

0 = ON

## 15. Transmit undecoded ARC commands.

Plug-in modules or other equipment with a PT2262 can be controlled using Lighting4.

There are a lot of brands using the PT2262 and some of them use the same timing (350) as used by the ARC devices but a different protocol definition.

Messages will be received as undecoded ARC messages if the protocol definition does not match the definition of the ARC protocol. Remote commands are received as ARC commands with a wrong house and device code and/or command code or as undecoded ARC messages if “undec on” is enabled. Decoding of these remotes is therefore not possible because they overlap the ARC protocol partly.

But transmitting these commands is possible using the Lighting4 command.

So if we receive this command UNDECODED ARC:18014403:  
(18 is not used)

hex to binary table

0=0	0	0	0
1=0	0	0	1
2=0	0	1	0
3=0	0	1	1
4=0	1	0	0
5=0	1	0	1
6=0	1	1	0
7=0	1	1	1
8=1	0	0	0
9=1	0	0	1
A=1	0	1	0
B=1	0	1	1
C=1	1	0	0
D=1	1	0	1
E=1	1	1	0
F=1	1	1	1

0 1 4 4 0 3 = selection box 0000 0001 0100 0100 0000 0011

Not selected = 0, box selected = 1


And the Lighting4 command contains the same “undec code” 01 44 03:

Lighting4 command:09 13 00 04 **01 44 03** 01 5E 00

pulse timing is 350 = hex 015E

Another example:

For this command UNDECODED ARC:18014430 set on the Lighting4 tab in RFxMngr selection box 1 to 24 to 0 1 4 4 3 0 = 0000 0001 0100 0100 0011 0000

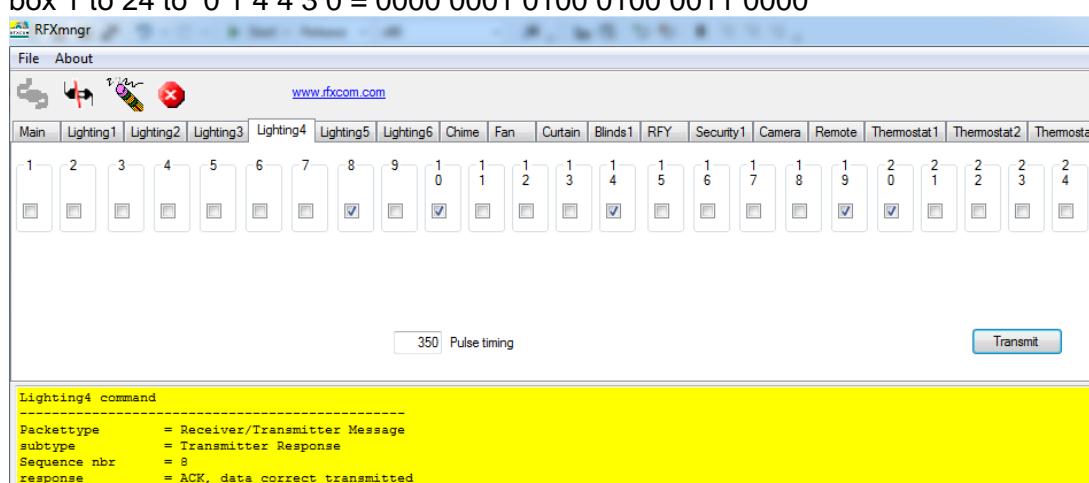

## 16. Known Lighting4 devices

### 16.1. Proluxx projection screen

Use Lighting4 with a pulse timing of 360

UP	1110 1101 0101 1001 0101 0010	ED 59 52
STOP	1110 1101 0101 1001 0101 1000	ED 59 58
DOWN	1110 1101 0101 1001 0101 0100	ED 59 54
RESET	1110 1101 0101 1001 0101 0001	ED 59 51

### 16.2. Kingpin (KP100) projection screen

Use Lighting4 with a pulse timing of 1040

UP	1110 0001 0100 0010 0010 0010	E1 42 22
STOP	1110 0001 0100 0010 0010 0100	E1 42 24
DOWN	1110 0001 0100 0010 0010 1000	E1 42 28
PROGRAM	1110 0001 0100 0010 0010 0001	E1 42 21

### 16.3. Mercury remote control mains sockets

<http://mercury.avsl.com/product?range=ME5124>

Use Lighting4 with a pulse timing of 188

1 OFF	01000100010101010011 1100
1 ON	01000100010101010011 0011
2 OFF	01000100010101011100 1100
2 ON	01000100010101011100 0011
3 OFF	01000100010101110000 1100
3 ON	01000100010101110000 0011
4 OFF	01000100010111010000 1100
4 ON	01000100010111010000 0011
5 OFF	01000100011101010000 1100
5 ON	01000100011101010000 0011

### 16.4. Conrad 034911 sockets

<http://www.conrad.nl/ce/nl/product/034911/Draadloze-schakelaarset-5-delig>

Use Lighting4 with a pulse timing of 425

Off = last 2 digits: 00

ON = last 2 digits: 01

Group	Unit													
I	1 OFF	00	01	01	01	00	00	01	01	01	01	01	01	00
II	1 OFF	01	00	01	01	00	00	01	01	01	01	01	01	00
III	1 OFF	01	01	00	01	00	00	01	01	01	01	01	01	00
IV	1 OFF	01	01	01	00	00	00	01	01	01	01	01	01	00
I	1 OFF	00	01	01	01	00	00	01	01	01	01	01	01	00
I	2 OFF	00	01	01	01	01	01	00	01	01	01	01	01	00
I	3 OFF	00	01	01	01	01	01	01	00	01	01	01	01	00
I	4 OFF	00	01	01	01	01	01	01	01	01	01	01	01	00
I	1 OFF	00	01	01	01	00	00	01	01	01	01	01	01	00
I	1 ON	00	01	01	01	00	01	01	01	01	01	01	01	01

## 17. EC Declaration of Conformity

# EC Declaration of Conformity

RFXCOM declares that the product:

**RFXtrx**

**Brand: RFXCOM Type: RFXtrx433E**

conforms with the essential requirements and other relevant provisions of the following directives and complies with the following standards applied:

R&TTE Directive 99/5/EC	EN 300 220-1 V2.3.1 (2010-02)
	EN 300 220-2 V2.3.1 (2010-02)
Low-voltage Directive 2006/95/EC	IEC 60950-1 (2005-12)
EMC Directive 2004/108/EC	EN 301 489-1 V1.9.2 (2011-09)
	EN 301 489-3 V1.4.1 (2002-08)

## **18. Précautions**

- La gestion de signaux RF est soumise à perturbations. Il n'est pas conseillé d'utiliser cet équipement dans des systèmes qui peuvent entraîner la mise en danger de personnes.
- RFXCOM HARDWARE AND SOFTWARE IS NOT INTENDED FOR USE IN THE OPERATION OF NUCLEAR FACILITIES, AIRCRAFT NAVIGATION OR COMMUNICATION SYSTEMS, AIR TRAFFIC CONTROL SYSTEMS, LIFE SUPPORT MACHINES OR OTHER EQUIPMENT IN WHICH THE FAILURE OF THE SOFTWARE COULD LEAD TO DEATH, PERSONAL INJURY, OR SEVERE PHYSICAL OR ENVIRONMENTAL DAMAGE.

## **19. License**

- You are allowed to use RFXCOM software, protocols and Written Materials with RFXCOM hardware only.
- All copyright and other proprietary notices associated with RFXCOM software, protocols and Written Materials shall be visible to all users.
- You may not sell, distribute, loan, rent, lease, license, sublicense or otherwise assign or transfer RFXCOM software or RFXtrx protocols or Written Materials unless expressly authorized in writing by RFXCOM.
- You may not use any RFXCOM device, software or protocol as part of an exclusive or patented product without the express prior written permission of RFXCOM.
- You may not alter, modify, adapt or create derivative works based on any part of RFXCOM software or protocols or Written Materials in any way, including translating, reverse engineering, disassembling or decompiling the software.

## **20. Copyright notice**

- All RFXCOM hardware, software, protocols and Written Materials are protected by copyright laws, and may not be reproduced, republished, distributed, transmitted, displayed, broadcast or otherwise exploited in any manner without the express prior written permission of RFXCOM.
- Netherlands Copyright and international treaty provisions protect the SOFTWARE, HARDWARE, RFXtrx protocols and Written Materials and shall be subject to the exclusive jurisdiction of the Netherlands Courts
- RFXCOM reserves all rights not expressly granted herein.

## **21. Traduction française**

La traduction du manuel utilisateur a été effectuée par Mickael VIALAT (<http://www.planete-domotique.com>).

Cette traduction est proposée à titre d'information, en cas d'information contradictoire, c'est systématiquement la version anglaise disponible sur le site <http://www.rfxcom.com/downloads.htm> qui sera considéré comme prioritaire.

## 22. Historique des modifications

Version 0.0 – August 18, 2011

Initial version.

Version 1.0 – October 30, 2011

RFXflash under Mono added.

Version 2.0 – December 30, 2011

Updated for the production version with FTDI USB chip

Version 2.1 – January 18, 2012

Link for ACM to serial port added in Linux instruction.

EC Declaration of Conformity added

Version 2.2 – February 8, 2012

Protocols overview added

Screen dumps updated

Version 2.3 – February 16, 2012

Novatys planned

Version 2.4 – February 25, 2012

General information updated

Version 2.5 – March 1, 2012

Chapter added how to run RFXmngr or RFXflash on Linux.

Version 2.6 – March 14, 2012

Code tables added, Cresta, UPM added

Version 2.7 – March 15, 2012

Flash procedure updated

Version 2.8 – March 31, 2012

Phenix table added

Version 2.9 – March 31, 2012

AB400 and Phenix address extended

Version 2.10 – April 16, 2012

Linux USB - tty configuration updated

Version 2.11 – May 14, 2012

List of supported protocols updated.

Version 2.12 – June 8, 2012

Chapter added how to run RFXmngr or RFXflash on Mac OS

Version 2.13 – July 15, 2012

List of supported protocols updated

Version 2.14 – August 4, 2012

List of enabled protocols influence added

RFXtrx315 added

Version 2.15 – August 18, 2012

Enabled protocols table changed

Version 2.16 – August 26, 2012

Rubicson stektermometer added

ATI Remote Wonder II added

Version 2.17 – August 28, 2012

Table “sensitivity influenced” updated

Version 2.18 – September 18, 2012

Chapter 2.3 updated: BlindsT0 disables all other protocols

Version 2.19 – September 25, 2012

RFXFlash version required changed to 4.0.0.0

Version 2.20 – September 28, 2012

RF range reduction guide added

Version 2.21 – October 18, 2012

BlindsT2 and BlindsT3 added

Version 2.22 – October 24, 2012

Sartano added

Version 2.23 – October 31, 2012

Sensitivity table updated

Version 2.24 – November 7, 2012  
Protocol table extended with the protocols to enable for receive

Version 2.25 – November 14, 2012  
HE105 switch settings added

Version 2.26 – November 28, 2012  
undec on explained

Version 2.27 – December 4, 2012  
Use of Lighting4 commands for undec ARC  
Brennenstuhl added

Version 2.28 – December 18, 2012  
Receiver tab removed from RFXmngr

Version 2.29 – December 27, 2012  
Lighting4 receive added

Version 2.30 – January 1, 2013  
Raex motor added

Version 3.00 – January 4, 2013  
RFXtrx433 Type1 and Type2 firmware added

Version 3.01 – February 4, 2013  
Supported protocols list updated

Version 4.00 – February 21, 2013  
Chapter 8 - Lighting4 screen updated for RFXmngr 11.0.0.0  
Known Lighting4 chapter added

Version 4.01 – March 13, 2013  
Receive of LaCrosse sometimes influenced by enabled Hideki

Version 4.02 – June 8, 2013  
MDREMOTE LED dimmer added [www.ultraleds.co.uk](http://www.ultraleds.co.uk)  
Conrad RSL2 added  
Energenie added

Version 4.03 – September 27, 2013  
How to find the MDREMOTE ID (chapter 7.6)  
WS1200 added  
Byron SX Chime added

Version 4.04 – November 15, 2013  
Maverick ET-732 added  
Alecto SA30 added  
Oregon EW109 added  
Revolt added

Version 4.05 – December 5, 2013  
Blyss command explanation added.  
Lighting4 - Mercury added  
Lighting5 – RGB controller added <http://dx.com/p/rf-remote-touch-rgb-controller-130913>

Version 4.06 – December 27, 2013  
Chapter 2.2 updated

Version 4.07 – February 10, 2014  
Chapter 7.8 Comment obtenir l'ID du bandeau de led RGB dx.com

Version 4.08 – March 20, 2014  
ARC and Oregon3.0 updated in table 2.4.  
Energenie 5-gang 429.950 added

Version 4.09 – April 4, 2014  
BlindsT6 - DC106, YOODA, Röhrmotor24 RMF added

Version 4.10 – April 7, 2014  
BlindsT7 - Forest added

Version 4.11 – April 28, 2014  
RGB LED – clarified AD is LightwaveRF

Version 4.12 – May 21, 2014  
Kambrook RF3672 added  
RFY protocol added  
Somfy programming instructions added

Supported protocol list RFXtrx433 updated.  
Protocol list by function added

Version 4.13 – May 31, 2014  
Opus TX300/Imagintronix Soil sensor added

Version 4.14 – June 18, 2014  
Prega sensor added  
Conrad 34911 Lighting4 coding added

Version 4.15 – June 25, 2014  
Kambrook, Rubicson, Viking supported in ext firmware  
Number of RFY remotes increased from 16 to 30

Version 4.16 – June 29, 2014  
RFXmngr cannot be used on Linux

Version 4.17 – July 3, 2014  
CoCo GDR2 added

Version 4.18 – July 14, 2014  
Opus TX300 link added

Version 4.19 – July 25, 2014  
Aoke relay added

Version 4.20 – August 25, 2014  
Enabling protocols clarified.

Version 4.21 – September 5, 2014  
Meade sensors added  
Oregon BTHGN129 sensor added

Version 4.22 – September 18, 2014  
Eurodomest added (NL - Action)  
Byron MP001 added  
WT0122 added  
Procedures added to find the Eurodomest and TRC02 ver2 ID

Version 4.23 – September 24, 2014  
Proove TSS330 fridge/freezer sensor added

Version 4.24 – October 9, 2014  
BlindsT0 added in ext firmware  
Alecto WS1700 and compatibles added

Version 4.25 – December 13, 2014  
Smartwares radiator valve added  
Proove TSS320 sensor added

Version 4.26 – January 2, 2015  
SelectPlus200689101 White Chime (Action NL) added

Version 4.27 – January 6, 2015  
SelectPlus200689103 Black Chime (Action NL) added

Version 4.28 – January 7, 2015  
Proove outdoor sensors 311346 & 311501 added  
Etekcity Wireless Remote Control Outlet Switch (US)

Version 5.00 – January 10, 2015  
RFXmngr information updated  
Copyright message updated  
License chapter added

Version 5.01 – February 27, 2015  
Chapter 2.5 Lighting4 receive is reduced with HomeEasy EU enabled.  
Chamberlain tubular motor added  
Sunpery blind motors added  
DEA Systems receivers added  
Envivo ENV-1348 chime added  
Alecto WS4500 added

Version 5.02 – March 18, 2015  
1byOne Easy Chime added  
BTX blind motors added  
Dolat DLM-1 blind motors added  
OTIO added

Version 5.03 – March 19, 2015  
TFA 30.3160 pool sensor added

Version 5.04 – April 14, 2015  
Chapter 4 updated with restrictions on Lighting4  
Siemens SF01 LF959RA50/LF259RB50/LF959RB50 extractor hood added  
Maplin N78KA added

Version 5.05 – May 2, 2015  
Dooya blind motors added  
Louvolite one touch motorised blinds added  
Alecto WS3500 added

Version 5.06 – May 4, 2015  
Current dx.com TRC02 LED drivers have a different protocol and are not supported.

Version 5.07 – June 1, 2015  
WH2 temperature humidity sensor added  
RGB LED controller <http://www.ebay.com/itm/191481664563> (maybe dx.com 227892)

Version 5.08 – July 31, 2015  
Oregon MSR939 added  
ESMO blind motors added  
Brel blind motors added  
Blinds T6 type motors now also supported in Ext firmware  
Supported devices table 2.2.2. updated

Version 5.09 – Aug 12, 2015  
Luxaflex blind motors added

Version 5.10 – Aug 17, 2015  
JVS screen motors added  
Livolo NL link added

Version 5.11 – Aug 31, 2015  
ASA motors added

Version 5.12 – Sept 14, 2015  
Home Confort added

Version 5.13 – Oct 2, 2015  
Oregon GR101 received in Type1 firmware  
Conrad RSL sensors received in Type2 firmware

Version 5.14 – Oct 7, 2015  
Quotidom blinds motor added

Version 5.15 – Nov 06, 2015  
Banggood temp-hum sensor added  
Legrand CAD radio added

Version 5.16 – Nov 26, 2015  
Proluxx codes corrected

Version 5.17 – Dec 24, 2015  
RFXflash procedure updated  
Rubicson pool sensor 48.019 added  
Inovalley SM80 plant sensor added  
Lucci Air fan added

Version 5.18 – Jan 1, 2016  
1byone Drive Way alarm added