

SERVICE MANUAL

W670SZQ

notebook



Notebook Computer

W670SZQ

Service Manual

Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.0
October 2013

Trademarks

Intel and Intel Core are trademarks of Intel Corporation.

Windows[®] is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and /or registered trademarks of their respective companies.

About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the *W670SZQ* series notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.

Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

Appendix C, Updating the FLASH ROM BIOS

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit as follows:
 - AC Input of 100 - 240V, 50 - 60Hz, DC Output of 19.5V, 6.15A (**120** Watts) minimum AC/DC Adapter.

CAUTION

This Computer's Optical Device is a Laser Class 1 Product

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.


Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:


1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.




2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

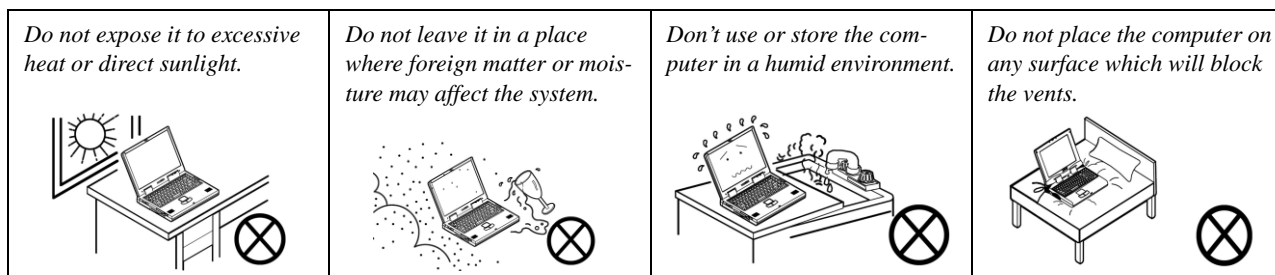

3. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

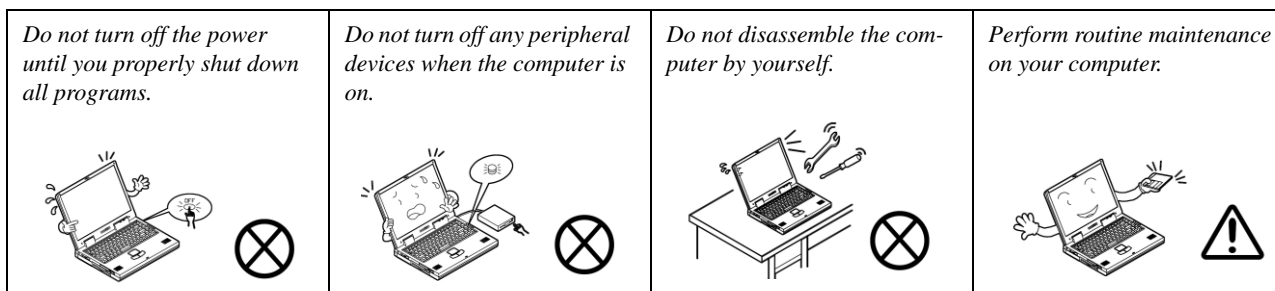


4. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
5. **Take care when using peripheral devices.**

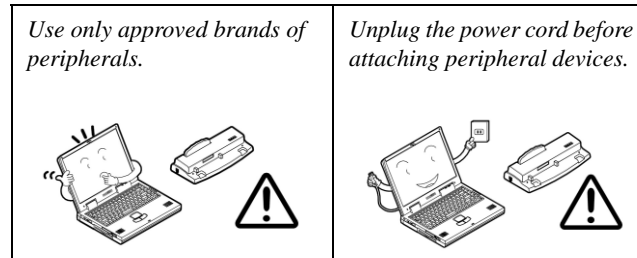

Power Safety

The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies.

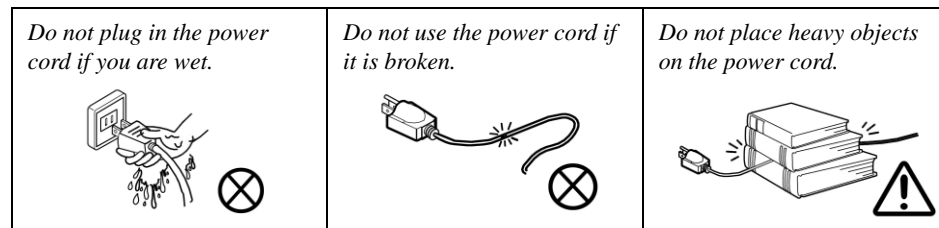

Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.

Battery Guidelines

The following can also apply to any backup batteries you may have.

- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Before removing the battery for storage charge it to 60% - 70%.
- Check stored batteries at least every 3 months and charge them to 60% - 70%.




Battery Disposal

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Battery Level

Click the battery icon  in the taskbar to see the current battery level and charge status. A battery that drops below a level of 10% will not allow the computer to boot up. Make sure that any battery that drops below 10% is recharged within one week.

Related Documents

You may also need to consult the following manual for additional information:

User's Manual on CD/DVD

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

System Startup

1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Insert the battery and make sure it is locked in position.
4. Securely attach any peripherals you want to use with the computer (e.g. keyboard and mouse) to their ports.
5. Attach the AC/DC adapter to the DC-In jack on the left of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter.
6. Use one hand to raise the lid/LCD to a comfortable viewing angle (do not exceed 130 degrees); use the other hand (as illustrated in Figure 1) to support the base of the computer (**Note: Never** lift the computer by the lid/LCD).
7. Press the power button to turn the computer "on".

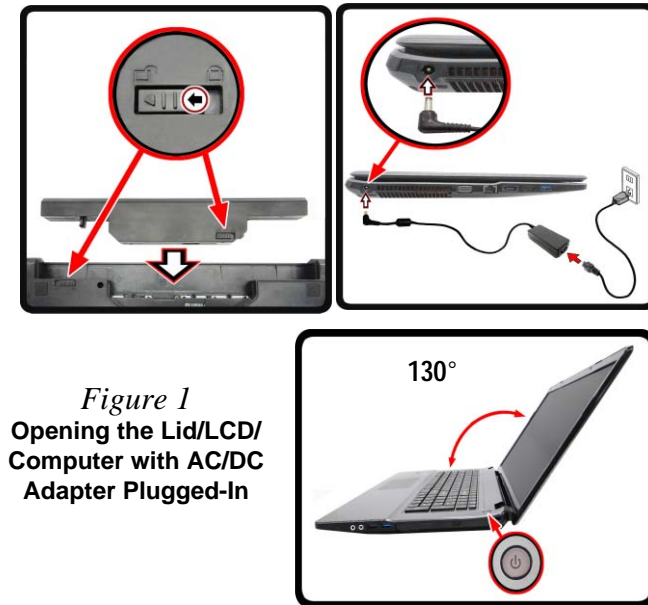



Figure 1
Opening the Lid/LCD/
Computer with AC/DC
Adapter Plugged-In



Shut Down

Note that you should always shut your computer down by clicking **Settings** in the **Charms Bar** (use the **Windows Logo Key**  + **C** key combination to access the Charms Bar) and choosing **Shut down** from the **Power** menu.

This will help prevent hard disk or system problems.

Contents

Introduction	1-1	Top	A-3
Overview	1-1	Bottom	A-4
Specifications	1-2	COMBO	A-5
External Locator - Top View with LCD Panel Open	1-4	DVD DUAL	A-6
External Locator - Front & Right Side Views	1-5	HDD	A-7
External Locator - Left Side & Rear View	1-6	2nd HDD	A-8
External Locator - Bottom View	1-7	LCD	A-9
Mainboard Overview - Top (Key Parts)	1-8	Schematic Diagrams.....	B-1
Mainboard Overview - Bottom (Key Parts)	1-9	System Block Diagram	B-2
Mainboard Overview - Top (Connectors)	1-10	Processor 1/7-DMI, FDI, PEG	B-3
Mainboard Overview - Bottom (Connectors)	1-11	Processor 2/7- CLK, MISC	B-4
Disassembly	2-1	Processor 3/7- (DDR3)	B-5
Overview	2-1	Processor 4/7- Power	B-6
Maintenance Tools	2-2	Processor 5/7- GFX PWR	B-7
Connections	2-2	Processor 6/7- GND	B-8
Maintenance Precautions	2-3	Processor 7/7- RSVD	B-9
Disassembly Steps	2-4	DDR3 SO-DIMM_1	B-10
Removing the Battery	2-5	DDR3 SO-DIMM_2	B-11
Removing the Keyboard	2-6	PS8625	B-12
Removing the Hard Disk Drive	2-7	PANEL, INVERTER	B-13
Removing the Optical (CD/DVD) Device	2-10	VGA PCI-E Interface	B-14
Removing the System Memory (RAM)	2-12	VGA Frame Buffer Interface	B-15
Removing and Installing a Processor	2-14	VGA Frame Buffer A	B-16
Removing the Fan Unit	2-17	VGA Frame Buffer C	B-17
Removing the Wireless LAN Module	2-18	VGA I/O	B-18
Removing the MSATA Module	2-19	VGA NVVDD Decoupling	B-19
Removing the CCD	2-20	CRT, Holes	B-20
Part Lists	A-1	Lynx 1/9	B-21
Part List Illustration Location	A-2	Lynx 2/9	B-22
		Lynx 3/9	B-23

Preface


Lynx 4/9	B-24
Lynx 5/9	B-25
Lynx 6/9	B-26
Lynx 7/9	B-27
Lynx 8/9	B-28
Lynx 9/9	B-29
3G, WLAN, PCIE, CON	B-30
USB Charge, CCD, TPM, Power Con	B-31
eSATA/USB3.0, LED	B-32
Card Reader (RTL8411)	B-33
HDD, TP, Audio, USB	B-34
HDMI, RJ45, Fan, KBC, LED	B-35
AUDIO CODEC VT1802S	B-36
KBC-ITE IT8587	B-37
5VS, 3VS, 3.3VM, 5VM	B-38
1.05V	B-39
VDD3, VDD5	B-40
1.5V or 1.35V / 0.75VS, 1.5VS	B-41
POWER VCORE	B-42
N14P, NVVDD, PEX, FBVDDQ	B-43
AC IN, CHARGER	B-44
AUDIO BOARD	B-45
POWER SWITCH BOARD	B-46
ODD to HDD BOARD	B-47
Updating the FLASH ROM BIOS.....	C-1
Download the BIOS	C-1
Unzip the downloaded files to a bootable CD/DVD/ or USB Flash drive	C-1
Set the computer to boot from the external drive	C-1
Use the flash tools to update the BIOS	C-2
Restart the computer (booting from the HDD)	C-2

Chapter 1: Introduction

Overview

This manual covers the information you need to service or upgrade the **W670SZQ** series notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in the *User's Manual*. The manual is shipped with the computer.

Operating systems (e.g. *Windows 8*, etc.) have their own manuals as do application softwares (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The **W670SZQ** series notebook is designed to be upgradeable. See [Disassembly on page 2 - 1](#) for a detailed description of the upgrade procedures for each specific component. Please take note of the warning and safety information indicated by the “” symbol.

The balance of this chapter reviews the computer's technical specifications and features.

Specifications



Latest Specification Information

The specifications listed here are correct at the time of sending them to the press. Certain items (particularly processor types/speeds) may be changed, delayed or updated due to the manufacturer's release schedule. Check with your service center for more details.



CPU

The CPU is not a user serviceable part. Accessing the CPU in any way may violate your warranty.

Processor Options

Intel® Core™ i7 Processor

i7-4900MQ (2.80GHz)

8MB L3 Cache, 22nm, DDR3L-1600MHz, TDP 47W

i7-4800MQ (2.7GHz), i7-4700MQ (2.4GHz)

6MB L3 Cache, 22nm, DDR3L-1600MHz, TDP 47W

i7-4702MQ (2.80GHz)

6MB L3 Cache, 22nm, DDR3L-1600MHz, TDP 37W

i7-4600M (2.90GHz)

4MB L3 Cache, 22nm, DDR3L-1600MHz, TDP 37W

Intel® Core™ i5 Processor

i5-4330M (2.80GHz), i5-4300M (2.60GHz), i5-4200M (2.50GHz)

3MB L3 Cache, 22nm, DDR3L-1600MHz, TDP 37W

Intel® Core™ i3 Processor

i3-4100M (2.50GHz), i3-4000M (2.40GHz)

3MB L3 Cache, 22nm, DDR3L-1600MHz, TDP 37W

Core Logic

Intel® HM86 Chipset

BIOS

48Mb SPI Flash ROM

AMI BIOS

Memory

Two 204 Pin SO-DIMM Sockets Supporting **DDR3L 1600MHz** Memory

Memory Expandable up to 16GB

(The real memory operating frequency depends on the FSB of the processor.)

Storage

One Changeable 2.5" 9.5mm/7mm (h) SATA HDD

(**Factory Option**) One 12.7mm(h) Optical Device Type Drive (Super Multi Drive/Blu-Ray Combo Drive/Blu-Ray Writer Drive)

(**Factory Option**) 9.5mm 2nd HDD caddy

(**Factory Option**) One mSATA Solid State Drive (SSD)

LCD

17.3" (43.94cm) HD+ / FHD

Audio

High Definition Audio Compliant Interface

2 * Built-In Speakers

Built-In Microphone

Sound Blaster™ Cinema

Security

Security (Kensington® Type) Lock Slot

BIOS Password

Video Adapter

Intel® Integrated GPU and NVIDIA® Discrete GPU

Supports NVIDIA® Optimus Technology

Intel Integrated GPU

Intel® HD Graphics 4600

Dynamic Frequency (Intel Dynamic Video Memory Technology for up to **1.7GB**)

Microsoft DirectX®11 Compatible

Keyboard

Full-size "WinKey" keyboard (with numeric keypad)

or

Illuminated Full-size "WinKey" keyboard (with numeric keypad)

Pointing Device

Built-in Touchpad

Mini Card Slots

Slot 1 for **WLAN** Module or **WLAN and Bluetooth** Combo Module

Slot 2 for mSATA **SSD**

Interface

One USB 2.0 Port

Two USB 3.0 Ports

One eSATA Port (USB 3.0 Combo)

One HDMI-Out Port

One External Monitor Port

One Headphone-Out Jack

One Microphone-In Jack

One RJ-45 LAN Jack

One DC-in Jack

Communication

Built-In Gigabit Ethernet LAN

2.0M HD PC Camera Module

WLAN/ Bluetooth Half Mini-Card Modules:

(Factory Option) Intel® Wireless-AC 7260 Wireless LAN **(802.11a/c)** + Bluetooth 4.0

(Factory Option) Intel® Wireless-N 7260 Wireless LAN **(802.11a/g/n)** + Bluetooth 4.0

(Factory Option) Intel® Wireless-N 7260 Wireless LAN **(802.11b/g/n)**+ Bluetooth 4.0

(Factory Option) Third-Party Wireless LAN **(802.11b/g/n)**

(Factory Option) Third-Party Wireless LAN **(802.11a/c)** + Bluetooth 4.0

(Factory Option) Third-Party Wireless LAN **(802.11b/g/n)** + Bluetooth 4.0

Card Reader

Embedded Multi-In-1 Card Reader

MMC (MultiMedia Card) / RS MMC

SD (Secure Digital) / Mini SD / SDHC/ SDXC

MS (Memory Stick) / MS Pro / MS Duo

Environmental Spec**Temperature**

Operating: 5°C - 35°C

Non-Operating: -20°C - 60°C

Relative Humidity

Operating: 20% - 80%

Non-Operating: 10% - 90%

Power

(Factory Option) 6 Cell Smart Lithium-Ion Battery Pack, 48.84WH

(Factory Option) 6 Cell Smart Lithium-Ion Battery Pack, 62.16WH

Full Range AC/DC Adapter

AC Input: 100 - 240V, 50 - 60Hz

DC Output: 19.5V, 6.15A **(120W)**

Dimensions & Weight


413mm (w) * 272.8mm (d) * 36.4mm (h)

3.1kg (with ODD and 62.16WH Battery)

Introduction


Figure 1
Top View

1. PC Camera
2. Built-In Microphone
3. *PC Camera LED
**When the PC camera is in use, the LED will be illuminated in red.*
4. LCD
5. Power Button
6. LED Indicator
7. Keyboard
8. Touchpad & Buttons

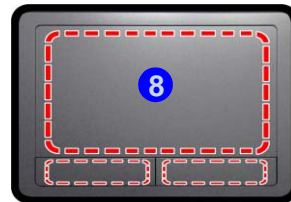

Note that the Touchpad and Buttons valid operational area is that indicated within the red dotted lines.

External Locator - Top View with LCD Panel Open

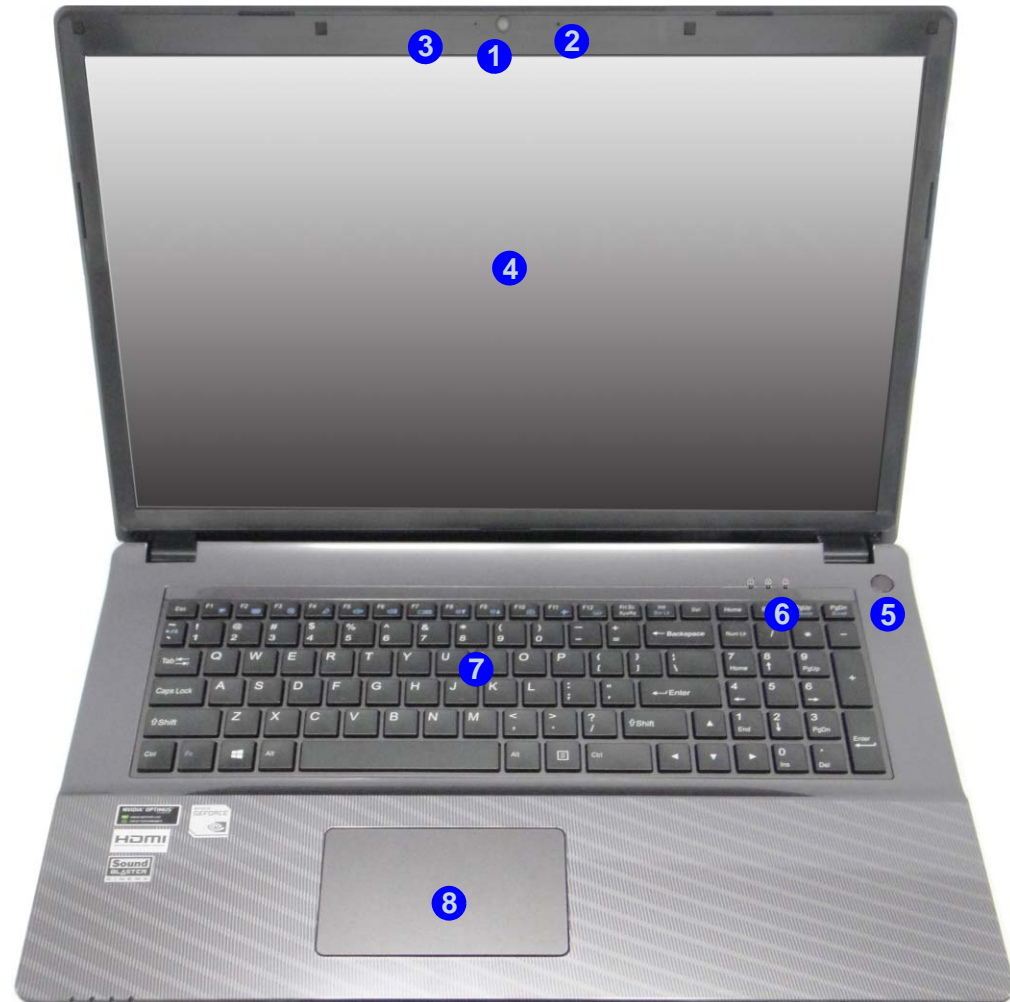

External Locator - Front & Right Side Views

FRONT VIEW



Figure 2
Front View

1. LED Indicator
2. Multi-in-1 Card Reader

RIGHT SIDE VIEW



Figure 3
Right Side View

1. Microphone-In Jack
2. Headphone-Out Jack
3. USB Ports
4. Optical Device Drive Bay
5. Emergency Eject Hole
6. Security Lock Slot

Introduction

External Locator - Left Side & Rear View

Figure 4
Left Side View

1. DC-In Jack
2. Vent
3. External Monitor Port
4. RJ-45 LAN Jack
5. Combined eSATA/USB 3.0 Port
6. HDMI-Out Port
7. USB 3.0 Ports

LEFT SIDE VIEW



Figure 5
Rear View

1. Battery

REAR VIEW



External Locator - Bottom View

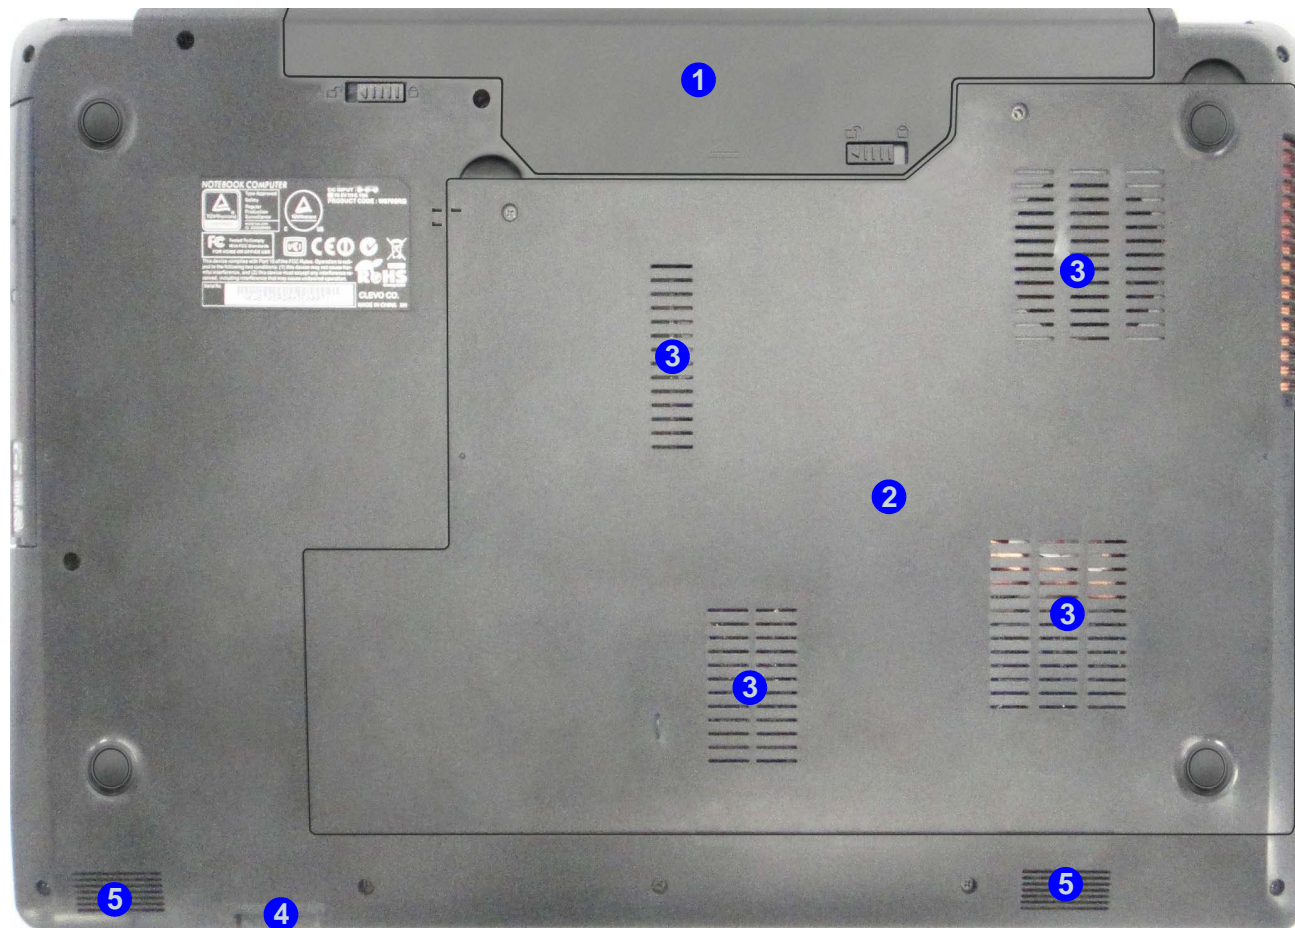


Figure 6
Bottom View

1. Battery
2. Component Bay Cover
3. Vent
4. Multi-in-1 Card Reader
5. Speakers




Overheating

To prevent your computer from overheating, make sure nothing blocks any vent while the computer is in use.

Figure 7
Mainboard Top
Key Parts

Mainboard Overview - Top (Key Parts)

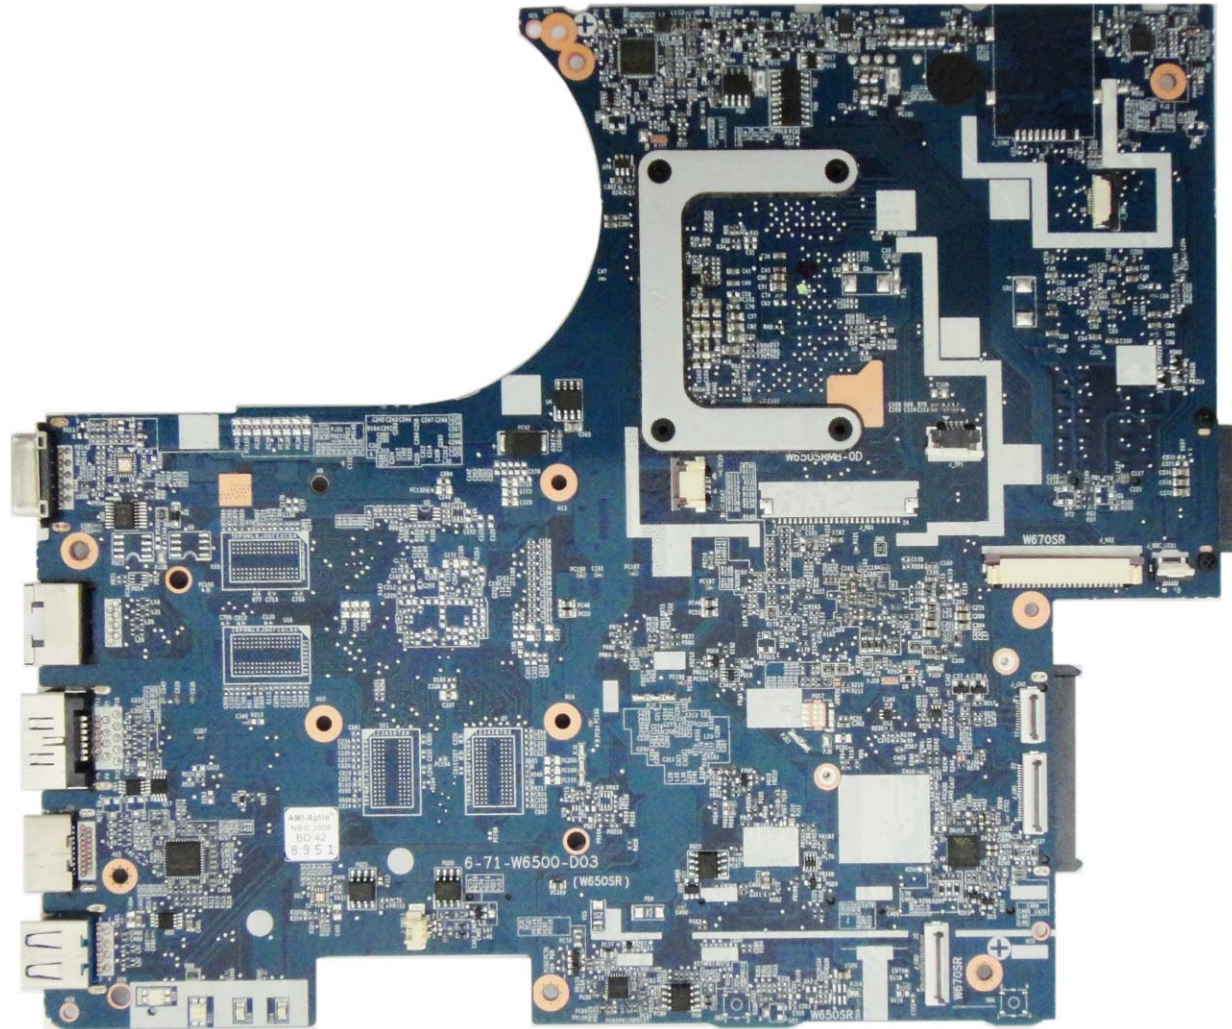

Mainboard Overview - Bottom (Key Parts)

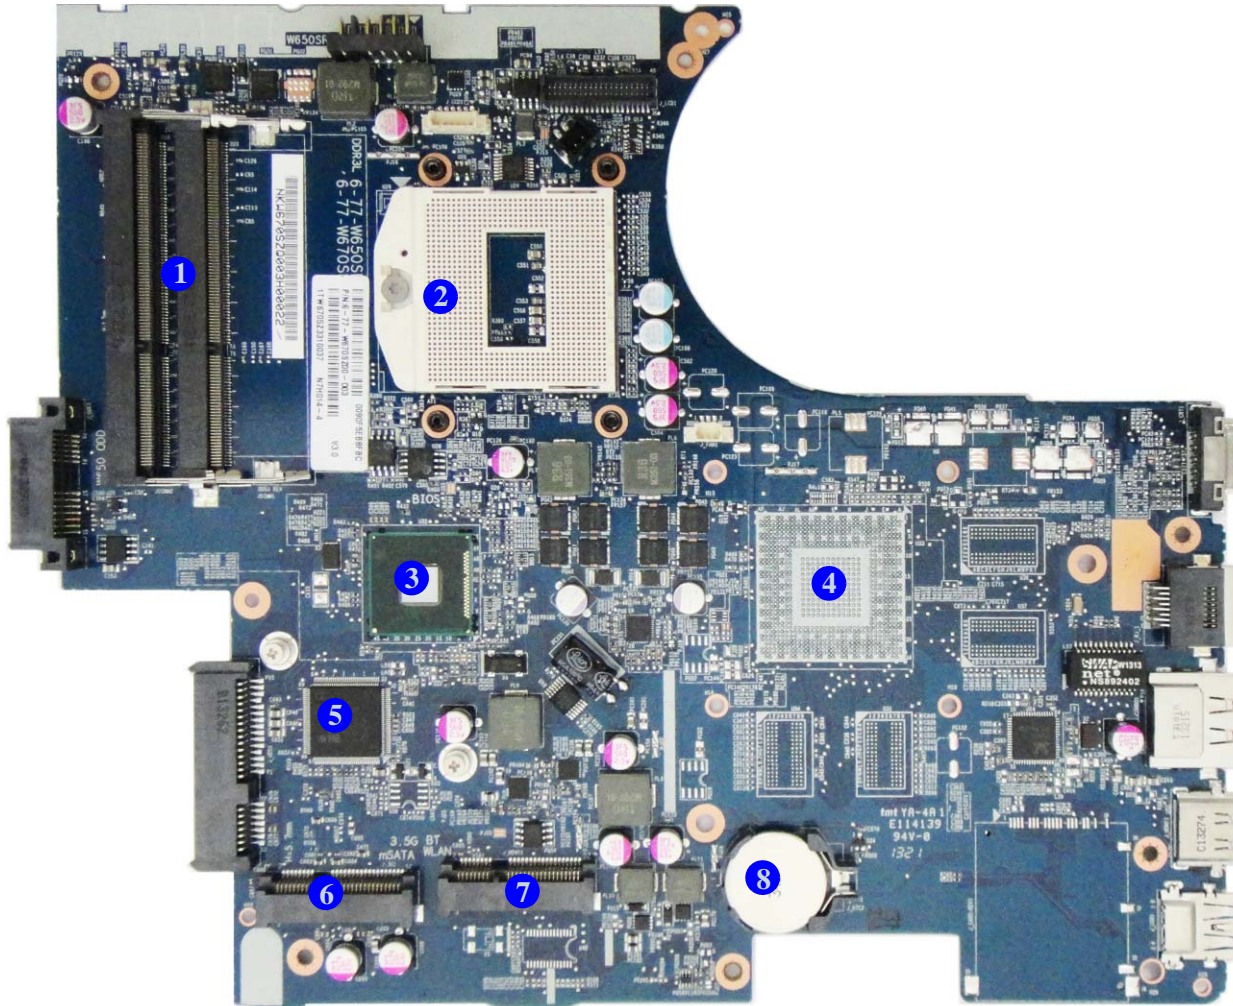


Figure 8
**Mainboard Bottom
Key Parts**


1. Memory Slots
DDR3 SO-DIMM
2. CPU Socket (no
CPU installed)
3. Northbridge
Platform Controller
Hub
4. VGA Chip
5. KBC-ITE IT8518
6. Mini-Card
Connector
(mSATA Module)
7. Mini-Card
Connector (WLAN
Module)
8. CMOS Battery

Introduction

Figure 9
**Mainboard Top
Connectors**

1. External Monitor Port
2. RJ-45 LAN Jack
3. Combo eSATA/
USB Port 3.0
4. HDMI-Out Port
5. USB Port 3.0
Connector
6. Speaker Cable
Connector
7. Keyboard Cable
Connector
8. Touchpad Cable
Connector
9. Touchpad Cable
Connector

Mainboard Overview - Top (Connectors)

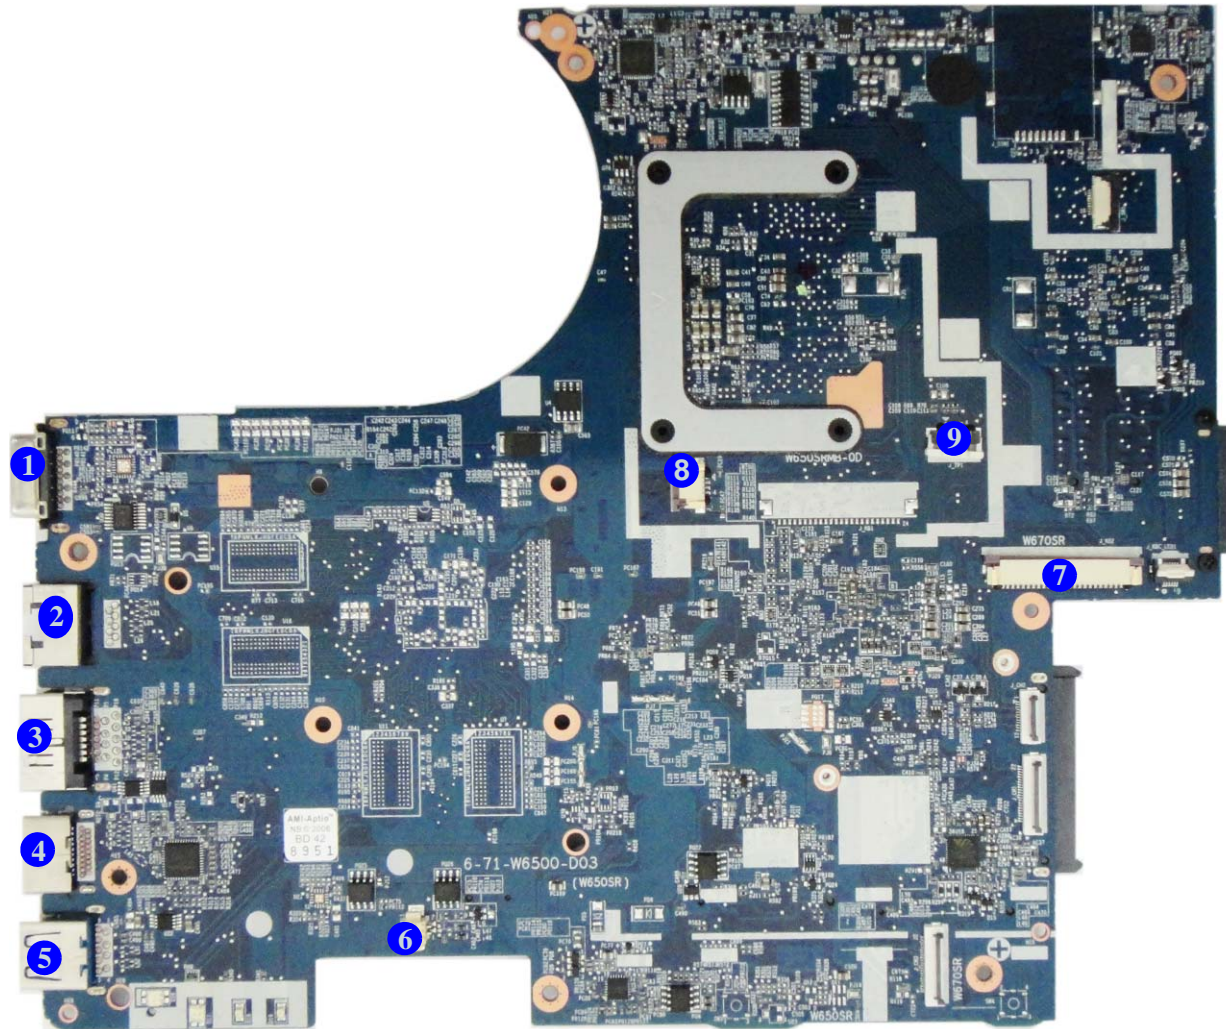

Mainboard Overview - Bottom (Connectors)

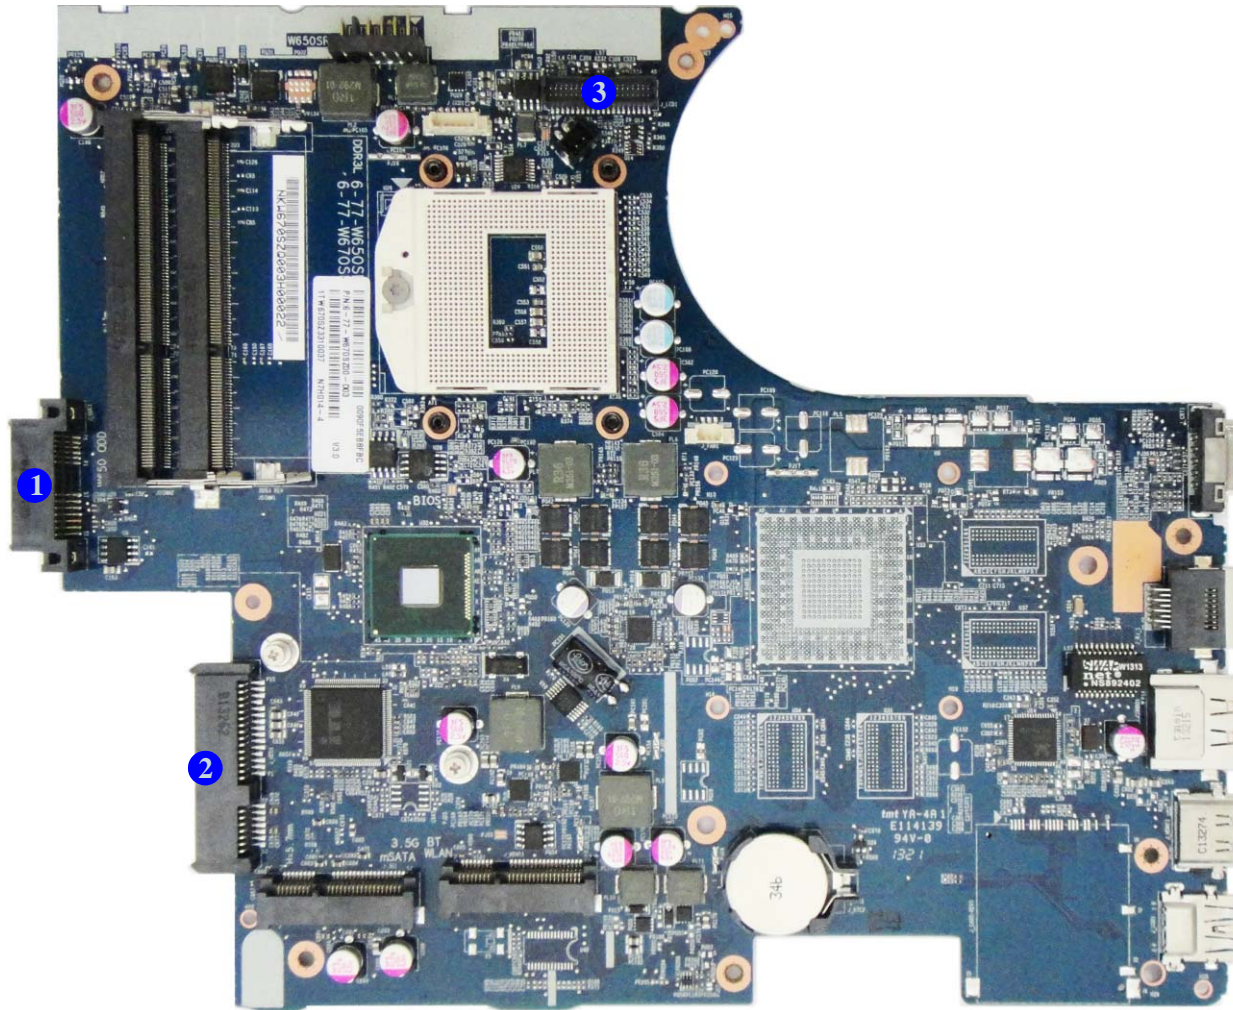


Figure 10
**Mainboard Bottom
Connectors**

1. ODD Connector
2. HDD Connector
3. LCD Cable Connector


Chapter 2: Disassembly

Overview

This chapter provides step-by-step instructions for disassembling the **W670SZQ** series notebook's parts and subsystems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).



We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, optical device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will also provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.

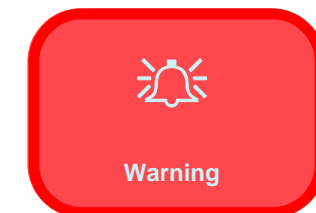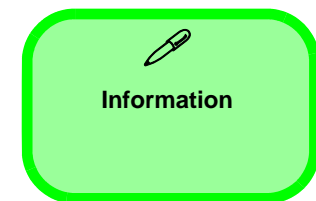

Disassembly

NOTE: All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors	To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Pressure sockets for multi-wire connectors	To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.
Pressure sockets for ribbon connectors	To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Board-to-board or multi-pin sockets	To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.

Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
 - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
 - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-borne particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.



Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Disassembly Steps

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

To remove the Battery:

1. Remove the battery [page 2 - 5](#)

To remove the Keyboard:

1. Remove the battery [page 2 - 5](#)
2. Remove the keyboard [page 2 - 6](#)

To remove the HDD:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 7](#)

To remove the Optical Device:

1. Remove the battery [page 2 - 5](#)
2. Remove the Optical device [page 2 - 10](#)

To remove the System Memory:

1. Remove the battery [page 2 - 5](#)
2. Remove the system memory [page 2 - 12](#)

To remove and install a Processor:

1. Remove the battery [page 2 - 5](#)
2. Remove the processor [page 2 - 14](#)
3. Install the processor [page 2 - 16](#)

To remove the Wireless LAN Module:

1. Remove the battery [page 2 - 5](#)
2. Remove the WLAN [page 2 - 18](#)

To remove the MSATA Module:

1. Remove the battery [page 2 - 5](#)
2. Remove the MSATA [page 2 - 19](#)

To remove the CCD Module:



1. Remove the battery [page 2 - 5](#)
2. Remove the CCD module [page 2 - 20](#)

Removing the Battery

1. Turn the computer **off**, and turn it over.
2. Slide the latch **1** in the direction of the arrow (*Figure 1a*).
3. Slide the latch **2** in the direction of the arrow, and hold it in place (*Figure 1a*).
4. Slide the battery **3** in the direction of the arrow **4** (*Figure 1b*).

Figure 1
Battery Removal

- a. Slide the latch and hold it in place.
- b. Slide the battery in the direction of the arrow.

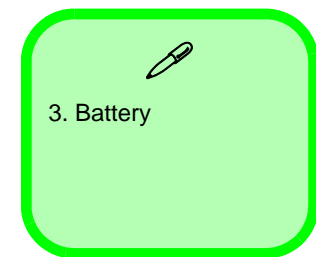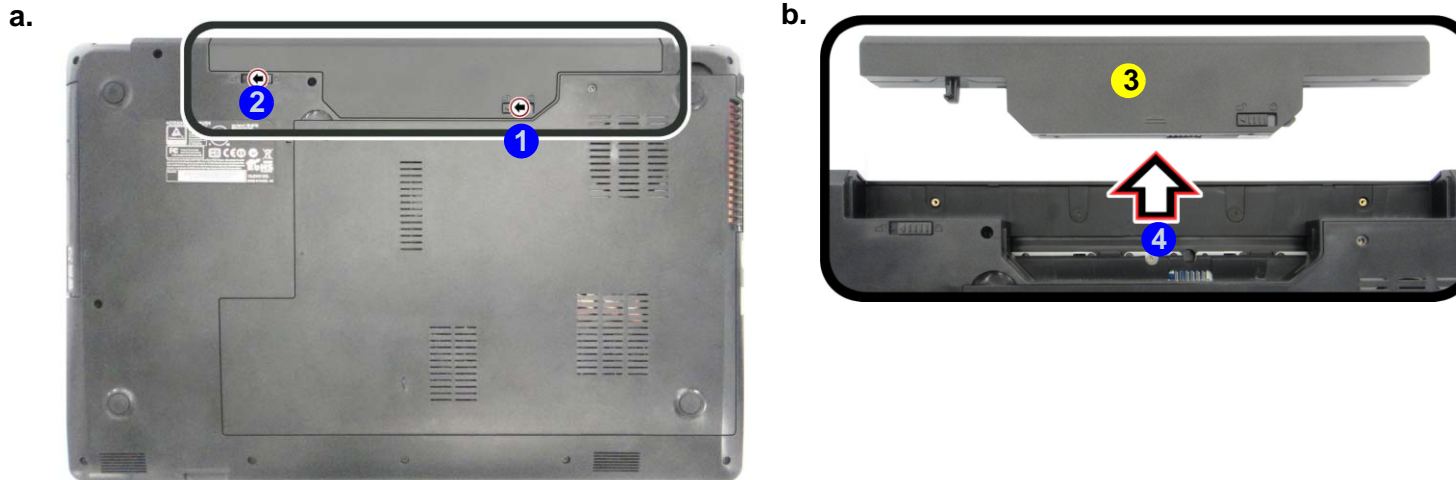

Disassembly



Figure 2

Keyboard Removal

- Remove screw and press at point 2 to un-snap the center cover module.
- Remove the center cover module.
- Remove the screws.
- Carefully lift the keyboard up and disconnect the ribbon cables from its locking collar.
- Remove the keyboard.

Removing the Keyboard

- Turn off the computer, turn it over, remove the battery (page 2 - 5).
- Remove screw 1 and carefully press at point 2, from the bottom of the computer to un-snap the center cover module (use the eject pin tool to do this - Figure 2a)
- Turn the computer over, remove the un-snap center cover module 3 from the computer (Figure 2b).
- Remove screws 4 - 8 from the keyboard (Figure 2c).
- Lift the keyboard up, being careful not to bend the keyboard ribbon cable 9. Disconnect the keyboard ribbon cable from the locking collar socket 10 and the keyboard LED cable 11 from its locking collar 12 (Figure 2d).
- Carefully lift the keyboard 13 off the computer (Figure 2e).

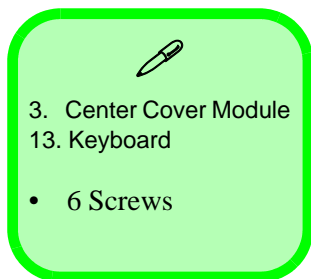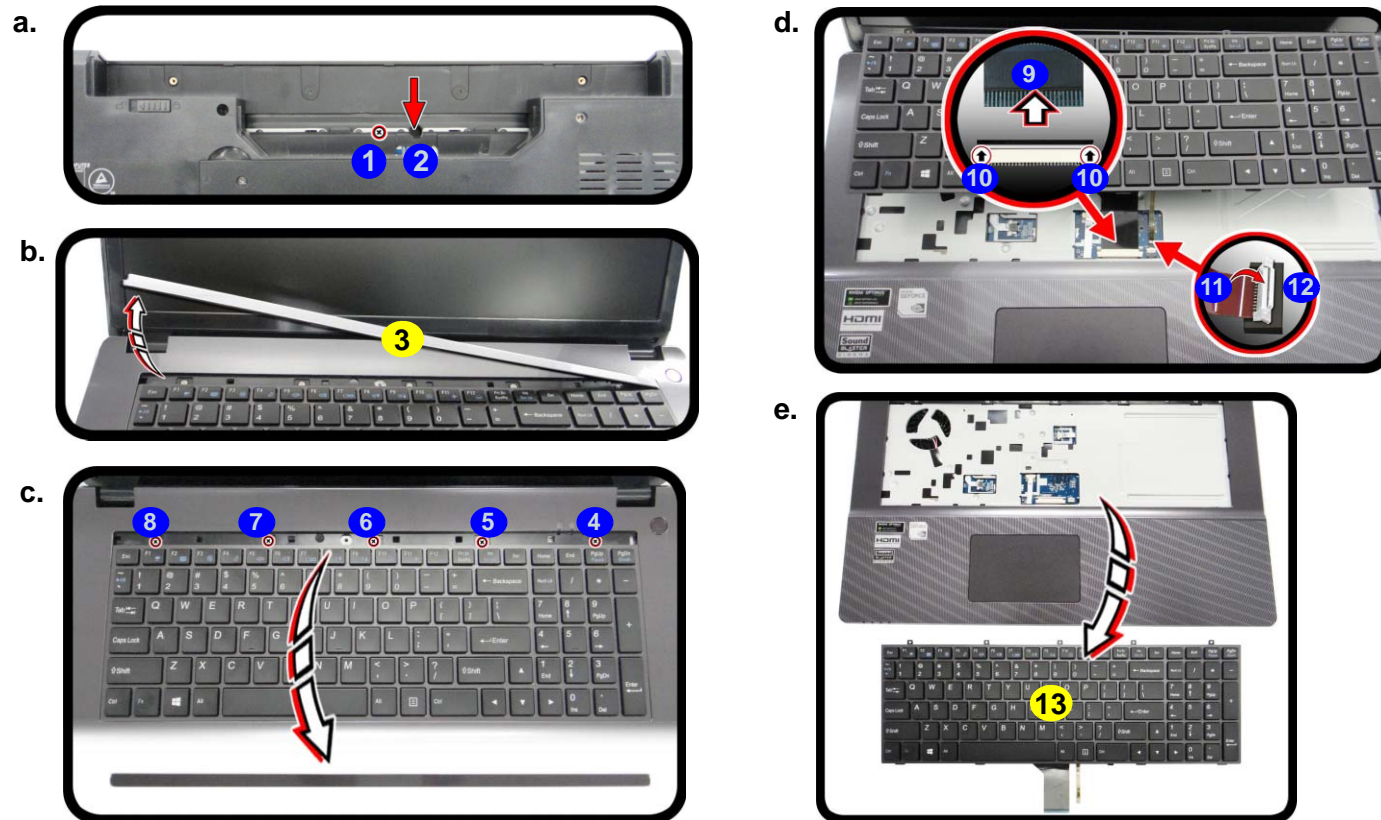

Removing the Hard Disk Drive



The hard disk drive can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 9.5mm or 7mm (h). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in **Chapter 4 of the User's Manual**) when setting up a new hard disk.

Hard Disk Upgrade Process

1. Turn **off** the computer, and remove the battery ([page 2 - 5](#)).
2. Locate the component bay cover and remove screws **1** - **2** ([Figure 3a](#)).
3. Lift the component bay cover **3** off the computer case by applying pressure at points **4** & **5**; if you have problems using a finger to do this, then use a non-abrasive, non-sharp object (e.g. a coin) to lift the cover up before removal).

Figure 3
HDD Assembly Removal

- a. Remove the screws. Lift the component bay cover off the computer.


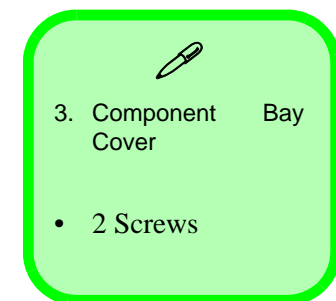
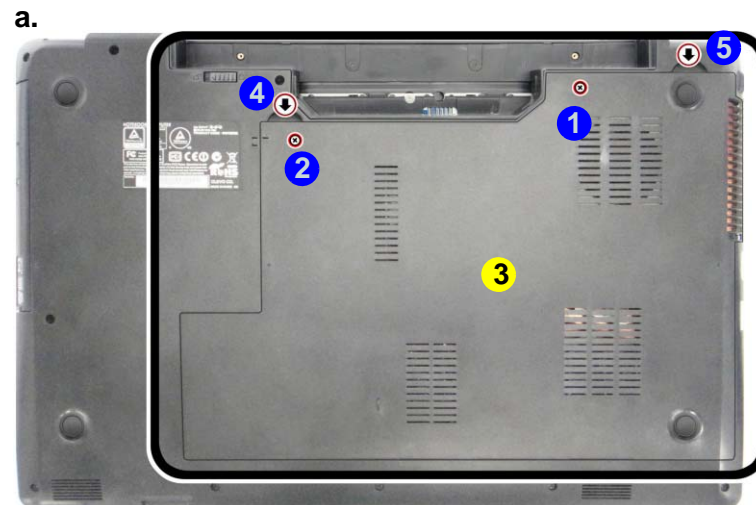


Disassembly

Figure 4 HDD Assembly Removal (cont'd.)

- c. Remove the bay cover.
d. Lift the rubber and slide the HDD assembly in the direction of the arrow to lift the HDD assembly out.
e. Remove the screws and adhesive cover.

4. Remove the component bay cover **3** (*Figure 4c*).
5. Lift the HDD sponge up at point **6** and grip the tab to slide the hard disk assembly in the direction of arrow **7** to lift the hard disk assembly **8** out (*Figure 4d*).
6. Remove the screws **9** - **10** and the adhesive cover **11** from the hard disk **12** (*Figure 4e*).
7. Reverse the process to install a new hard disk (do not forget to replace the screws and bay cover).

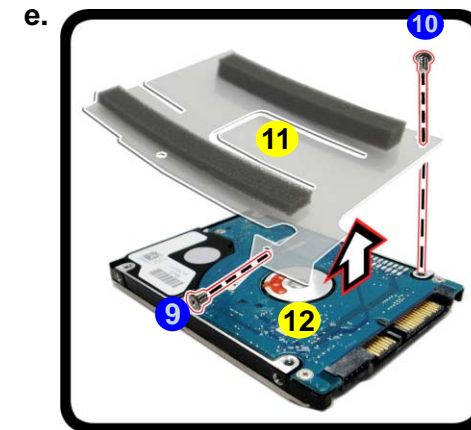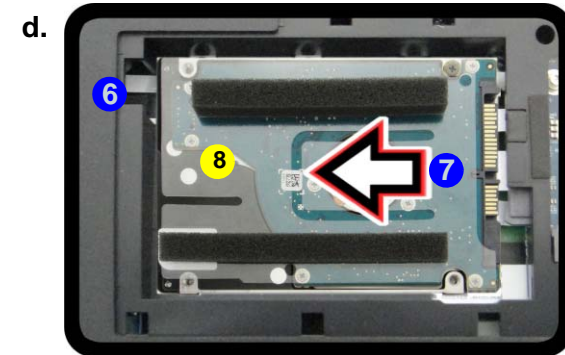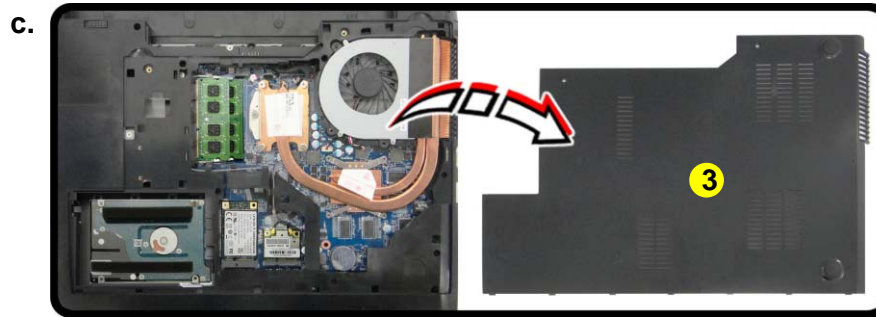

HDD System Warning

New HDD's are blank. Before you begin make sure:

You have backed up any data you want to keep from your old HDD.

You have all the CD-ROMs and FDDs required to install your operating system and programs.

If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.



- 3. Component Bay Cover
- 6. HDD Assembly
- 9. Adhesive Cover
- 10. HDD
- 2 Screws

Hard Disk Size Note (Foam Rubber Insert)

Note that the hard disks pictured on the following pages are all 9.5mm(H) hard disk drives. In some cases 7mm(H) hard disk drives will be installed. For more information contact your distributor/supplier, and bear in mind your warranty terms.

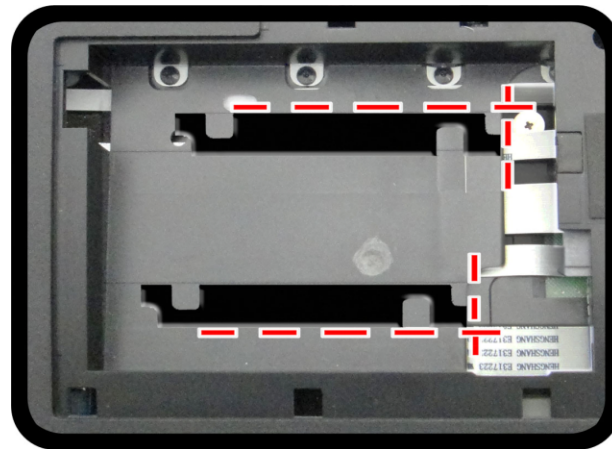


Figure 5
**Foam Rubber
Insert for 7mm(H)
HDDs**

- If you are replacing a 9.5mm(H) HDD with a 7mm(H) HDD then insert the foam rubber insert (as shown above).
- If you are replacing a 7mm(H) HDD with a 9.5mm(H) HDD then remove the foam rubber insert.




Disassembly

Figure 6
**Optical Device
 Removal**

- Remove the screws. Lift the component bay cover off the computer.
- Remove the screw at point 6.
- Use a screwdriver to carefully push out the optical device at point 7.

Removing the Optical (CD/DVD) Device

- Turn **off** the computer, and remove the battery ([page 2 - 5](#)).
- Locate the component bay cover and remove screws 1 - 2 ([Figure 6a](#)).
- Lift the component bay cover 3 off the computer case by applying pressure at points 4 & 5; if you have problems using a finger to do this, then use a non-abrasive, non-sharp object (e.g. a coin) to lift the cover up before removal).
- Remove the screw at point 6 ([Figure 6b](#)).
- Use a screwdriver to carefully push out the optical device 8 at point 7 ([Figure 6c](#)).

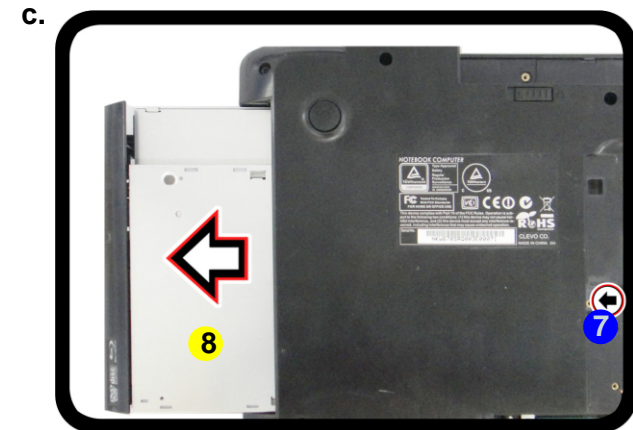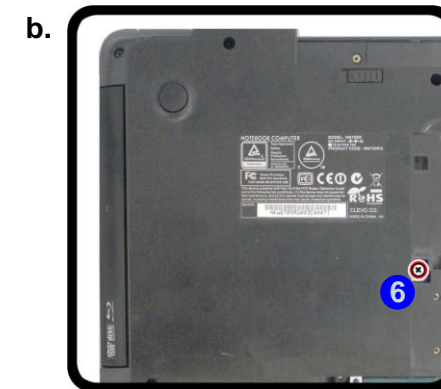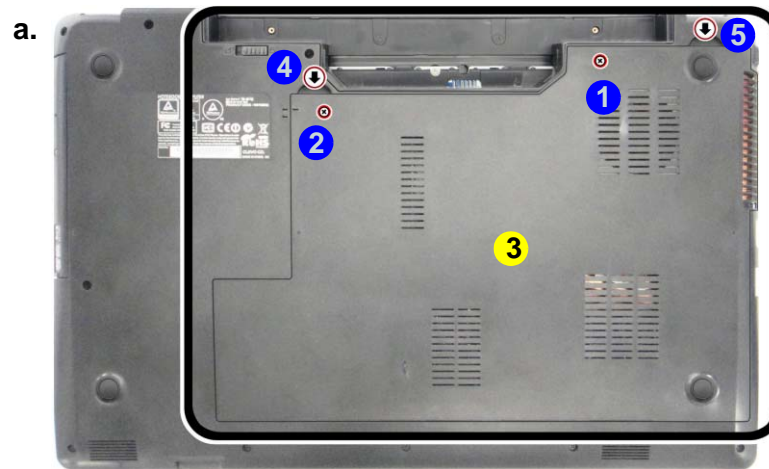



- 3. Component Bay Cover
- 8. Optical Device

- 3 Screws

6. Carefully pry the bezel **10** off the optical device at point **9** (*Figure 7e*).
7. Separate the bezel **10** and the optical device.
8. Reverse the process to attach the front bezel **10** with the new optical device at point **11** (*Figure 7g*).
9. Insert the new device and carefully slide it into the computer (the device only fits one way. DO NOT FORCE IT; The screw holes should line up).
10. Reinsert the component bay cover by placing it on the bottom case assembly, and aligning the pins at the bottom of the cover with the slots in the case to ensure a proper fit. Press down on the cover to make sure it fits tightly.
11. Replace the screws and battery.
12. Restart the computer to allow it to automatically detect the new device.

Figure 7
**Optical Device
 Removal (cont'd.)**

- e. Pry the bezel off the optical device.
- f. Separate the bezel and optical device.
- g. Install the front bezel.
- h. Replace the component bay cover and screws.

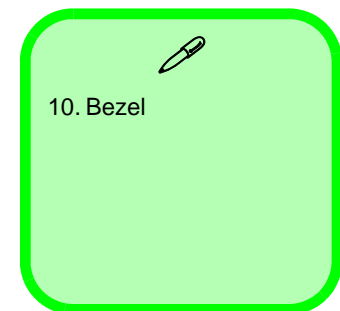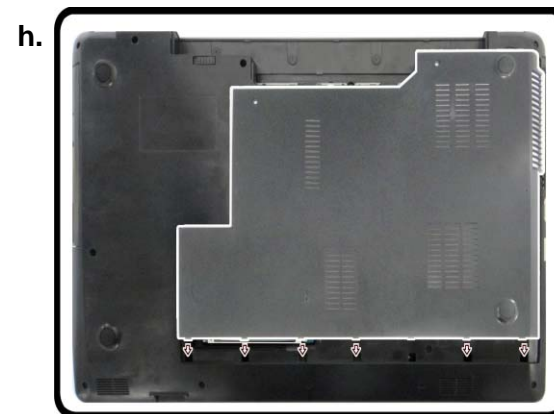

Disassembly

Figure 8
RAM Module Removal

- Remove the screws from the component bay cover.
- Remove the component bay cover. The RAM modules will be visible at point **6** on the mainboard.



Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.



3. Component Bay Cover


- 2 Screws

Removing the System Memory (RAM)

The computer has two memory sockets for 204 pin Small Outline Dual In-line Memory Modules (SO-DIMM) supporting DDR3L Up to 1600 MHz. The main memory can be expanded up to 16GB. The SO-DIMM modules supported are 1024MB and 2048MB **DDRIII** Modules. The total memory size is automatically detected by the POST routine once you turn on your computer.

Memory Upgrade Process

- Turn **off** the computer, turn it over, and remove the battery ([page 2 - 5](#)).
- Remove screws **1** - **2** from the component bay cover ([Figure 8a](#)).
- Lift the component bay cover **3** off the computer case by applying pressure at points **4** & **5**; if you have problems using a finger to do this, then use a non-abrasive, non-sharp object (e.g. a coin) to lift the cover up before removal).
- The RAM modules will be visible at point **6** on the mainboard ([Figure 8b](#)).

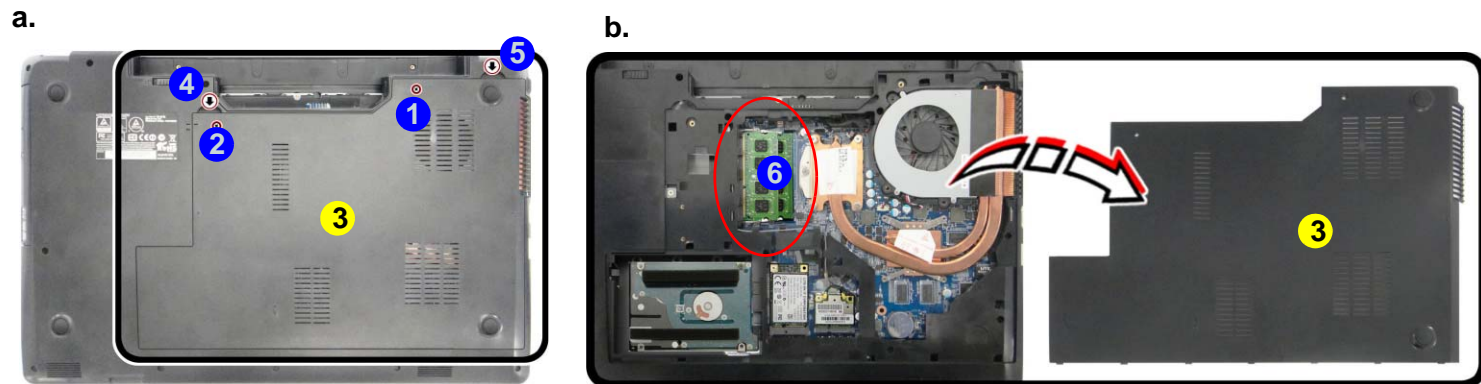


5. Gently pull the two release latches (7 & 8) on the sides of the memory socket in the direction indicated by the arrows (Figure 9c).
6. The RAM module 9 will pop-up (Figure 9d), and you can then remove it.
7. Pull the latches to release the second module if necessary.
8. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
9. The module will only fit one way as defined by its pin alignment. Make sure the module is seated as far into the slot as it will go. DO NOT FORCE IT; it should fit without much pressure.
10. Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
11. Replace the component bay cover and the screws (see page 2 - 12).
12. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

Figure 9
RAM Module
Removal (cont'd)


- c. Pull the release latches.
- d. Remove the module.






Single Memory Module Installation

If your computer has a single memory module, then insert the module into the **Channel 0 (JDIMM1)** socket. In this case this is the **lower memory socket** (the socket closest to the mainboard).



Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.



9. RAM Module

Disassembly


Figure 10
Processor Removal

- Locate the CPU heat sink.
- Remove the screws.
- Carefully remove the heat sink unit.

Removing and Installing a Processor


Processor Removal Procedure

- Turn **off** the computer, turn it over, remove the battery ([page 2 - 5](#)) and the component bay cover ([page 2 - 7](#)).
- The CPU heat sink will be visible at point **A** ([Figure 10a](#)).
- Loosen the CPU heat sink screws in the order **8**, **7**, **6**, **5**, **4**, **3**, **2** & **1** (the reverse order as indicated on the label ([Figure 10b](#))).
- Carefully (it may be hot) remove the heat sink unit **B** off the computer ([Figure 10c](#)).

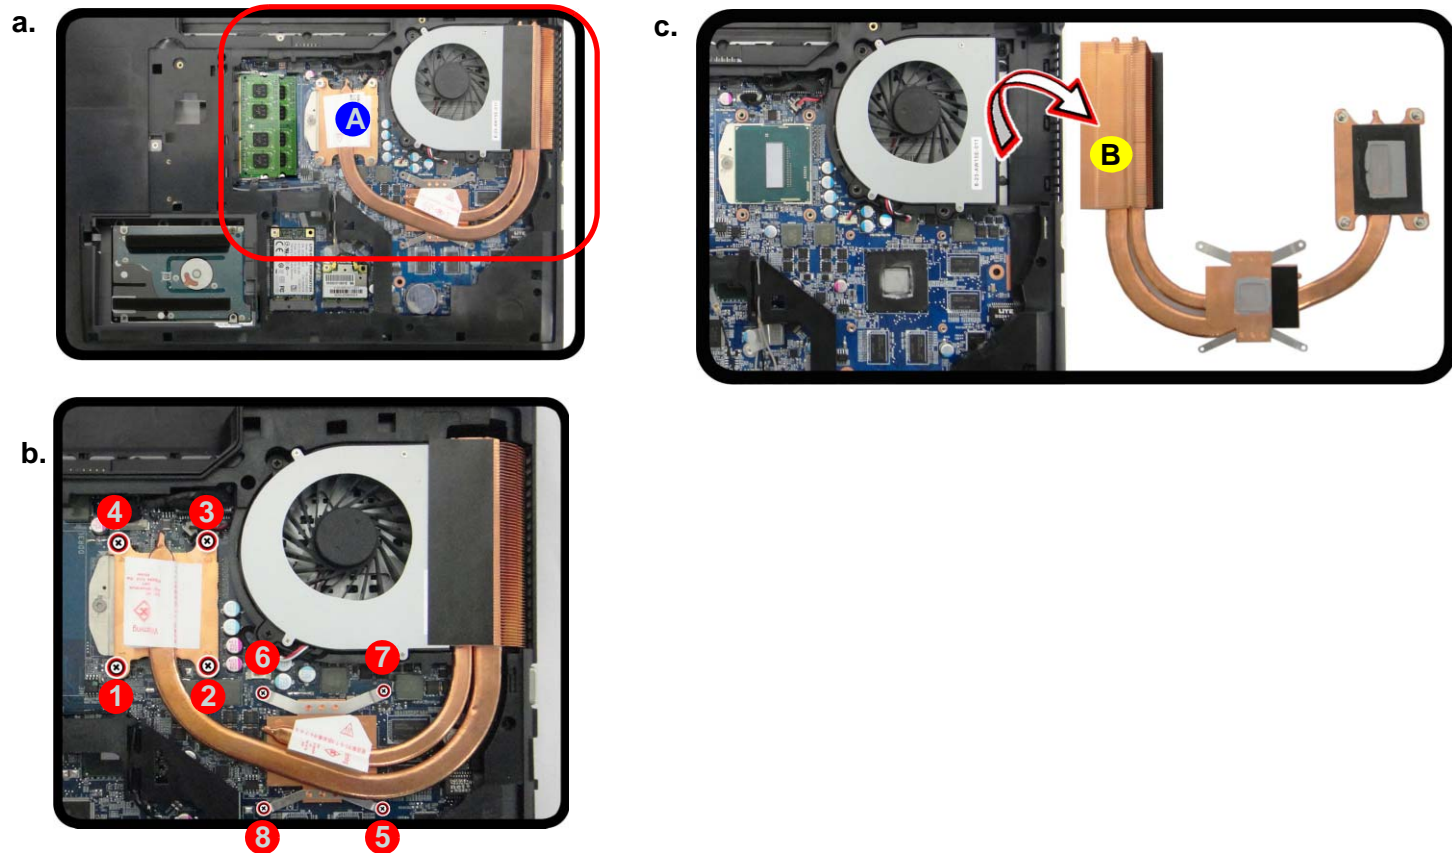


B. Heat Sink


- 8 Screws

5. Turn the release latch **C** towards the unlock symbol  to release the CPU (**Figure 11f**).
6. Carefully (it may be hot) lift the CPU **D** up and out of the socket (**Figure 11g**).
7. Reverse the process to install a new CPU.
8. When re-inserting the CPU, pay careful attention to the pin alignment, it will fit only one way (DO NOT FORCE IT!)

d.

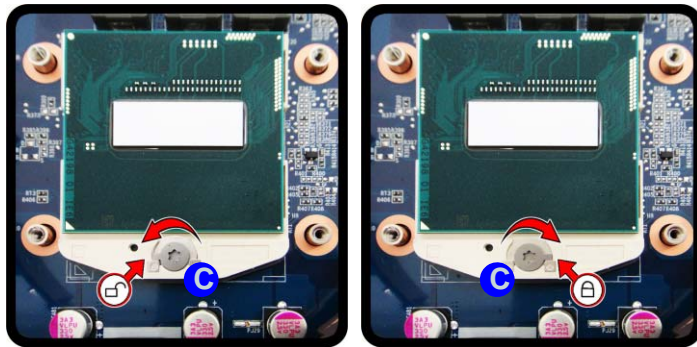

e.

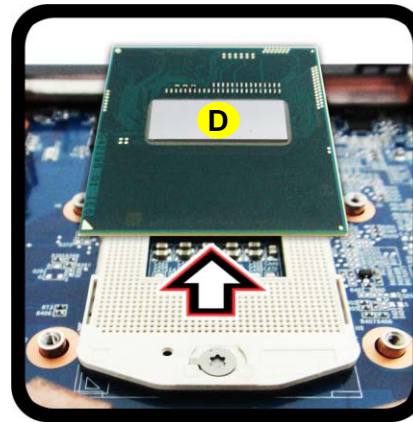

Caution

The heat sink, and CPU area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.



D. CPU


- Figure 11*
Processor Removal (cont'd)
- d. Turn the release latch to unlock the CPU.
 - e. Lift the CPU out of the socket.





Disassembly

Figure 12
Processor Installation


- Insert the CPU.
- Turn the release latch towards the lock symbol.
- Insert the heat sink.
- Tighten the screws.

Processor Installation Procedure

- Insert the CPU **A** (*Figure 12a*), and pay careful attention to the pin alignment; it will fit only one way (DO NOT FORCE IT!), and turn the release latch **B** towards the lock symbol  (*Figure 12b*).
- Remove the sticker C** (*Figure 12c*) from the heat sink unit (if it is a new unit).
- Insert the heat sink **D** as indicated in *Figure 12c*.
- Tighten the CPU heat sink screws in the order **1**, **2**, **3**, **4**, **5**, **6**, **7** & **8** (the order as indicated on the label and *Figure 12d*).
- Replace the CPU fan, component bay cover and tighten the screws (*page 2 - 14*).

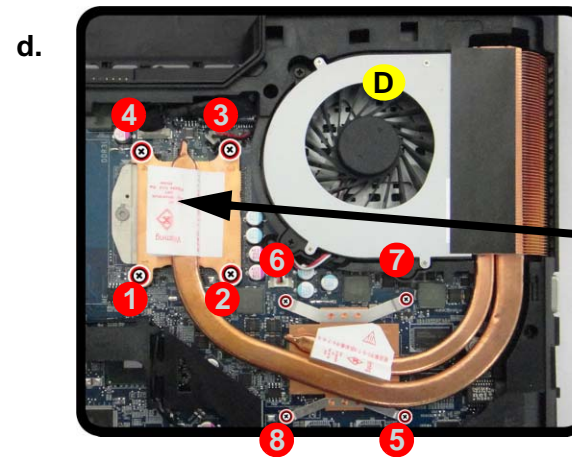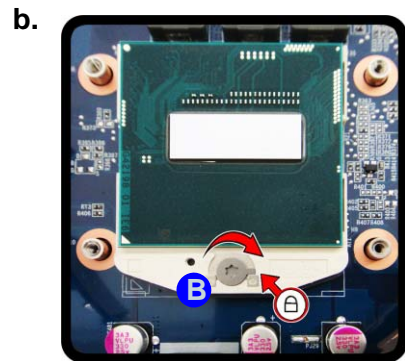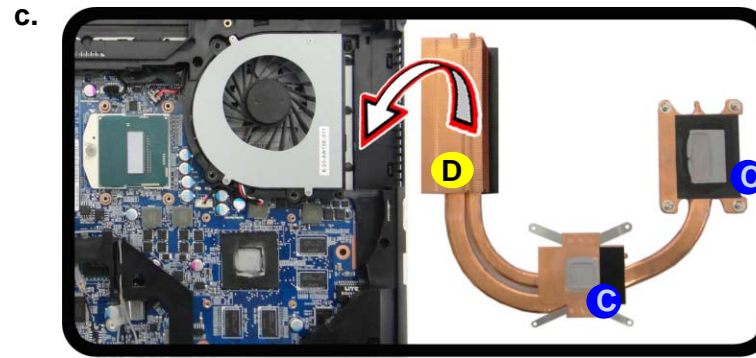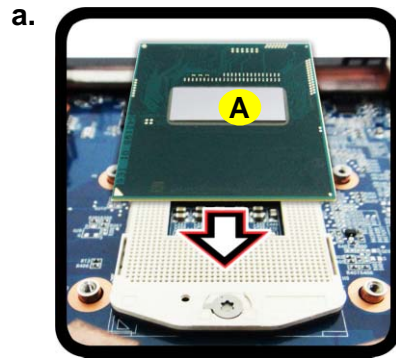

Note:
Tighten the screws in the order as indicated on the label.



- 
- A. CPU
D. Heat Sink
- 4 Screws

Removing the Fan Unit

1. Turn **off** the computer, turn it over, remove the battery ([page 2 - 5](#)), the component bay cover ([page 2 - 7](#)) and CPU ([page 2 - 14](#)).
2. Remove screws **1** - **3** and disconnect the cable **4** ([Figure 13a](#)).
3. Carefully lift the fan unit **5** off the computer ([Figure 13c](#)).
4. Reverse the process to install a new fan unit.
5. When re-inserting the fan unit, pay careful attention to its alignment.

Figure 13
Fan Unit Removal

- a. Remove the screws and disconnect the cable.
- b. Carefully lift the fan unit.

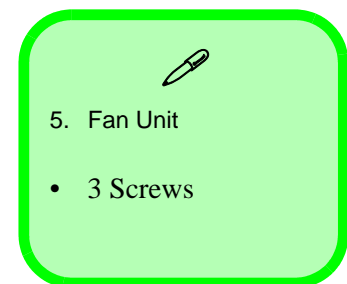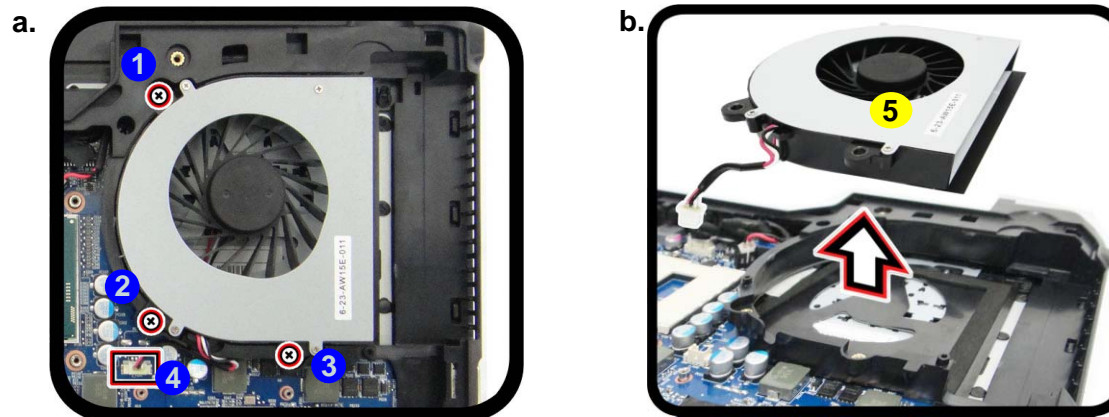

Disassembly




Figure 14
**Wireless LAN
Module Removal**

- Locate the WLAN.
- Disconnect the cables **2** and **3**, and remove the screw **4**.
- The WLAN module will pop up.

Note: Make sure you reconnect the antenna cable to the “1 + 2” socket (*Figure 14b*).

Removing the Wireless LAN Module

- Turn **off** the computer, turn it over, remove the battery (*page 2 - 5*) and the component bay cover (*page 2 - 7*).
- The Wireless LAN module will be visible at point **1** on the mainboard (*Figure 14a*).
- Carefully disconnect the cables **2** & **3**, and then remove the screw **4** (*Figure 14b*).
- The Wireless LAN module **5** (*Figure 14c*) will pop-up, and you can remove it from the computer.

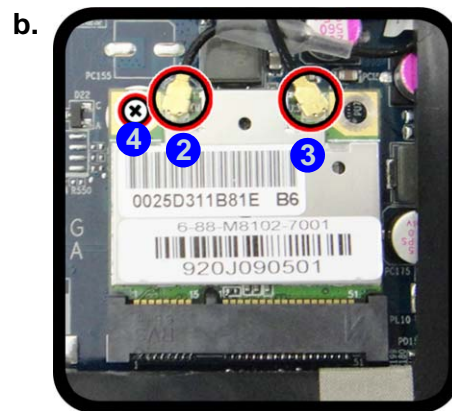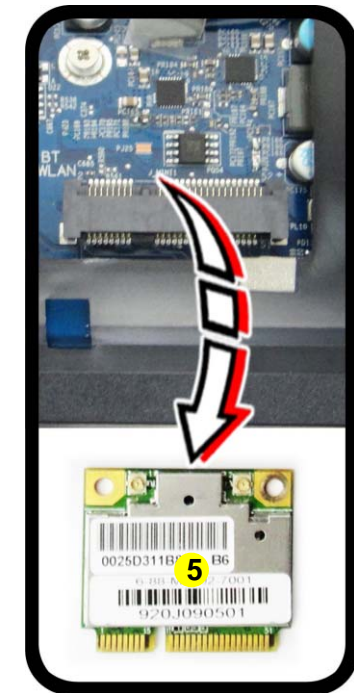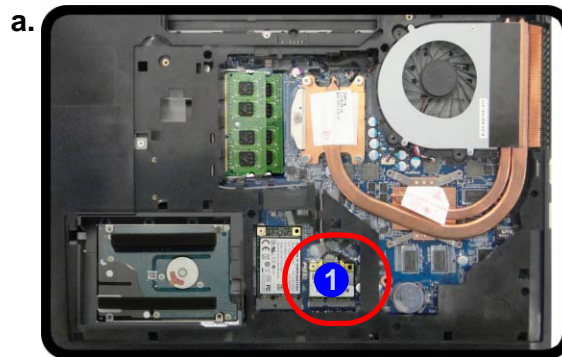

5. Wireless LAN Module

- 1 Screw


Removing the MSATA Module

1. Turn off the computer, remove the battery ([page 2 - 14](#)), and component bay cover ([page 2 - 7](#)).
2. Locate the module, it is visible at point **1** ([Figure 15a](#)).
3. Carefully remove the screw **2** from the module ([Figure 15b](#)).
4. Lift the module **3** up and off the computer ([Figure 15c](#)).



Figure 15
MSATA Module Removal

- a. Locate the module.
- b. Remove the screw.
- c. The module will pop-up.
- d. Lift the module up off the socket.

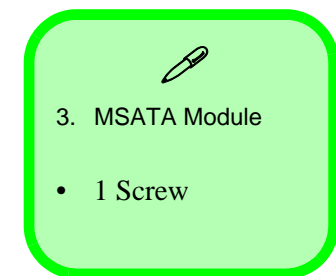


Disassembly


Figure 16
CCD Removal

- Run your fingers around the inner frame of the LCD panel at the points indicated by the arrows.
- Lay the computer down on a flat surface with the top case up forming a 90 degree angle. Push the LCD front panel upwards before carefully lifting it up.
- Remove the LCD front cover.

Removing the CCD

- Turn **off** the computer, turn it over, and remove the battery ([page 2 - 14](#)).
- Run your fingers around the inner frame of the LCD panel at the points as indicated by the arrows **1** - **4**.
- Lay the computer down on a flat surface with the top case up forming a 90 degree angle. Push the LCD front cover **5** upwards before carefully lifting it up.
- Remove the LCD front cover **5** ([Figure 16c](#)).

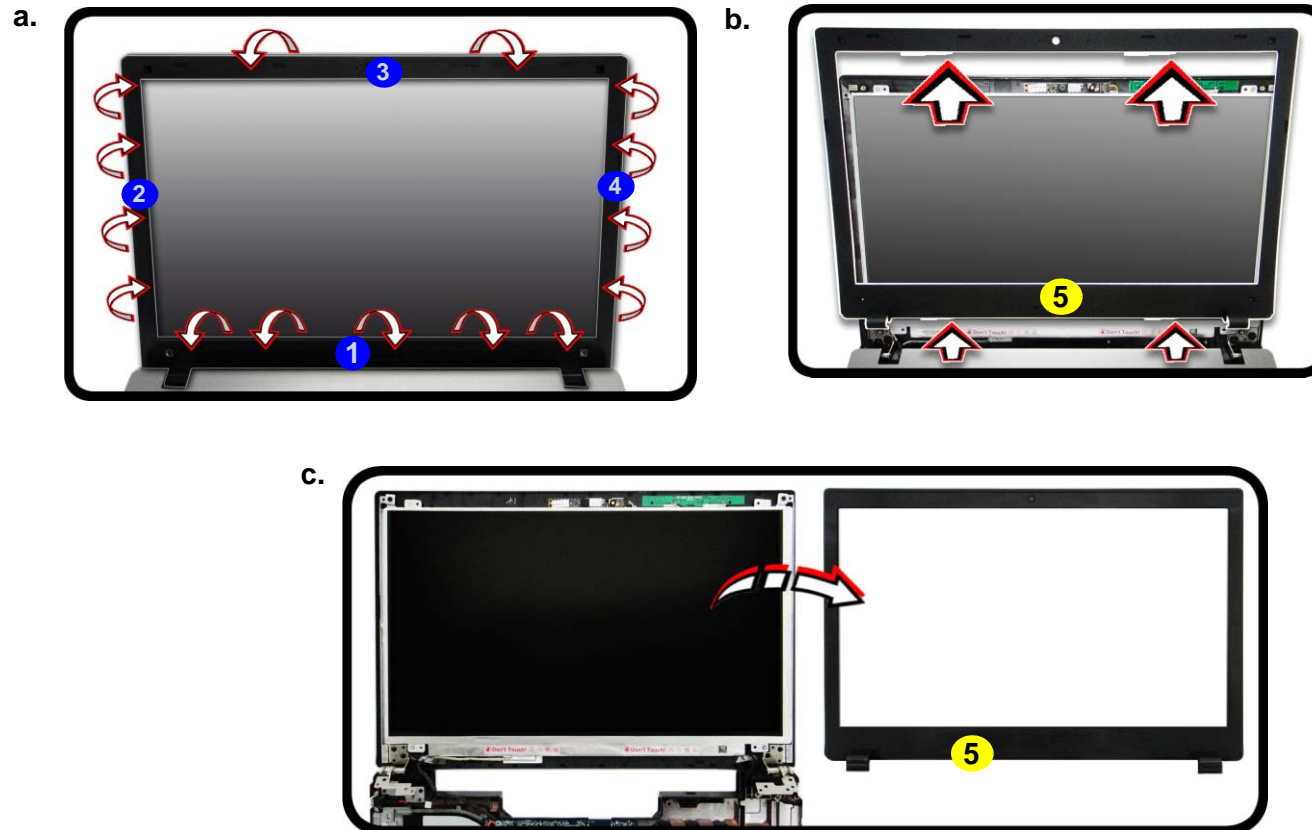


 5. LCD Front Cover

5. Disconnect the cable 6.
6. Remove the CCD module 7 (Figure 17f).
7. Reverse the process to install a new CCD module.


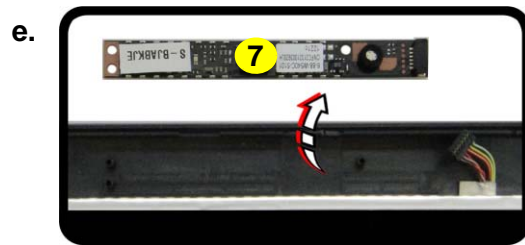


Figure 17
CCD Removal
(cont'd)

- d. Disconnect the cable.
- e. Remove the CCD module.

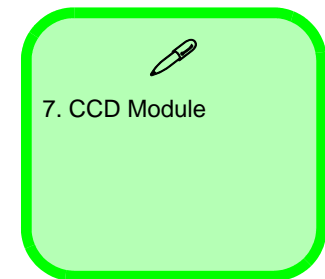

Appendix A:Part Lists

This appendix breaks down the *W670SZQ* series notebook's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

Note: This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

Note: Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

Note: Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.

Part List Illustration Location

The following table indicates where to find the appropriate part list illustration.

Table A - 1
**Part List Illustration
Location**

Part	
Top	<i>page A - 3</i>
Bottom	<i>page A - 4</i>
COMBO	<i>page A - 5</i>
DVD Dual Drive	<i>page A - 6</i>
HDD	<i>page A - 7</i>
2nd HDD	<i>page A - 8</i>
LCD	<i>page A - 9</i>

Top


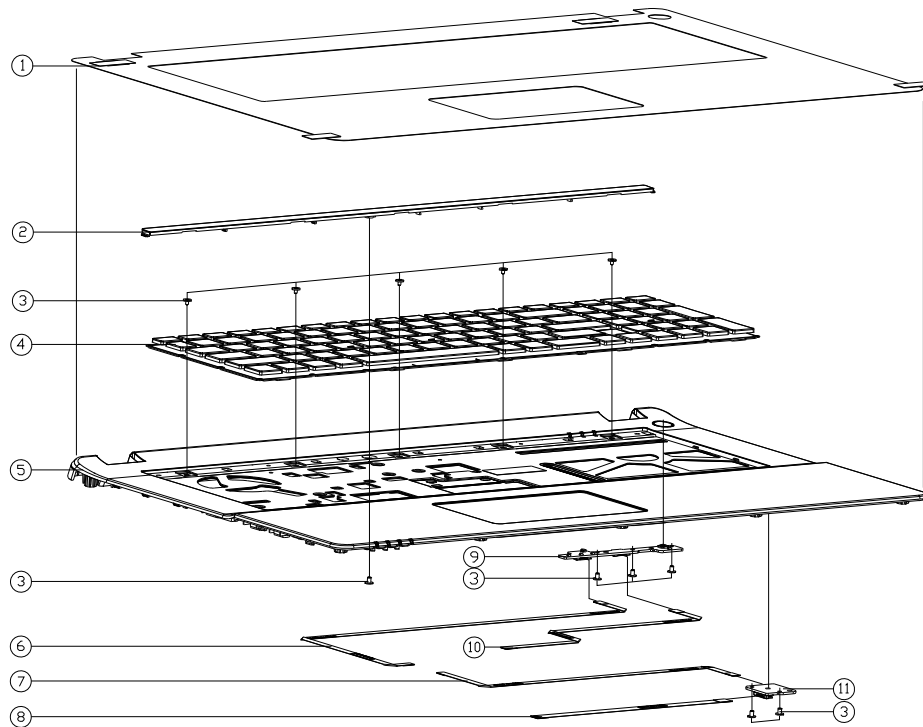


Figure A - 1
Top

ITEM	PART NAME	PART NO	REMARK
1	TOP CASE PROTECTION MYLAR 8825x3869S W670SR0	6-40-W6708-011	
2	KB COVER TN37 15BX W670SR0	6-42-W6702-042	
2	KB COVER TN3715BX W670SR0 FOR DNS	6-42-W6702-042-D	
3	SCREW M2x3L KI NI ICT NY (DD=44.5,DT=0.4)	6-35-B1120-3RE	
4	W/BI K/B US4BLACK/8 FRAME/US) MODULE W670SR0	6-79-W670SR0K-010-W	
5	IDLE 24H-TOP CASE MODULE ASSY W670SR0	6-79-W670SR02-010	
5	IDLE 24H-TOP CASE MODULE FOR LIGHT KB ASSY W670SR0	6-79-W670SR02-020	
6	FFC CABLE FOR MB TO POWER BOARD 4PIN W670SR0CNLS	6-43-W6700-060	
7	FFC CABLE FOR MB TO CLICK BOARD 4PIN W670SR0CNLS	6-43-W6700-040	
8	FFC CABLE FOR CLICK PAD TO CLICK BOARD 6PIN W670SR0CNLS	6-43-W6700-050	
9	POWER SWITCH BOARD V2.0 W670SR0	6-77-W670S-D02	
10	FFC CABLE FOR MB TO POWER BOARD 10PIN W670SR0CNLS	6-43-W6700-070	
11	EXT CLICK BOARD V2.0 W670SR0	6-77-W6702-D02	


Bottom

Figure A - 2
Bottom

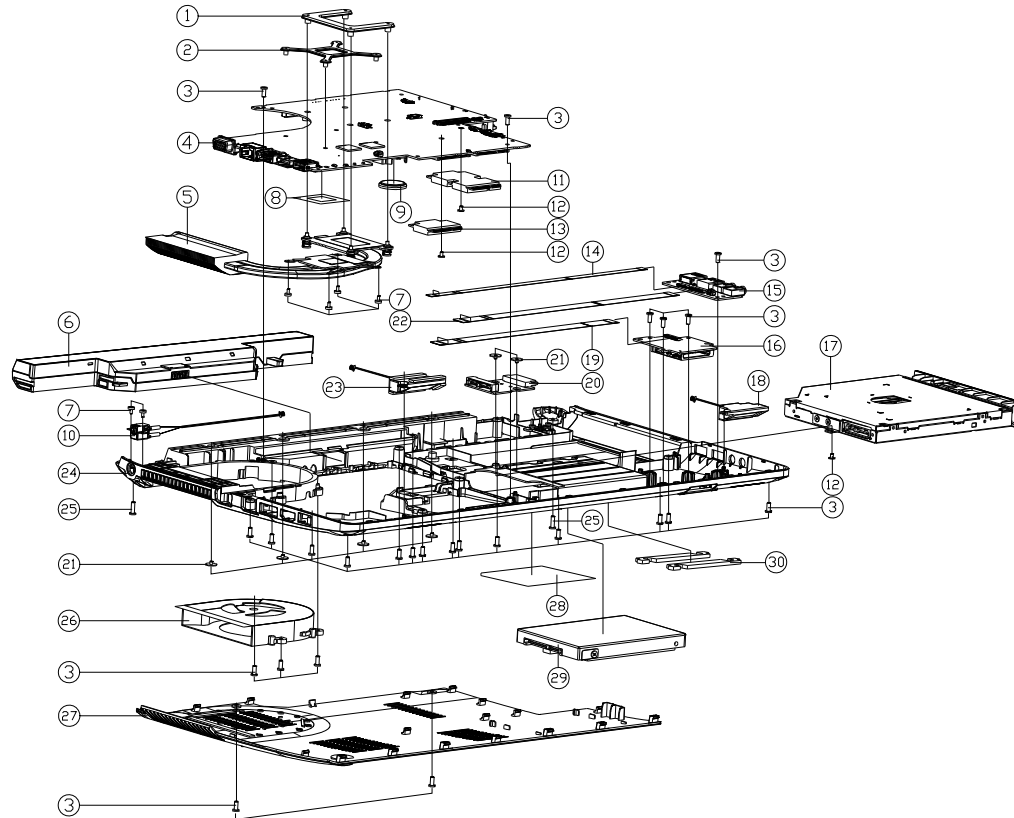

ITEM	PART NAME	PART NO	REMARK
1	CPU SUPPORT BRACKET SEC THIS PISON	6-33-X510S-011	
2	VGA SUPPORTER SUS430 X7200	6-33-X720S-040	FOR W670SRQ
2	VGA SUPPORTER SUS430 W650SH	6-33-W650S-010	FOR W670SHQ
3	SCREW M2.5*6L K BZ ICT NY	6-35-82125-6RA	
4	MAIN BOARD V30 W670SRQ	6-77-W670SRQ-003	
4	MAIN BOARD V30 W670SHQ	6-77-W670SHQ-003	
4	MAIN BOARD V30CW/TPH W670SHQ	6-77-W670SHQ-003-1	
5	CPU HEATSINK MODULE W650SR	6-31-W650N-101	
6	OPTIONAL HARDWARE FOR THE MAIN BOARD (OPTIONAL HARDWARE)	6-87-W650S-4D7A2	COPT IDN
6	OPTIONAL HARDWARE FOR THE MAIN BOARD (OPTIONAL HARDWARE)	6-87-W650S-4B4A2	COPT IDN
6	OPTIONAL HARDWARE FOR THE MAIN BOARD (OPTIONAL HARDWARE)	6-87-W650S-4E42	COPT IDN
6	OPTIONAL HARDWARE FOR THE MAIN BOARD (OPTIONAL HARDWARE)	6-87-W650S-4E42	COPT IDN
7	SCREW M1.6*3.5L KIT112 B45D BZ ICT NY	6-35-82116-3R5	
8	VGA CHIP MLARC 30*30 NBP-CE2 W660U	6-40-M860S-091	FOR W670SRQ
8	VGA CHIP MLARC 30*30 HLE B40 FOR W650SH	6-40-E555S-020	FOR W670SHQ
9	BATTERY 3V 20MA CR2032 OHTSUBISHI	6-23-62015-607	FOR W670SRQ
9	BATTERY 3V 20MA CR2032 OHTSUBISHI	6-23-6A2B2-030	FOR W670SHQ
10	IC CABLE FOR DVD-RW/RE-DRIVE TO THE MAIN BOARD (OPTIONAL HARDWARE)	6-43-W15E0-040	
11	OPTIONAL HARDWARE FOR THE MAIN BOARD (OPTIONAL HARDWARE)	6-88-W230F-4200	COPT IDN
11	OPTIONAL HARDWARE FOR THE MAIN BOARD (OPTIONAL HARDWARE)	6-88-W230F-4200	COPT IDN
11	OPTIONAL HARDWARE FOR THE MAIN BOARD (OPTIONAL HARDWARE)	6-88-W230F-4210	COPT IDN
11	OPTIONAL HARDWARE FOR THE MAIN BOARD (OPTIONAL HARDWARE)	6-88-W345F-9400	COPT IDN
11	OPTIONAL HARDWARE FOR THE MAIN BOARD (OPTIONAL HARDWARE)	6-88-W345F-7000	COPT IDN
11	OPTIONAL HARDWARE FOR THE MAIN BOARD (OPTIONAL HARDWARE)	6-88-P3702-9400	COPT IDN
11	OPTIONAL HARDWARE FOR THE MAIN BOARD (OPTIONAL HARDWARE)	6-88-P3702-7000	COPT IDN
12	SCREW M2.5X KIT NY 100-W5.0T-844	6-35-81120-3RE	
13	OPTIONAL HARDWARE FOR THE MAIN BOARD (OPTIONAL HARDWARE)	6-85-D4032-L00	COPT IDN
14	OPTIONAL HARDWARE FOR THE MAIN BOARD (OPTIONAL HARDWARE)	6-43-W6700-010	
15	AUDIO BOARD V50 W650SR	6-77-W650B-005	
16	CARD READER BOARD PIE V20 W670SRQ	6-77-W670V-012	
17	W/D HDD ASS'Y W670SRQ	6-79-W670SRQ2-000	COPT IDN
17	SATA DVD SUPER MULTI ASSY COPT IDN	6-79-W670SRQ0-000	COPT IDN
17	SATA BLU-RAY WRITER EX ASSY COPT IDN	6-79-W670SRQ0-000	COPT IDN
17	SATA BLU-RAY WRITER EX ASSY COPT IDN	6-79-W670SRQ0-000	COPT IDN
18	SPR-CABLE 4 PIN 12505400 2Y 4J W670SRQ	6-23-5W65E-0R1	
19	OPTIONAL HARDWARE FOR THE MAIN BOARD (OPTIONAL HARDWARE)	6-43-W6700-030	
20	EXT HDD BOARD V20 W670SRQ	6-77-W670N-002	
21	SCREW M2.5X KIT BZ/ ICT NY (W6.146)	6-35-86120-2RE	
22	OPTIONAL HARDWARE FOR THE MAIN BOARD (OPTIONAL HARDWARE)	6-43-W6700-020	
23	SPR-CABLE 4 PIN 12505400 2Y 4J W670SRQ	6-23-5W670-0L0	
24	BOTTOM CASE MODULE W670SRQ	6-39-W6703-011	
25	SCREW M2.5XBL KIT BZ/ NY ICT	6-35-86125-8R0	
26	OPTIONAL HARDWARE FOR THE MAIN BOARD (OPTIONAL HARDWARE)	6-23-AW15E-011	
27	CPU COVER MODULE W670SRQ	6-42-W670B-101	
28	PRODUCT LABEL FOR W670SRQ	6-45-W670SRQ3-010	
28	PRODUCT LABEL FOR W670SHQ	6-45-W670SRQ3-010	
29	W/D 2ND HDD ASSY W670SRQ	6-79-W670SRQJ-030	
29	W/D 2ND HDD ASSY W670SRQ	6-79-W670SRQJ-040	
29	W/D HDD ASS'Y W670SRQ	6-79-W670SRQJ-010	
29	W/HDD ASS'Y W670SRQ	6-79-W670SRQJ-020	
30	SPRNG CRANKLESTI CRANK FOR THE HDD W670SRQ	6-47-0019A-750	

COMBO

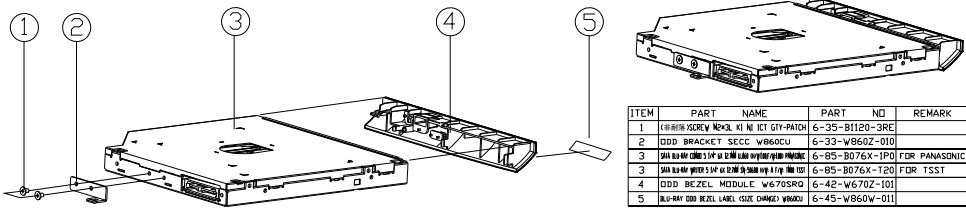


ITEM	PART NAME	PART NO	REMARK
1	SCREW NPKL KI NI ICI GTY-PATH	6-35-B1120-3RE	
2	ODD BRACKET SECC W860CU	6-33-W860Z-010	
3	ODD DRIVE 14.1MM WIDE W/860MM	6-85-B076X-1P0	FOR PANASONIC
3	ODD DRIVE 14.1MM WIDE W/860MM	6-85-B076X-1Z0	FOR TSS1
4	ODD BEZEL MODULE W476SR0	6-42-W670Z-101	
5	ODD BEZEL LABEL (OUT CHANGE) W860	6-45-W860W-011	

Figure A - 3
COMBO

DVD DUAL

Figure A - 4
DVD DUAL

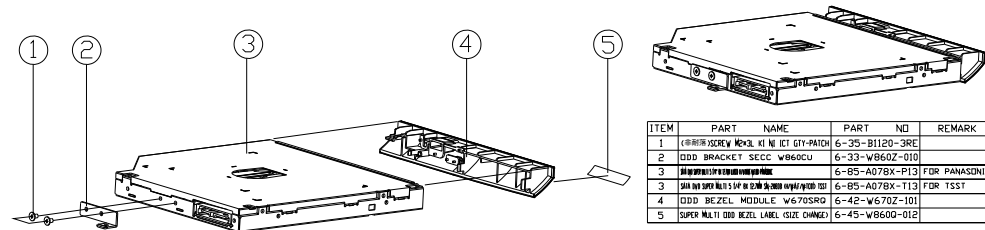

ITEM	PART NAME	PART NO	REMARK
1	SCREW (PHILIPS) M3.0 X 1.0 (CT-PTD)	6-35-B1120-3RE	
2	ODD BRACKET SECC W/60CU	6-33-W860Z-010	
3	ODD BEZEL MODULE W/670SRD	6-B5-A078X-T13	FDR PANASONIC
3	ODD BEZEL MODULE W/670SRD	6-B5-A078X-T13	FDR YSST
4	ODD BEZEL MODULE W/670SRD	6-42-W670Z-101	
5	SUPER MULTI ODD BEZEL LABEL (SIZE CHANGED)	6-45-W8600-012	

HDD


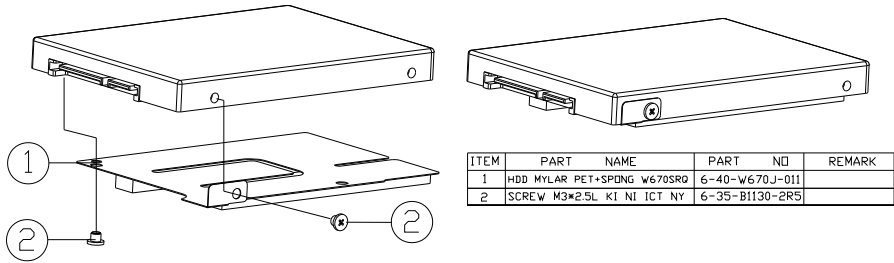


Figure A - 5
HDD




2nd HDD

Figure A - 6
2nd HDD

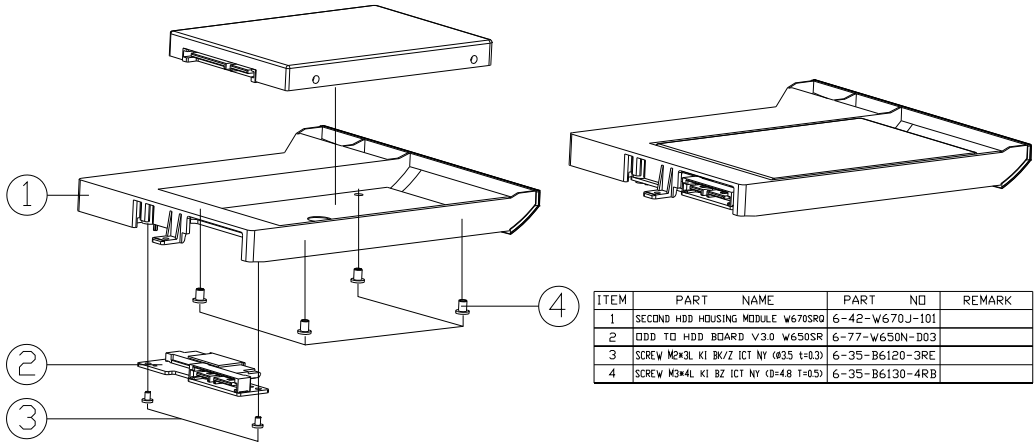

ITEM	PART NAME	PART NO	REMARK
1	SECOND HDD HOUSING MODULE W670SR0	6-42-W670J-101	
2	HDD TO HDD BOARD V3.0 W650SR	6-77-W650N-D03	
3	SCREW M2*3L KI BK/2 ICT NY (Ø25 ±0.3)	6-35-B6120-3RE	
4	SCREW N3*4L KI BZ ICT NY (Ø4.8 T=0.5)	6-35-B6130-4RB	

LCD

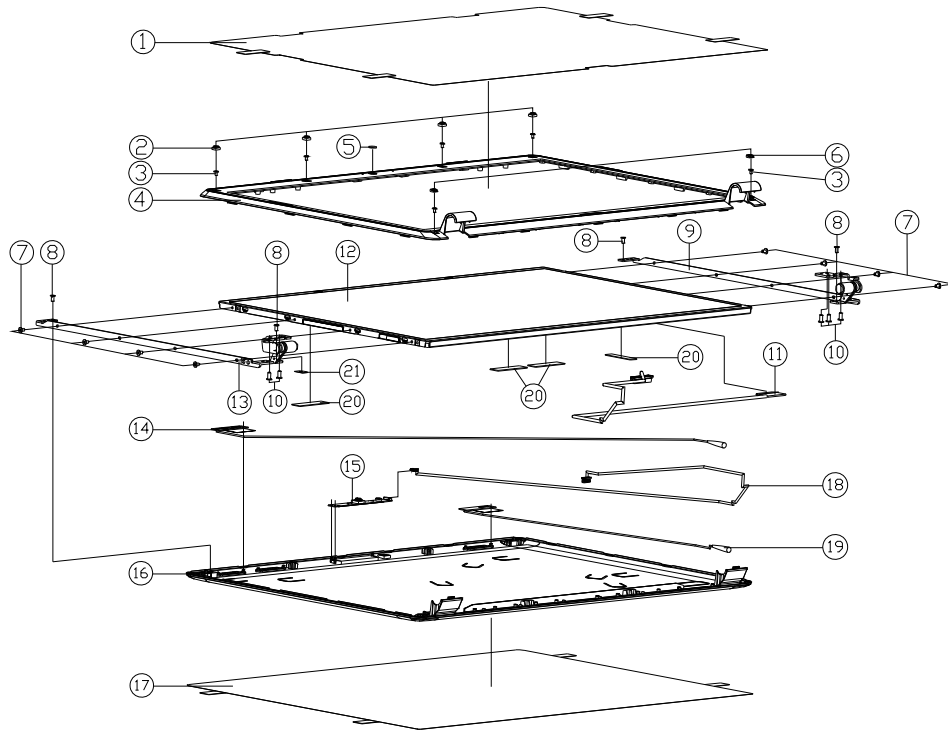

ITEM	PART NAME	PART NO	REMARK
1	LCD FRONT COVER PROTECTION M/LAR (MP) W670SRD	6-40-W6701-011	
2	FRONT UP RUBBER (MP) FOR W670SRD	6-47-W6701-021	
3	SCREW M2*4L KT BZ ICT NY	6-35-B6120-4RA	
4	LCD FRONT COVER MODULE (MP) FOR W670SRD	6-39-W6701-011	
5	CCD LENS PMMA W650SR	6-42-W6501-010	
6	FRONT DOWN RUBBER (MP) FOR W670SRD	6-47-W6701-031	
7	SCREW M2*3L KT NI ICT NY (RD-045.01-84)	6-35-B1120-3RE	
8	SCREW M2.5*5L KT BK/Z ICT NY	6-35-B6125-5RA	
9	LCD HINGE R (MP) W670SRD	6-33-W6701-0R1	
10	SCREW M2.5*6L K BZ ICT NY	6-35-B2125-6RA	
11	WIRE CABLE FOR LIVE (DUAL) FROM (L) LC (CONNECTION) W670SRD	6-43-W6701-011-L	
12	LCD 17.3" FHD (CHINE) M1734GE-111 QLED 60 MM	6-50-NB260-D01	
12	LCD 17.3" HD LG LP173WJ01-1E1 QLED 60 MM	6-50-NA160-L08	
12	LCD 17.3" HD AU B2720V01 V5 QLED TYPED QLED 60MM	6-50-NA158-G03	
12	LCD 17.3" HD LG LP173WJ01-1E1 QLED 60 MM	6-50-NA160-L09	
12	LCD 17.3" FHD (CHINE) M1734GE-1E1 QLED TYPED QLED 60 MM	6-50-NB260-D00	
13	LCD HINGE L (MP) W670SRD	6-33-W6701-0L1	
14	AVC/MVA WIRE WIRE FOR (R) LG (CONNECTION) W670SRD	6-23-7W670-030	
15	AVC CHECK RUBBER (RUBBER) FOR THE (R) LG (CONNECTION) W670SRD	6-88-W540C-4902	
15	AVC CHECK RUBBER (RUBBER) FOR THE (R) LG (CONNECTION) W670SRD	6-88-W540C-5102	
16	LCD BACK COVER MODULE (MP) FOR W670SRD	6-39-W6701-021	
17	LCD BACK COVER PROTECTION M/LAR (MP) W670SRD	6-40-W6701-021	
18	WIRE CABLE FOR CCD (590MM) ONLY W670SRD	6-43-W6701-011	
19	AVC/MVA WIRE WIRE FOR (R) LG (CONNECTION) W670SRD	6-23-7W670-020	
20	M/B LED SPONGE CR4305 (CHANGE) M100	6-47-M110S-031	FOR W670SRD For Dry AIG Panel Use
21	HINGE L GASKET (195*73*0.2) FOR W670SRD	6-47-00190-950	

Figure A - 7
LCD



Appendix B: Schematic Diagrams

This appendix has circuit diagrams of the *W670SZQ* notebook's PCB's. The following table indicates where to find the appropriate schematic diagram.

Diagram - Page	Diagram - Page	Diagram - Page
<i>System Block Diagram - Page B - 2</i>	<i>VGA I/O - Page B - 18</i>	<i>HDD, TP, Audio, USB - Page B - 34</i>
<i>Processor 1/7-DMI, FDI, PEG - Page B - 3</i>	<i>VGA NVVDD Decoupling - Page B - 19</i>	<i>HDMI, RJ45, Fan, KBC, LED - Page B - 35</i>
<i>Processor 2/7- CLK, MISC - Page B - 4</i>	<i>CRT, Holes - Page B - 20</i>	<i>AUDIO CODEC VT1802S - Page B - 36</i>
<i>Processor 3/7- (DDR3) - Page B - 5</i>	<i>Lynx 1/9 - Page B - 21</i>	<i>KBC-ITE IT8587 - Page B - 37</i>
<i>Processor 4/7- Power - Page B - 6</i>	<i>Lynx 2/9 - Page B - 22</i>	<i>5VS, 3VS, 3.3VM, 5VM - Page B - 38</i>
<i>Processor 5/7- GFX PWR - Page B - 7</i>	<i>Lynx 3/9 - Page B - 23</i>	<i>1.05V - Page B - 39</i>
<i>Processor 6/7- GND - Page B - 8</i>	<i>Lynx 4/9 - Page B - 24</i>	<i>VDD3, VDD5 - Page B - 40</i>
<i>Processor 7/7- RSVD - Page B - 9</i>	<i>Lynx 5/9 - Page B - 25</i>	<i>1.5V or 1.35V / 0.75VS, 1.5VS - Page B - 41</i>
<i>DDR3 SO-DIMM_1 - Page B - 10</i>	<i>Lynx 6/9 - Page B - 26</i>	<i>POWER VCORE - Page B - 42</i>
<i>DDR3 SO-DIMM_2 - Page B - 11</i>	<i>Lynx 7/9 - Page B - 27</i>	<i>N14P, NVVDD, PEX, FBVDDQ - Page B - 43</i>
<i>PS8625 - Page B - 12</i>	<i>Lynx 8/9 - Page B - 28</i>	<i>AC IN, CHARGER - Page B - 44</i>
<i>PANEL, INVERTER - Page B - 13</i>	<i>Lynx 9/9 - Page B - 29</i>	<i>AUDIO BOARD - Page B - 45</i>
<i>VGA PCI-E Interface - Page B - 14</i>	<i>3G, WLAN, PCIE, CON - Page B - 30</i>	<i>POWER SWITCH BOARD - Page B - 46</i>
<i>VGA Frame Buffer Interface - Page B - 15</i>	<i>USB Charge, CCD, TPM, Power Con - Page B - 31</i>	<i>ODD to HDD BOARD - Page B - 47</i>
<i>VGA Frame Buffer A - Page B - 16</i>	<i>eSATA/USB3.0, LED - Page B - 32</i>	
<i>VGA Frame Buffer C - Page B - 17</i>	<i>Card Reader (RTL8411) - Page B - 33</i>	

Table B - 1
**SCHEMATIC
DIAGRAMS**




Version Note

The schematic diagrams in this chapter are based upon version 6-7P-W6504-005. If your mainboard (or other boards) are a later version, please check with the Service Center for updated diagrams (if required).




System Block Diagram

Sheet 1 of 46
System Block
Diagram

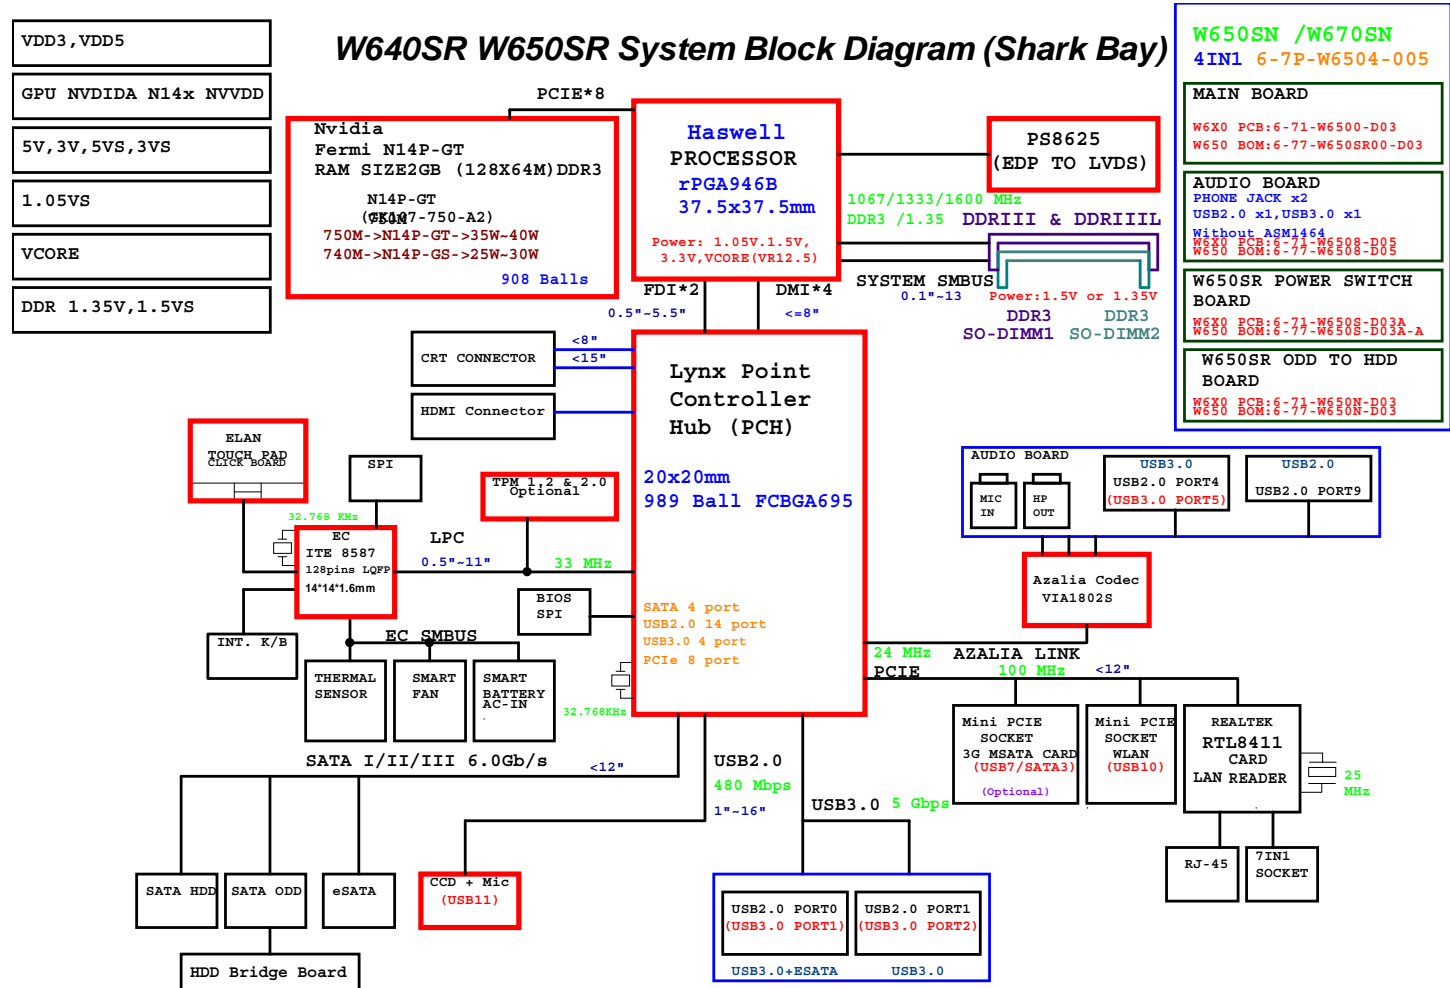

Processor 1/7-DMI, FDI, PEG

 Haswell rPGA Processor 1/7 (DMI,PEG,FDI)

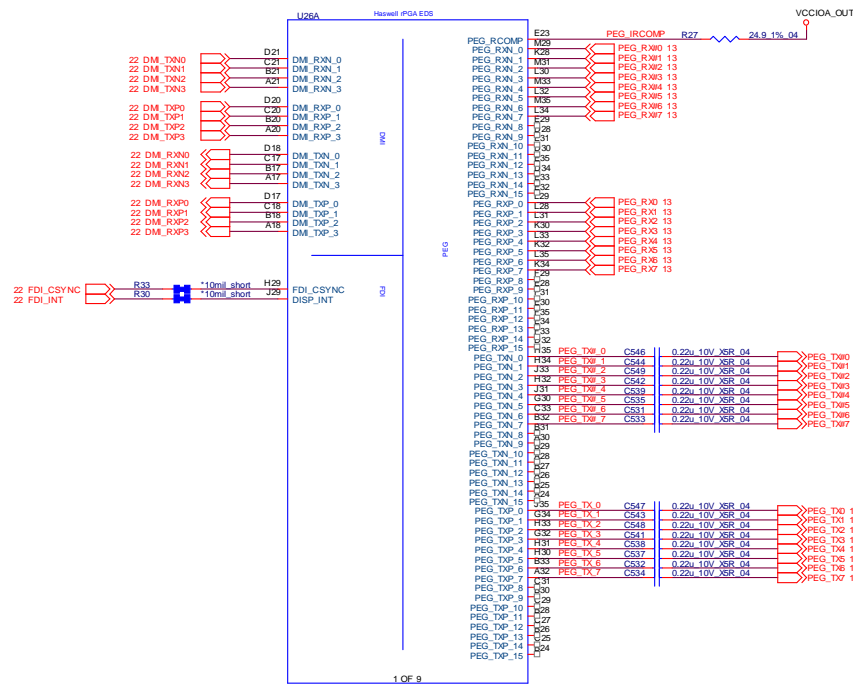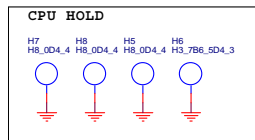


Sheet 2 of 46
Processor 1/7-DMI,
FDI, PEG



B.Schematic Diagrams

Processor 2/7- CLK, MISC

Sheet 3 of 46
Processor 2/7-CLK,
MISC

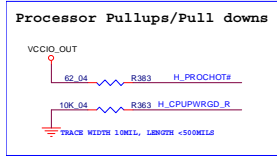








Haswell Processor 2/7 (CLK,MISC,JTAG)

 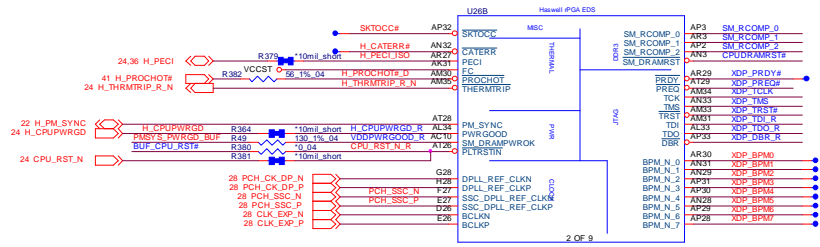

DDR3 Compensation Signals




PU/PD for JTAG signals

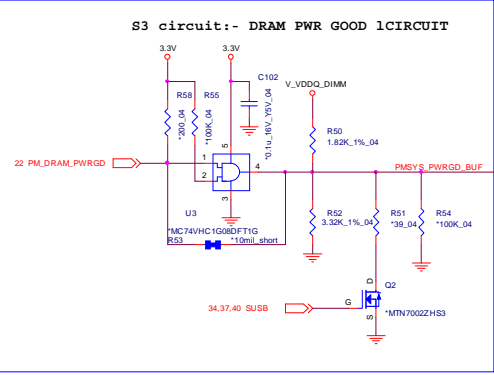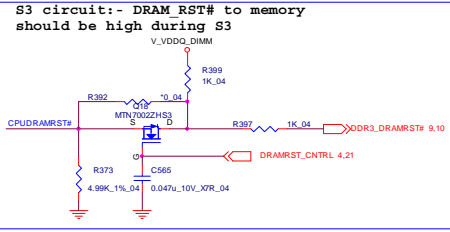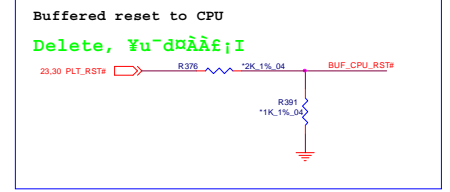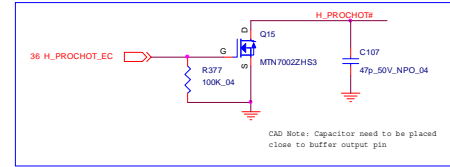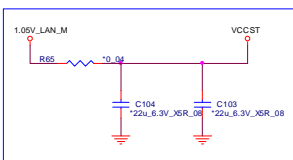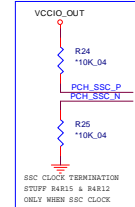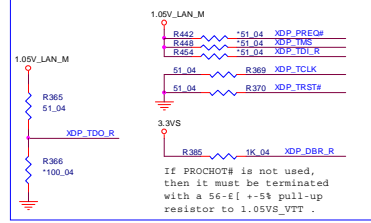

- 4.5,9,10,40 V_VDDQ_DIMM
- 6,6 VCCIO_OUT
- 6,26,27,38,41,42,1,05V_LAN_M
- 2,12,17,20,24,25,27,28,29,31,33,35,37,38,40,42,3,3V
- 6,9,10,11,12,19,20,21,22,23,24,26,27,28,29,30,31,32,33,34,35,36,37,41,3,3V5

Processor 3/7-(DDR3)

Haswell Processor 3/7 (DDR3)

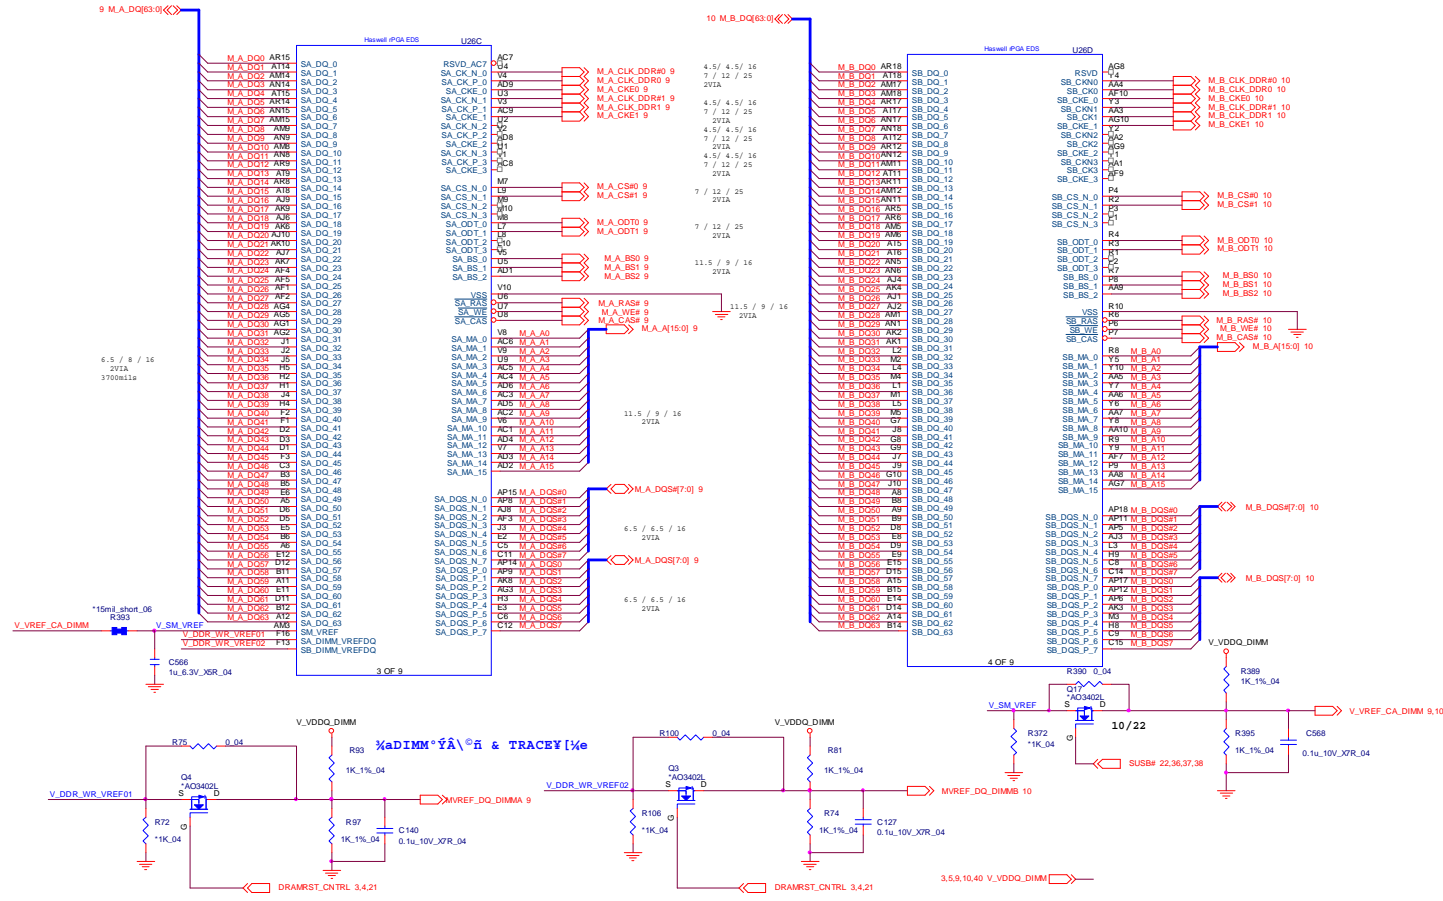


Sheet 4 of 46
Processor 3/7-
(DDR3)

Processor 4/7- Power


Haswell Processor 4/7 (POWER)

Sheet 5 of 46
Processor 4/7-
Power

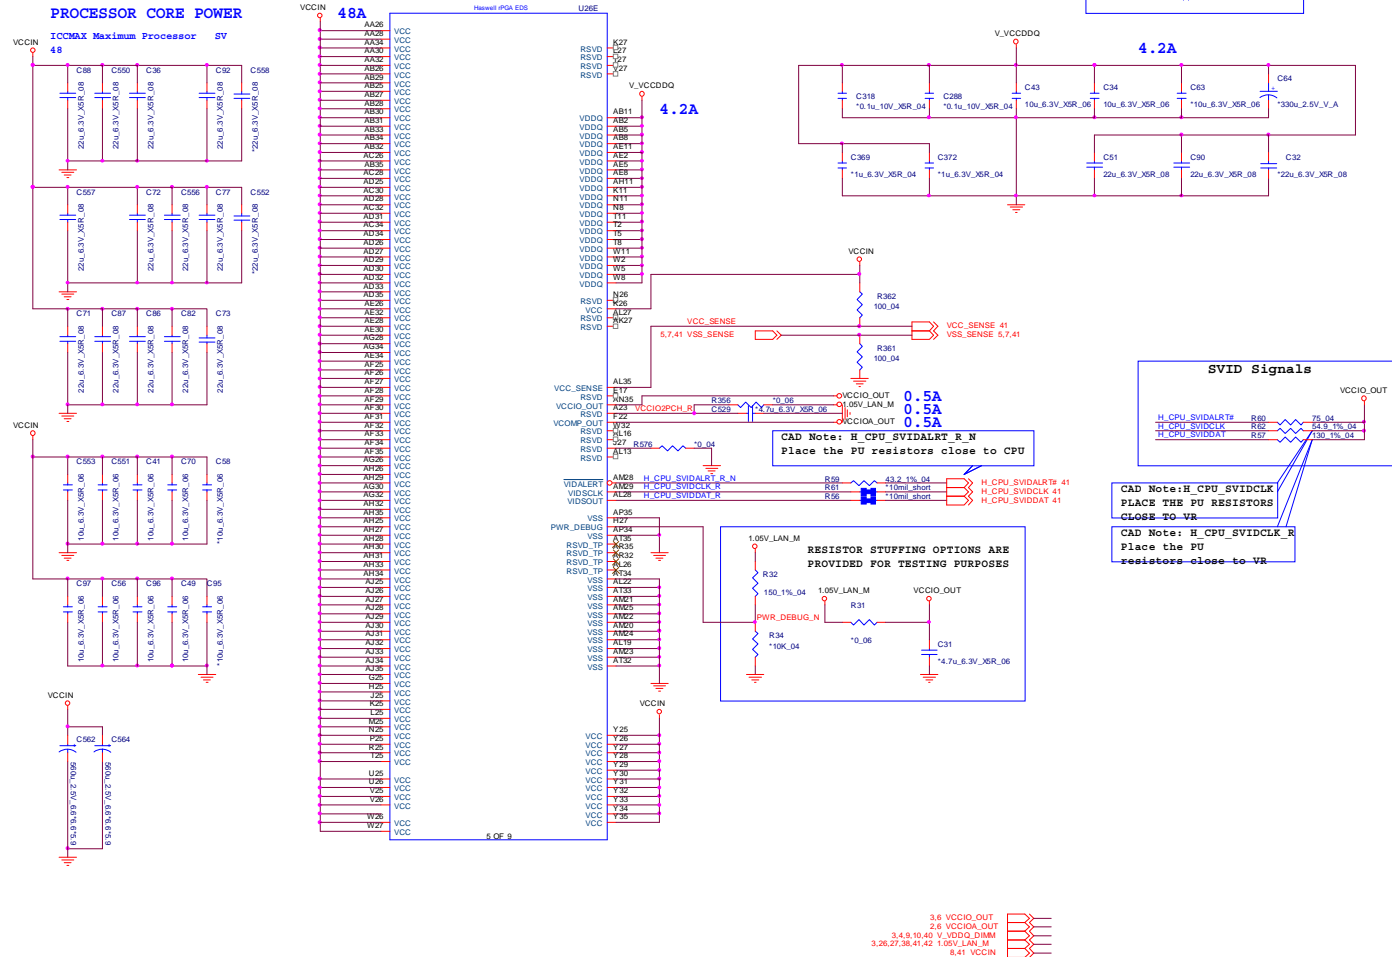

Processor 5/7- GFX PWR

Haswell Processor 5/7 (GRAPHICS POWER)

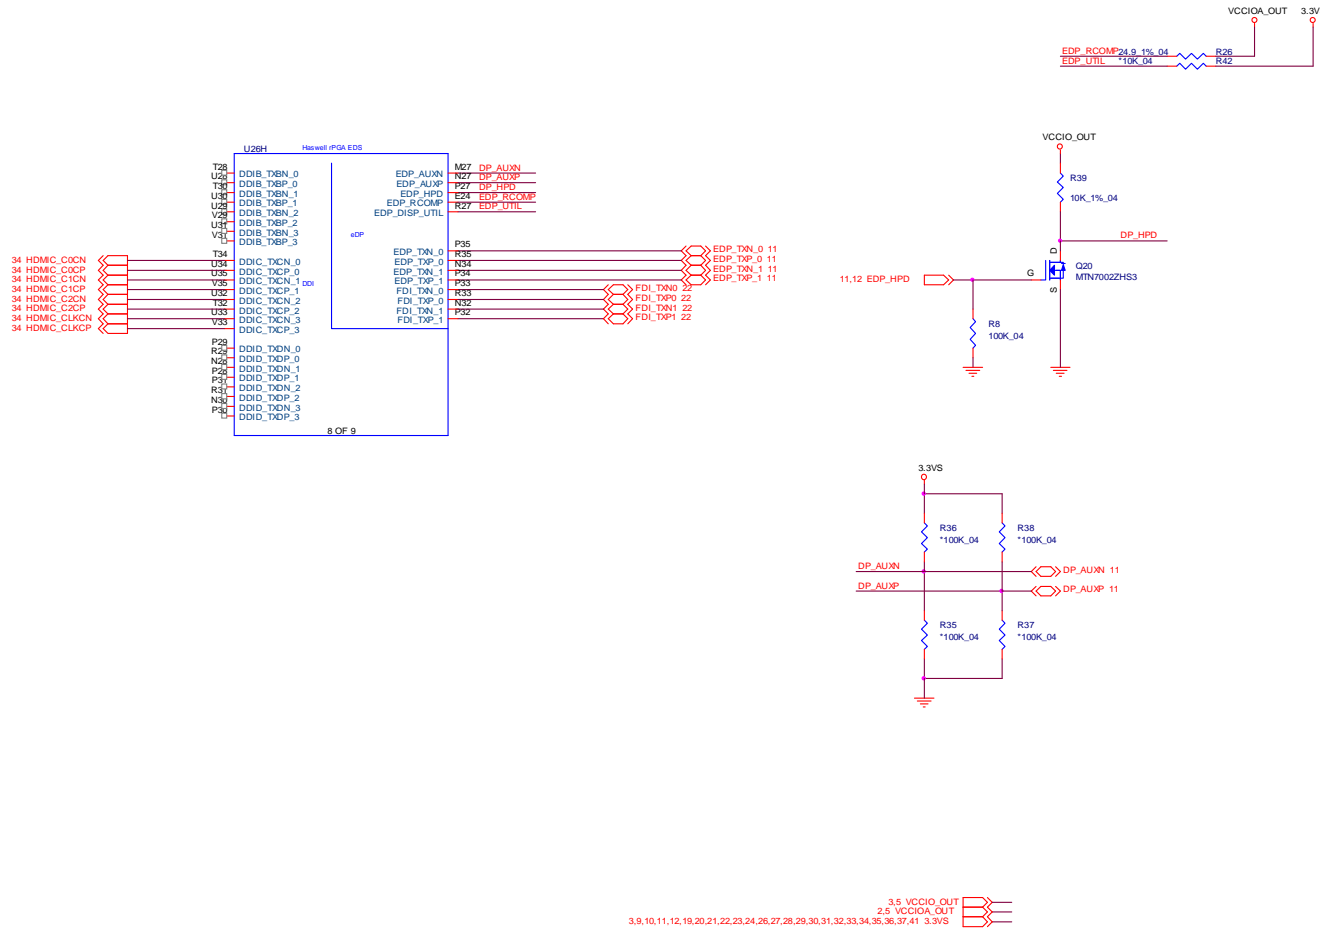


Sheet 6 of 46
Processor 5/7- GFX
PWR

Schematic Diagrams

Processor 6/7- GND

Sheet 7 of 46
Processor 6/7- GND

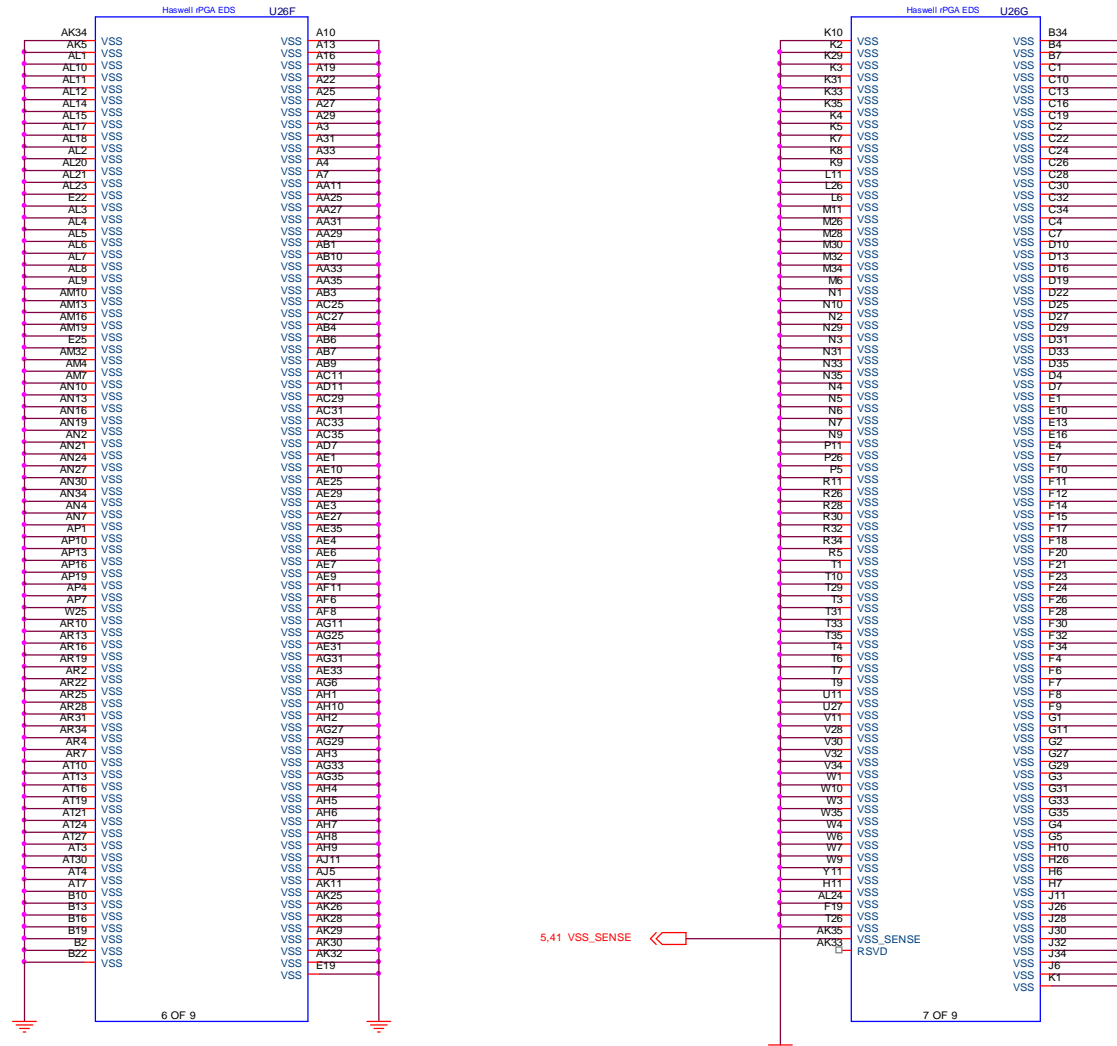

Processor 7/7- RSVD

Haswell Processor 7/7 (RESERVED)

CFG Straps for Processor

PCI EXPRESS STATIC LANE REVERSAL FOR ALL FEG PORTS

CFG2	1: (DEFAULT)NORMAL OPERATION; (Default) LANE# DEFINITION MATCHES 0: LANE REVERSAL
------	---

DISPLAY PORT PRESENCE STRAP


CFG4	1: DISABLED; NO PHYSICAL DISPLAY PORT ATTACHED TO EMBEDDED DISPLAY PORT 0:ENABLED; AN EXTERNAL DISPLAY PORT DEVICE AN EXTERNAL DISPLAY PORT DEVICE IS CONNECTED TO THE EMBEDDED DISPLAY PORT
------	---

PCIe Port Bifurcation Straps

CFG [6 : 5]	11: DEVICE1 FUNTION1 , DEVICE 1 FUNCTION2 DISABLED 10: DEVICE1 FUNCTION1 ENABLED,DEVICE1 FUNCTION 2 DISABLED 01: DEVICE 1 FUNCTION 1 DISABLED, DEVICE 1 FUNCTION 2 ENABLED 00: DEVICE 1 FUNCTION 1 ENABLED, DEVICE 1 FUNCTION 2 ENABLED
-------------	--

DEFENSIVE PULL DOWN SITE

NOTE:
PHYSICAL_DEBUG_ENABLED (DFX PRIVACY)
0 : ENABLED SET DFX ENABLED BIT IN DEBUG INTERFACE MSR
1 : DISABLED

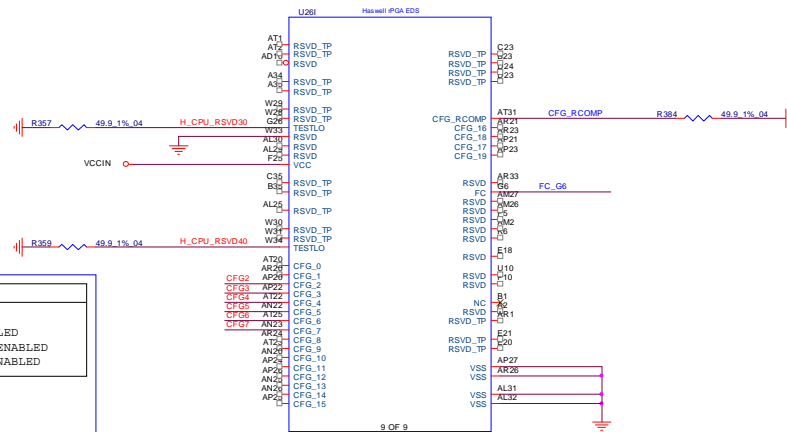

NOTE:
RESERVE THIS CIRCUIT FOR FUTURE COMPATIBILITY

5.41 VCCIN

Sheet 8 of 46
Processor 7/7-
RSVD

DDR3 SO-DIMM_1


SO-DIMM A_0

CHANGE TO STANDARD

5.2mm
6-86-24204-005
6-86-24204-002

B.Schematic Diagrams


Sheet 9 of 46
DDR3 SO-DIMM_0

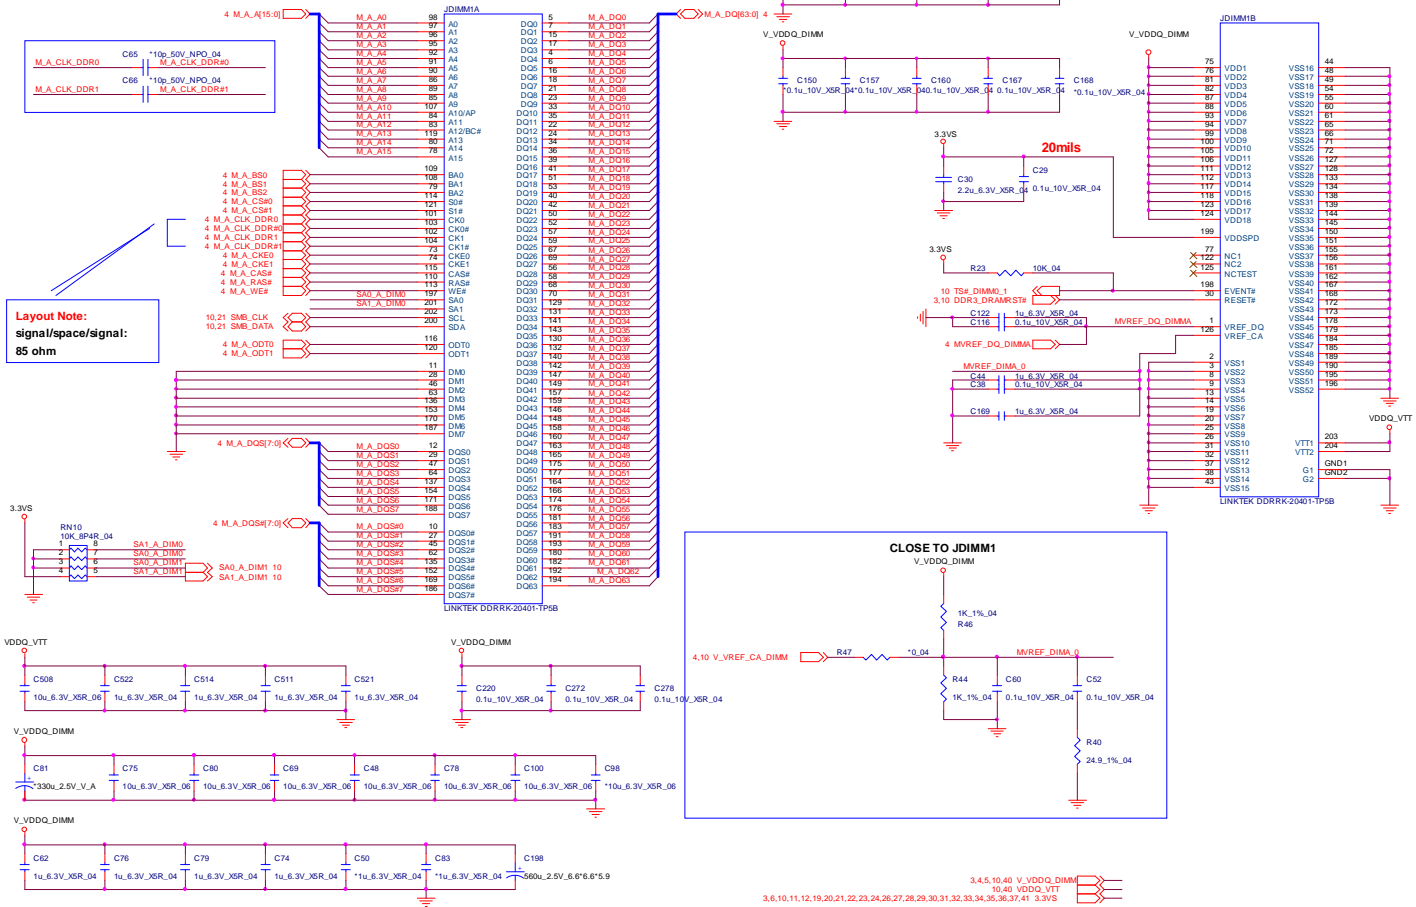

DDR3 SO-DIMM_2


SO-DIMM B_0

CHANGE TO STANDARD

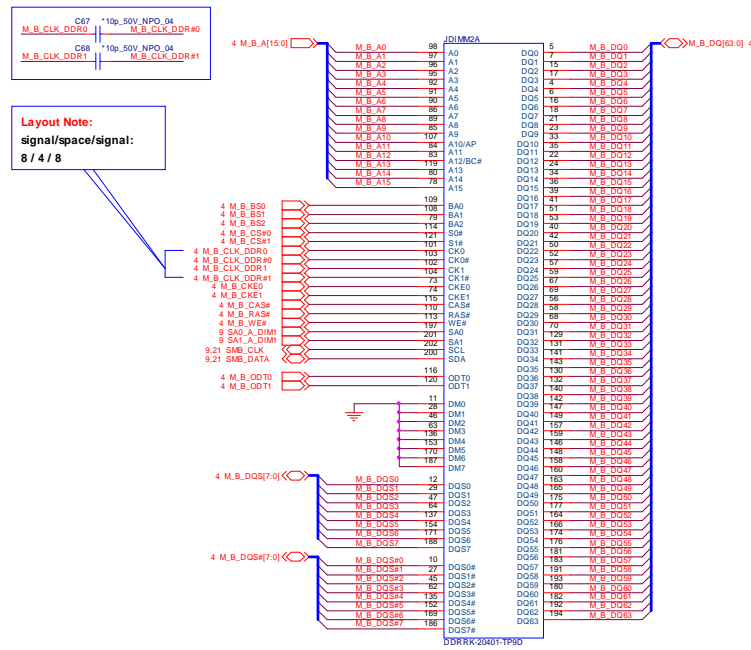



Layout Note:
signal/space/signal:
8 / 4 / 8

Layout Note:
JDIMM2 is placed farther from the GMCH than JDIMM1

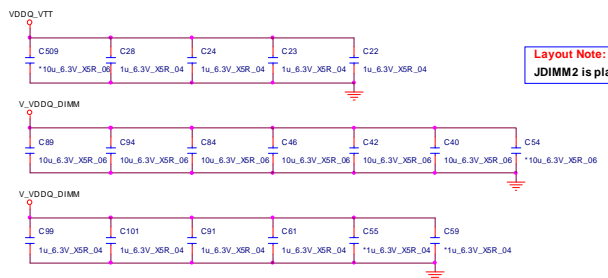

3.4,5,9,40 V_VDDQ_DIMM
9,40 VDDQ_VTT
3,6,9,11,12,19,20,21,22,23,24,26,27,28,29,30,31,32,33,34,35,36,37,41 3.3VS

9.2mm
6-86-24204-001
6-86-24204-006

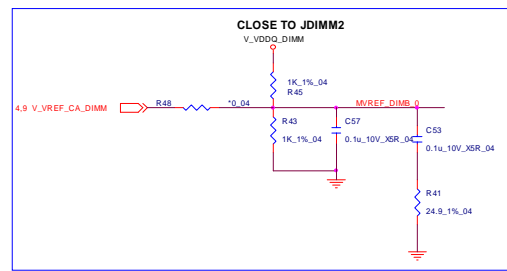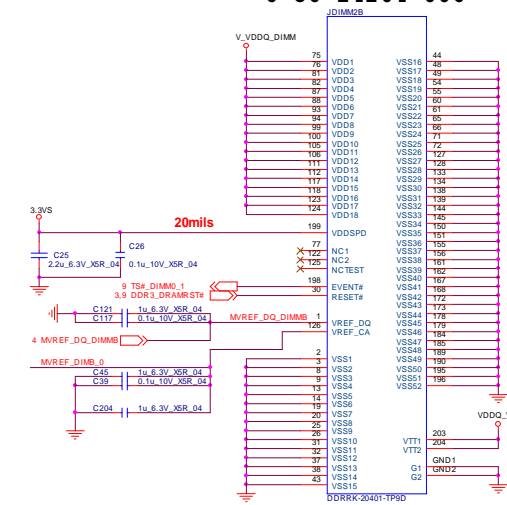


Sheet 10 of 46
DDR3 SO-DIMM_1

B.Schematic Diagrams

PS8625


Sheet 11 of 46
PS8625

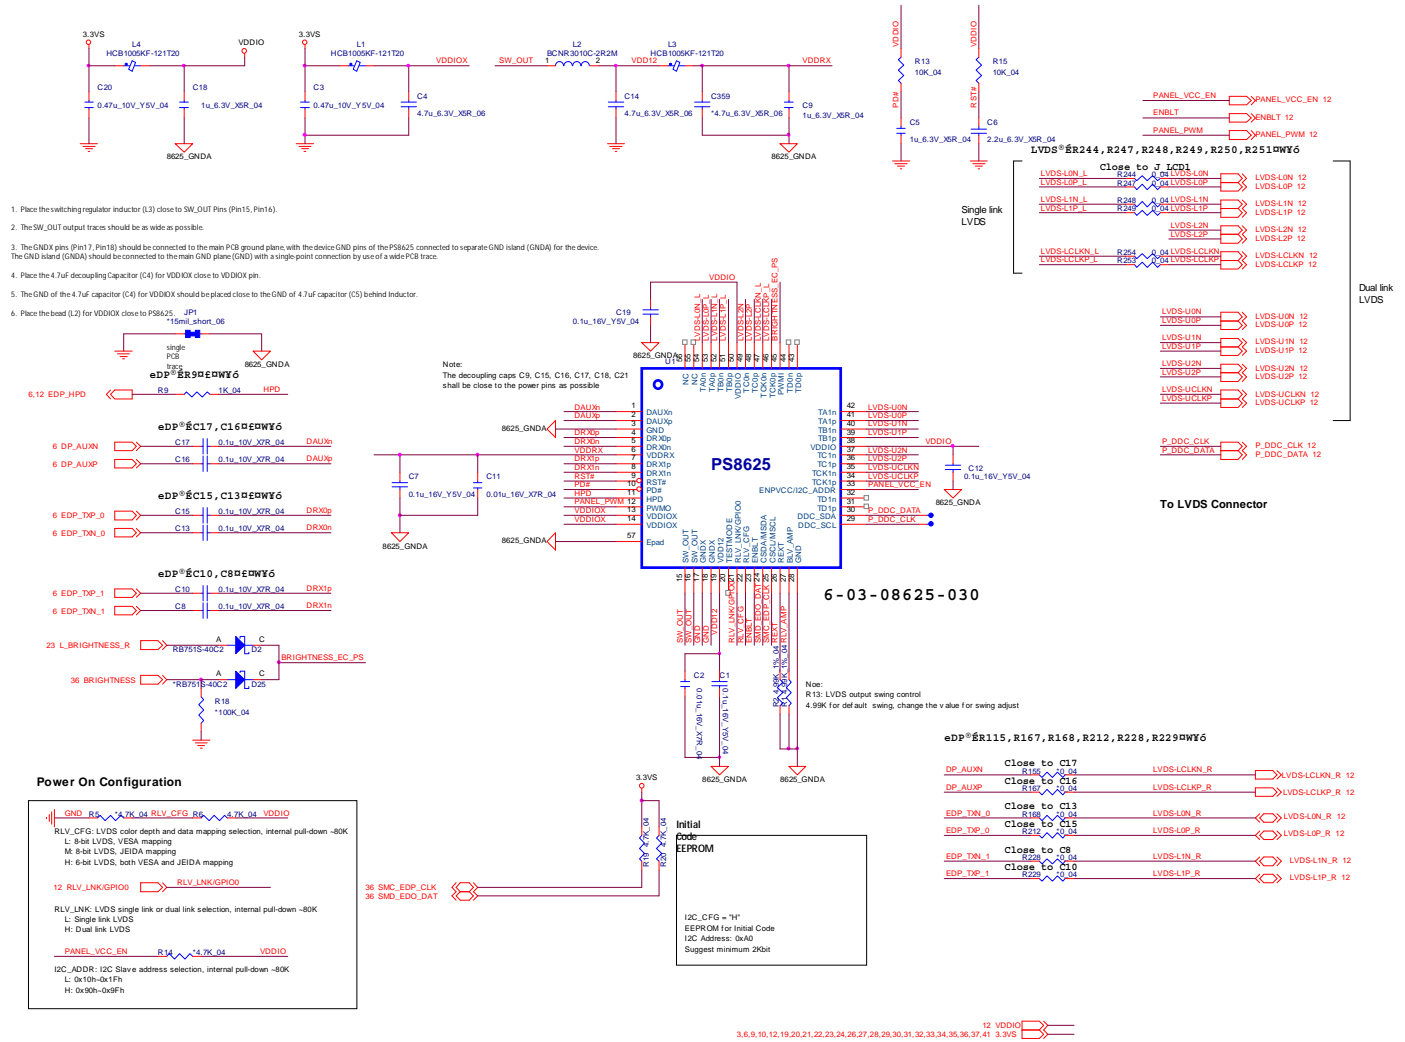


PANEL, INVERTER

PANEL CONNECTOR (30Pin_eDP & 40Pin_LVDS CO-lay)

LED PANEL (LVDS Dual Channel).

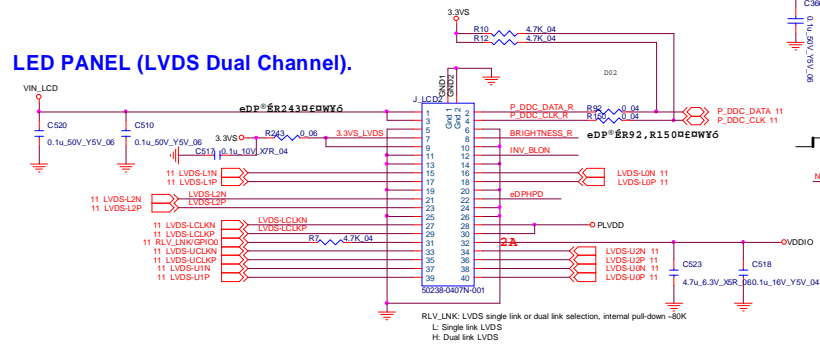


40pin connector @ E, -n±N30pin
connector @ F, -n±N30pin
pad; U⁰O¹K±½

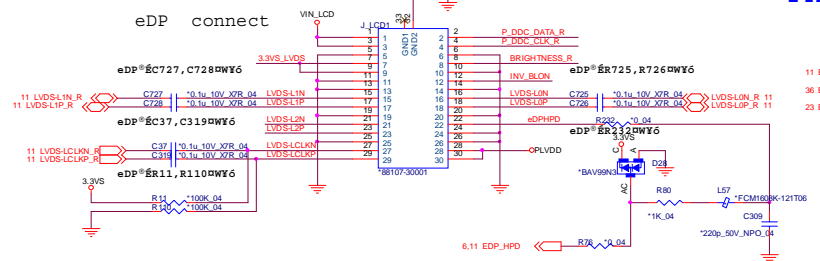

PANEL POWER


BRIGHTNESS

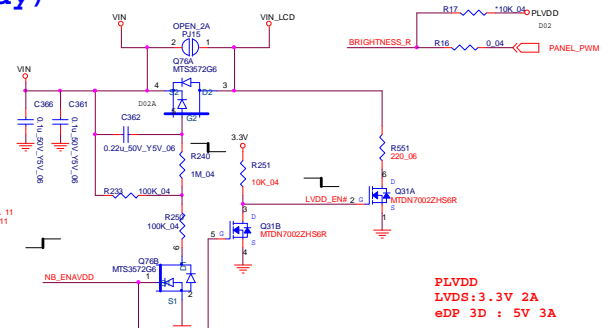

PLVDD
LVDS: 3.3V 2A
eDP 3D : 5V 3A

Entire trace of Panel VCC should be wider than 80mil

PANEL POWER

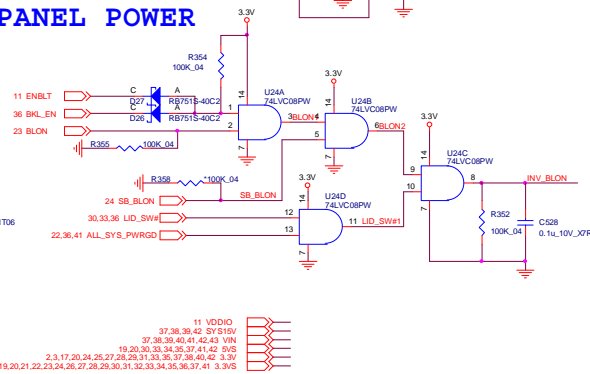


11 VDDIO
37,38,39,40,41,42,43 VIN
37,38,39,40,41,42,43 VIN
19,20,39,33,34,35,37,41,42,43 VIN
2,3,17,20,24,25,27,28,29,31,33,35,37,38,40,42, 3.3V
3,6,9,10,11,18,20,21,22,23,24,26,27,28,29,30,31,32,33,34,35,36,37,41, 3.3V

Sheet 12 of 46
PANEL, INVERTER

B.Schematic Diagrams


VGA PCI-E Interface

Sheet 13 of 46
VGA PCI-E
Interface

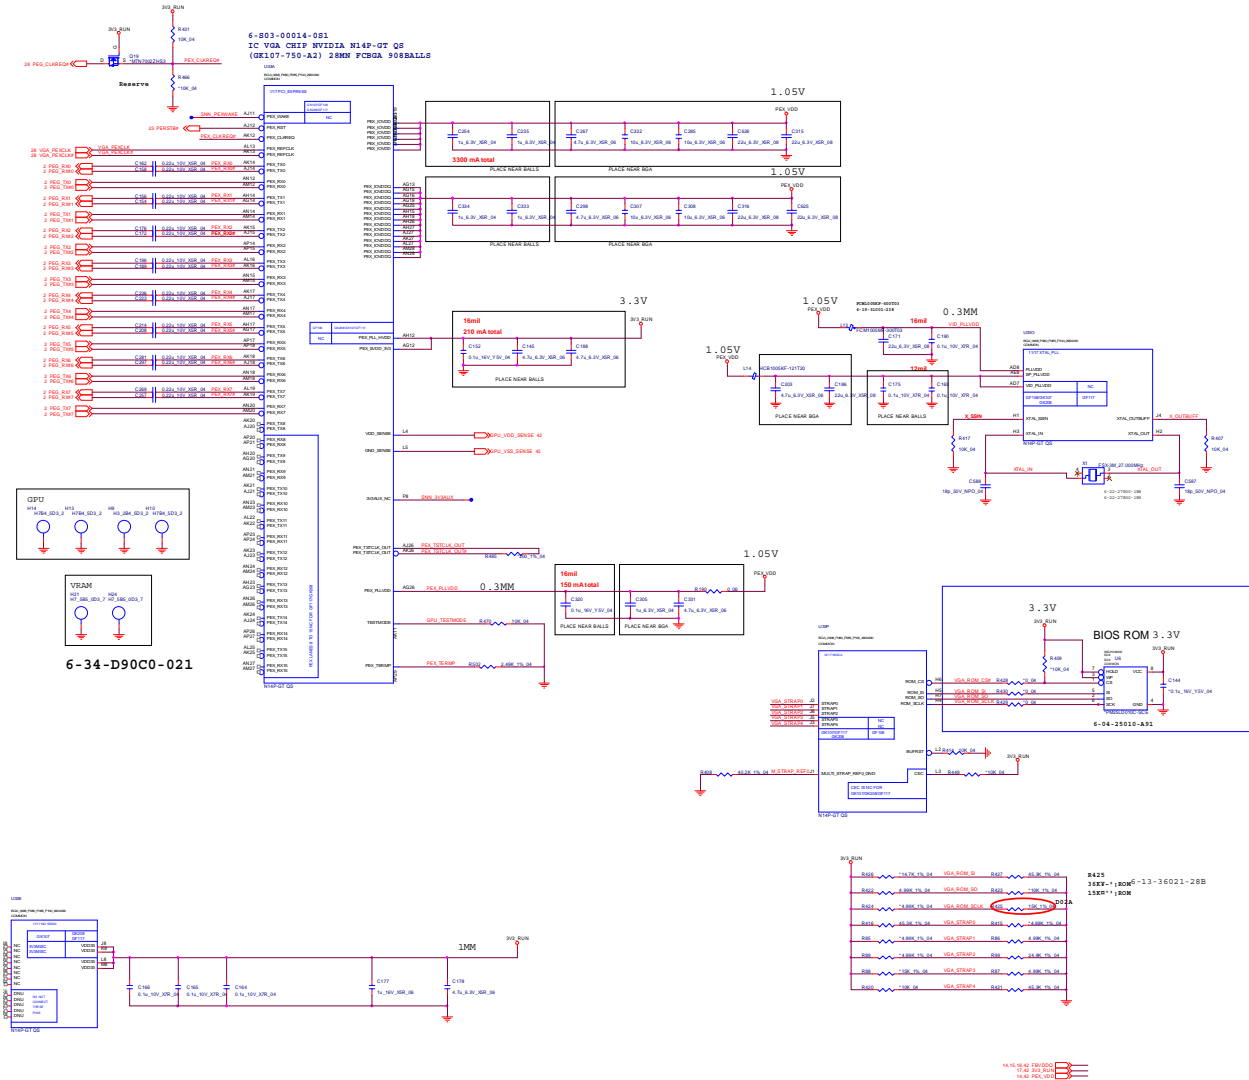

VGA Frame Buffer Interface

Frame Buffer Interface

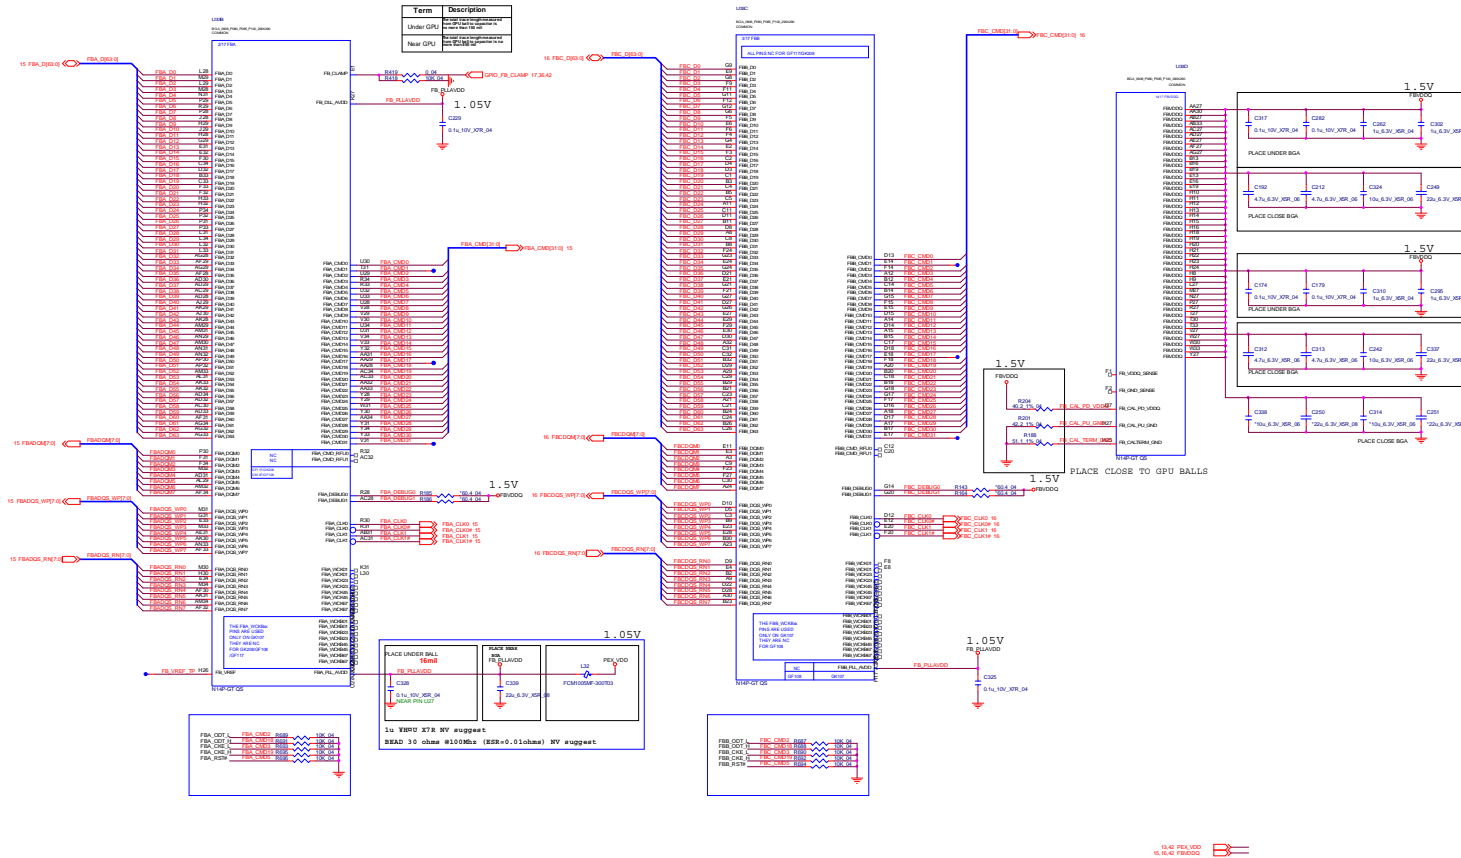


Sheet 14 of 46
VGA Frame Buffer Interface

Schematic Diagrams


VGA Frame Buffer A

Frame Buffer Partition A

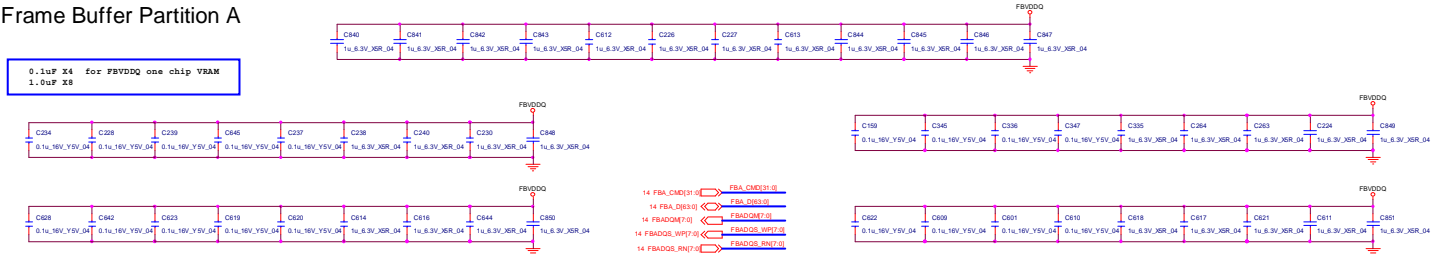



B.Schematic Diagrams

Sheet 15 of 46
VGA Frame Buffer
A

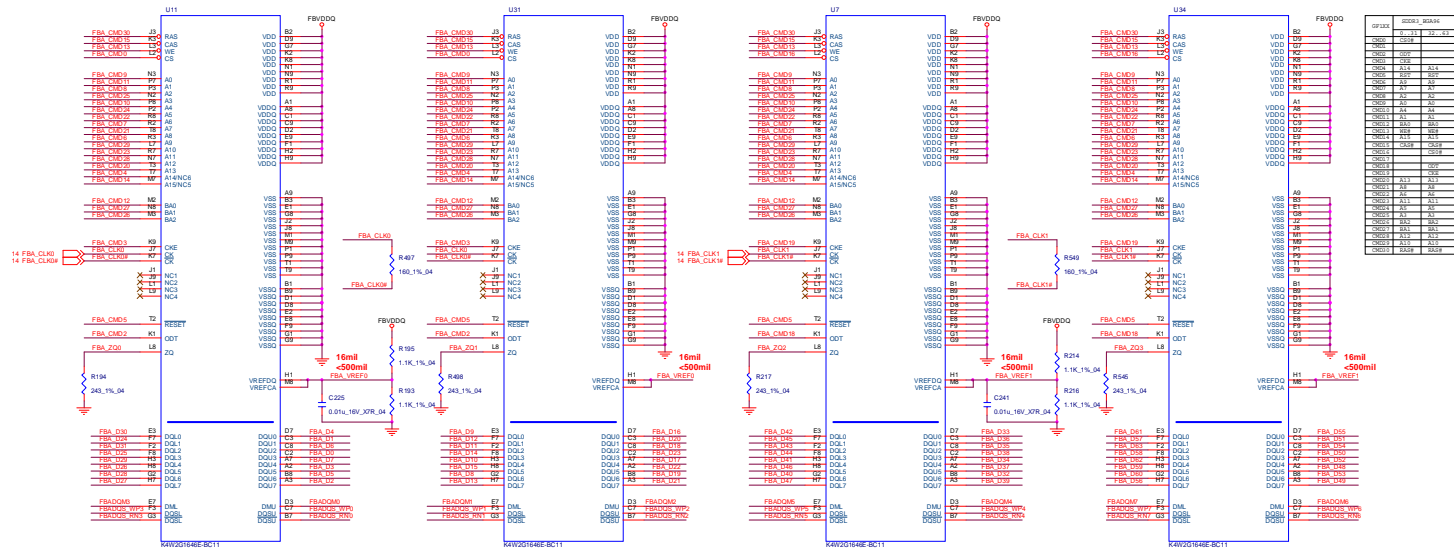

VGA Frame Buffer C

Frame Buffer Partition B

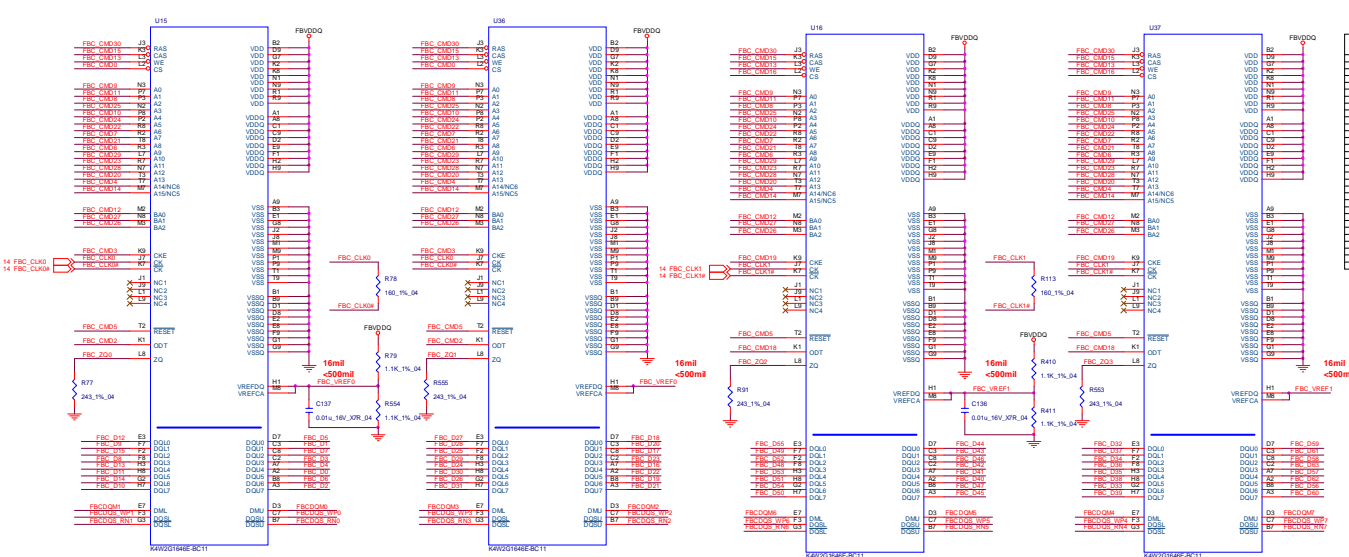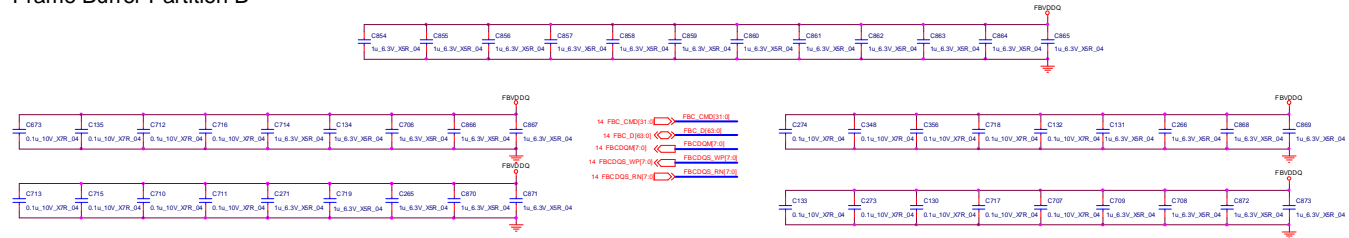



Sheet 16 of 46
VGA Frame Buffer
C

B.Schematic Diagrams






Schematic Diagrams

VGA I/O

Sheet 17 of 46
VGA I/O

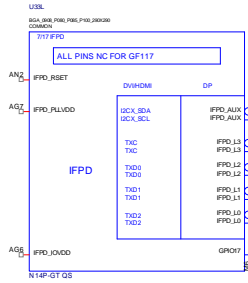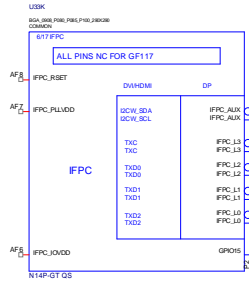


Term	Description
Under GPU	The I/O pins which are measured from GPU I/O connector in more than 100 mil
Near GPU	The I/O pins which measured from GPU I/O in less than 100 mil

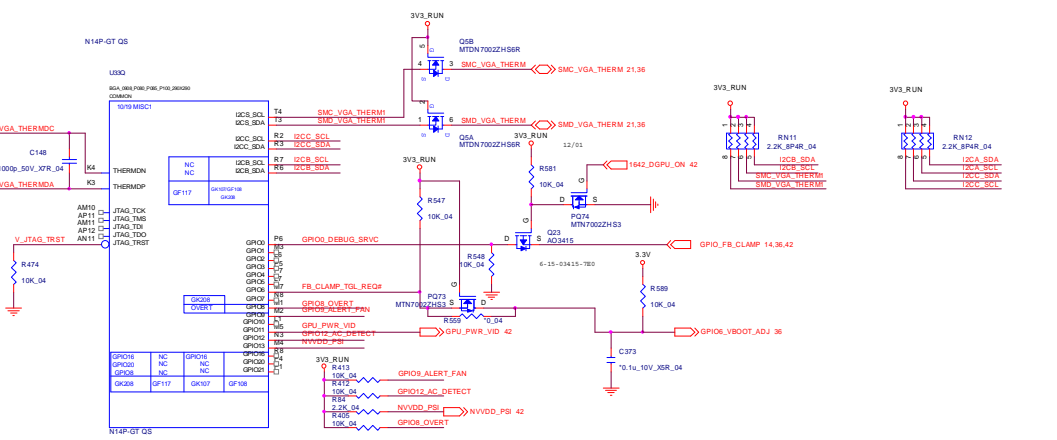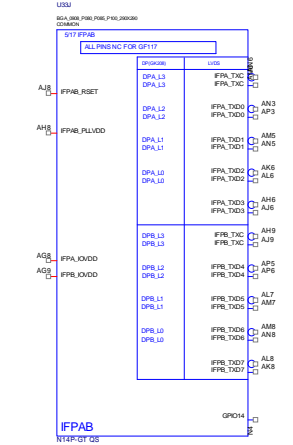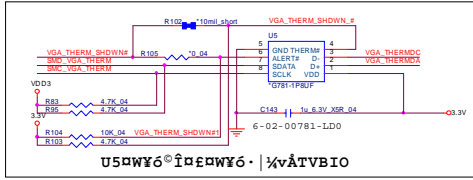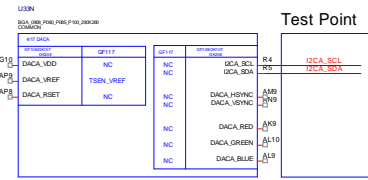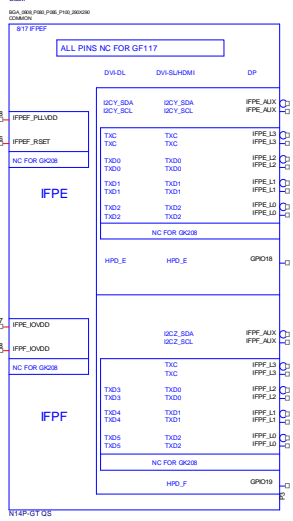

20, 21, 22, 24, 27, 28, 29, 30, 32, 33, 36, 37, 38, 39, 40, 43, VDD3
2, 3, 12, 20, 24, 25, 27, 28, 29, 31, 33, 35, 37, 38, 40, 42, 3, 31

VGA NVVDD Decoupling

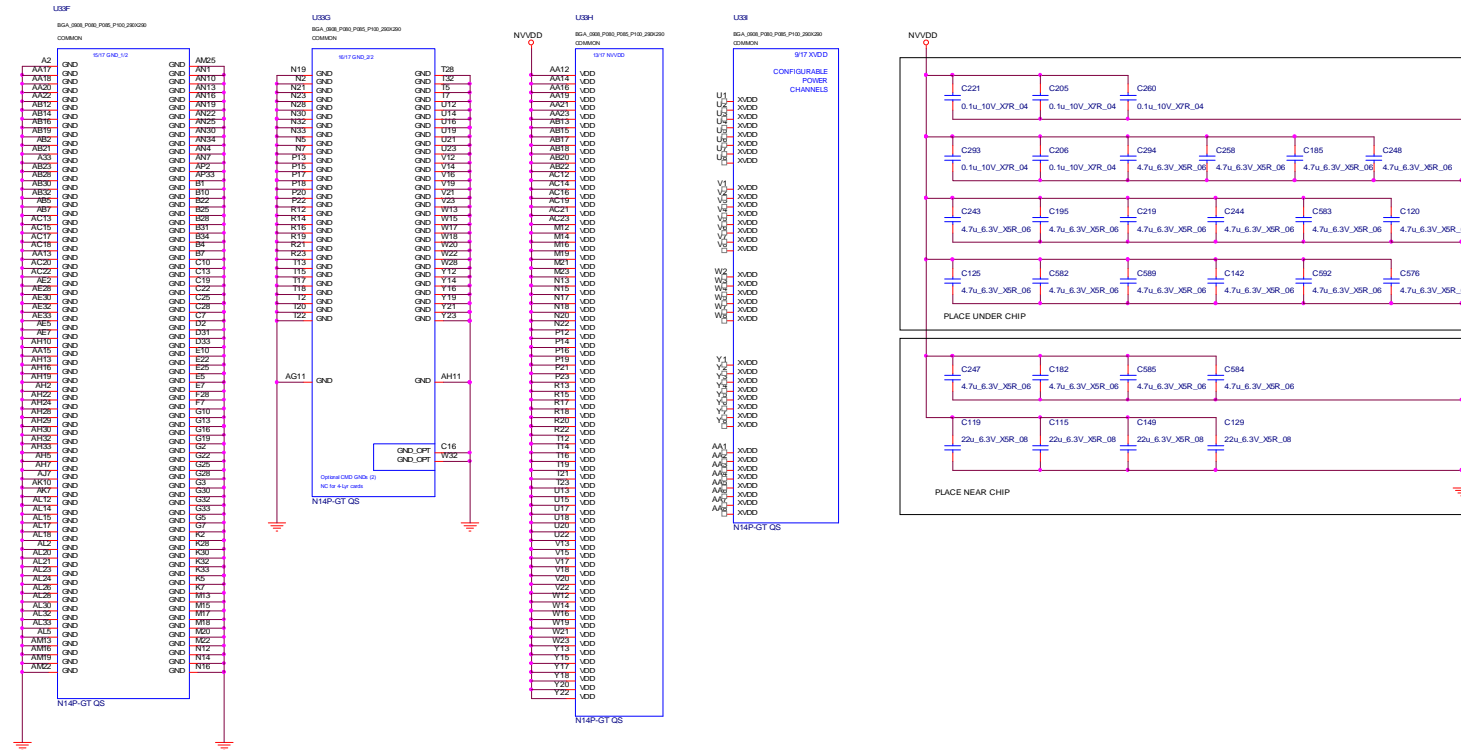


Sheet 18 of 46
VGA NVVDD
Decoupling

B.Schematic Diagrams

17,20,21,22,24,27,28,29,30,32,33,36,37,38,39,40,43 VDD3
42 NVVDD
13,17,42 SV3_P0IN

CRT, Holes


CRT

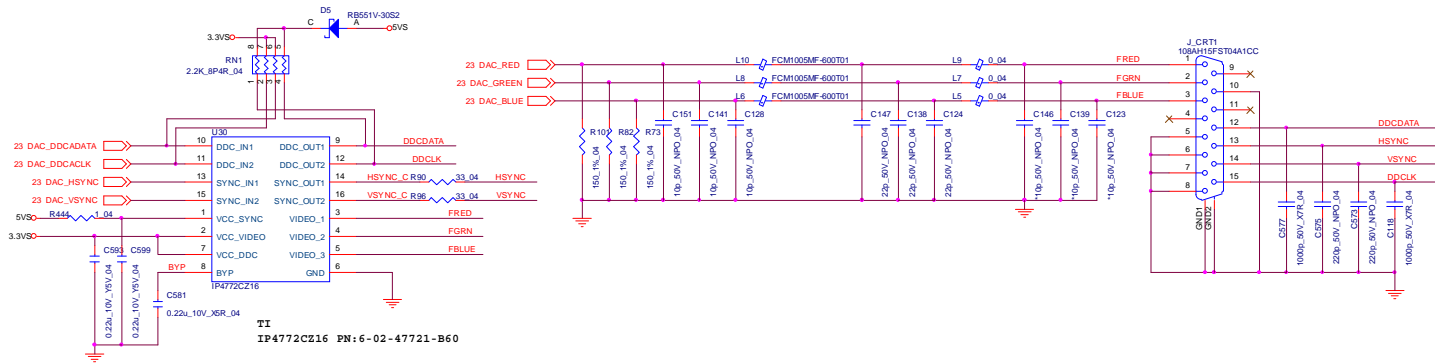

Sheet 19 of 46
CRT, Holes

B.Schematic Diagrams


M/B PCH

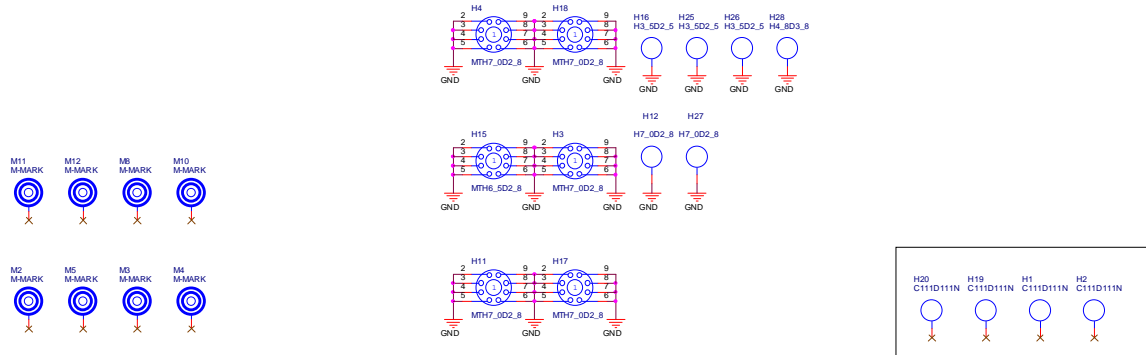

3.6,9,10,11,12,20,21,22,23,24,26,27,28,29,30,31,32,33,34,35,36,37,41,3.9V_S
12,20,30,33,34,35,37,41,42 5V_S

Lynx 1/9



Lynx Point - M (HDA, JTAG, SATA)

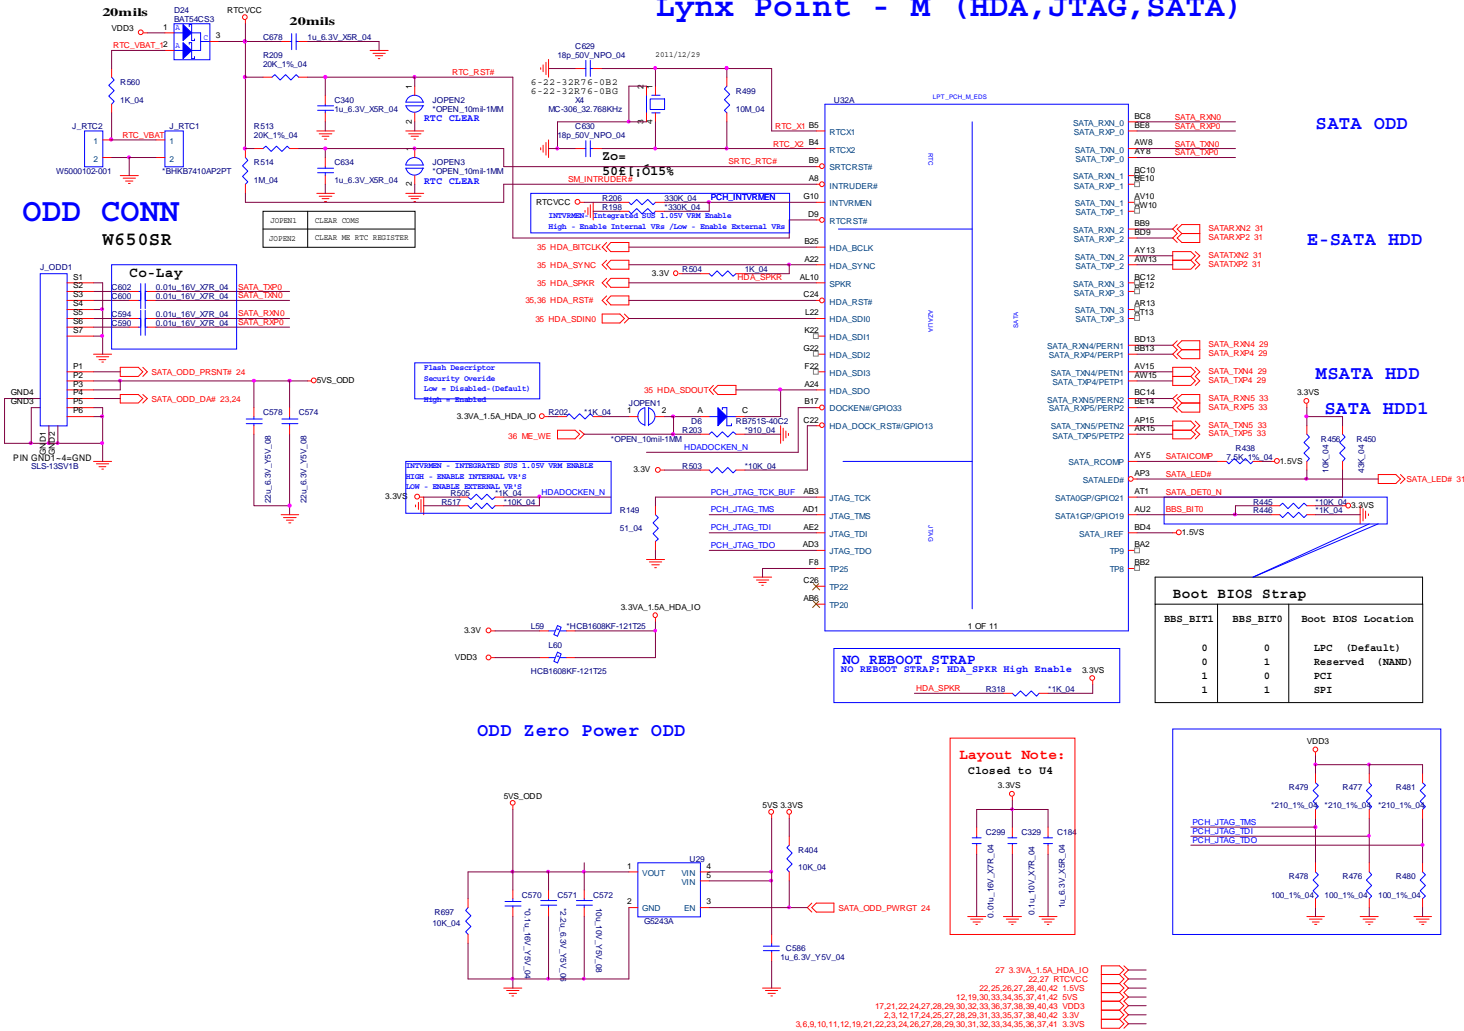

Sheet 20 of 46
Lynx 1/9




B.Schematic Diagrams

Boot BIOS Strap		
BBS_BIT1	BBS_BIT0	Boot BIOS Location
0	0	LPC (Default)
0	1	Reserved (NAND)
1	0	PCI
1	1	SP1




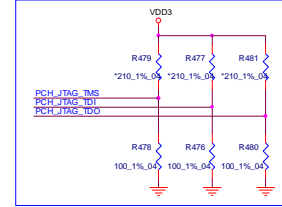
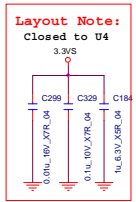


Lynx 2/9

Sheet 21 of 46
Lynx 2/9

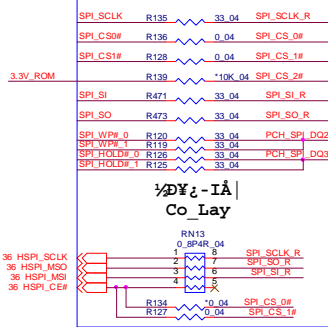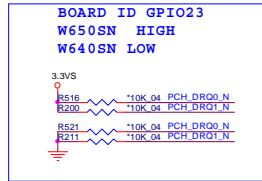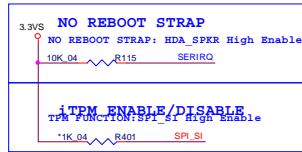


 Lynx Point - M (LPC, SMBUS, SPI, C-LINK)

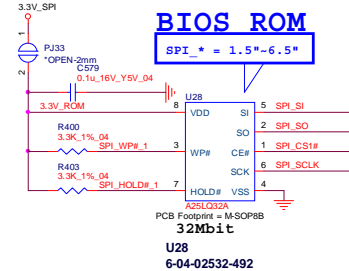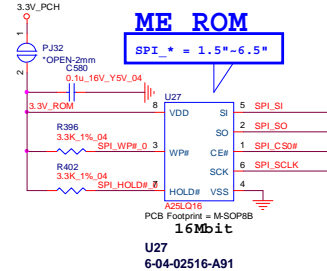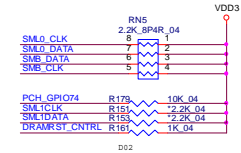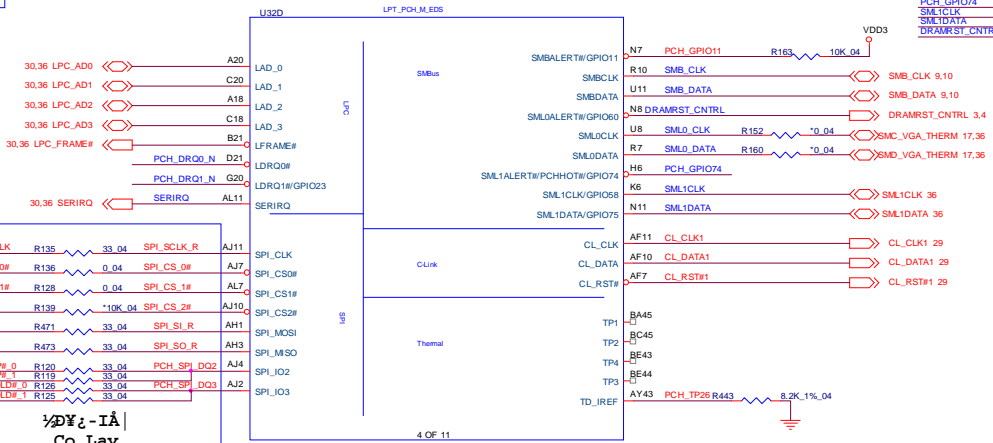

Lynx 3/9

Lynx Point -M (DMI, FDI, PWRGD)

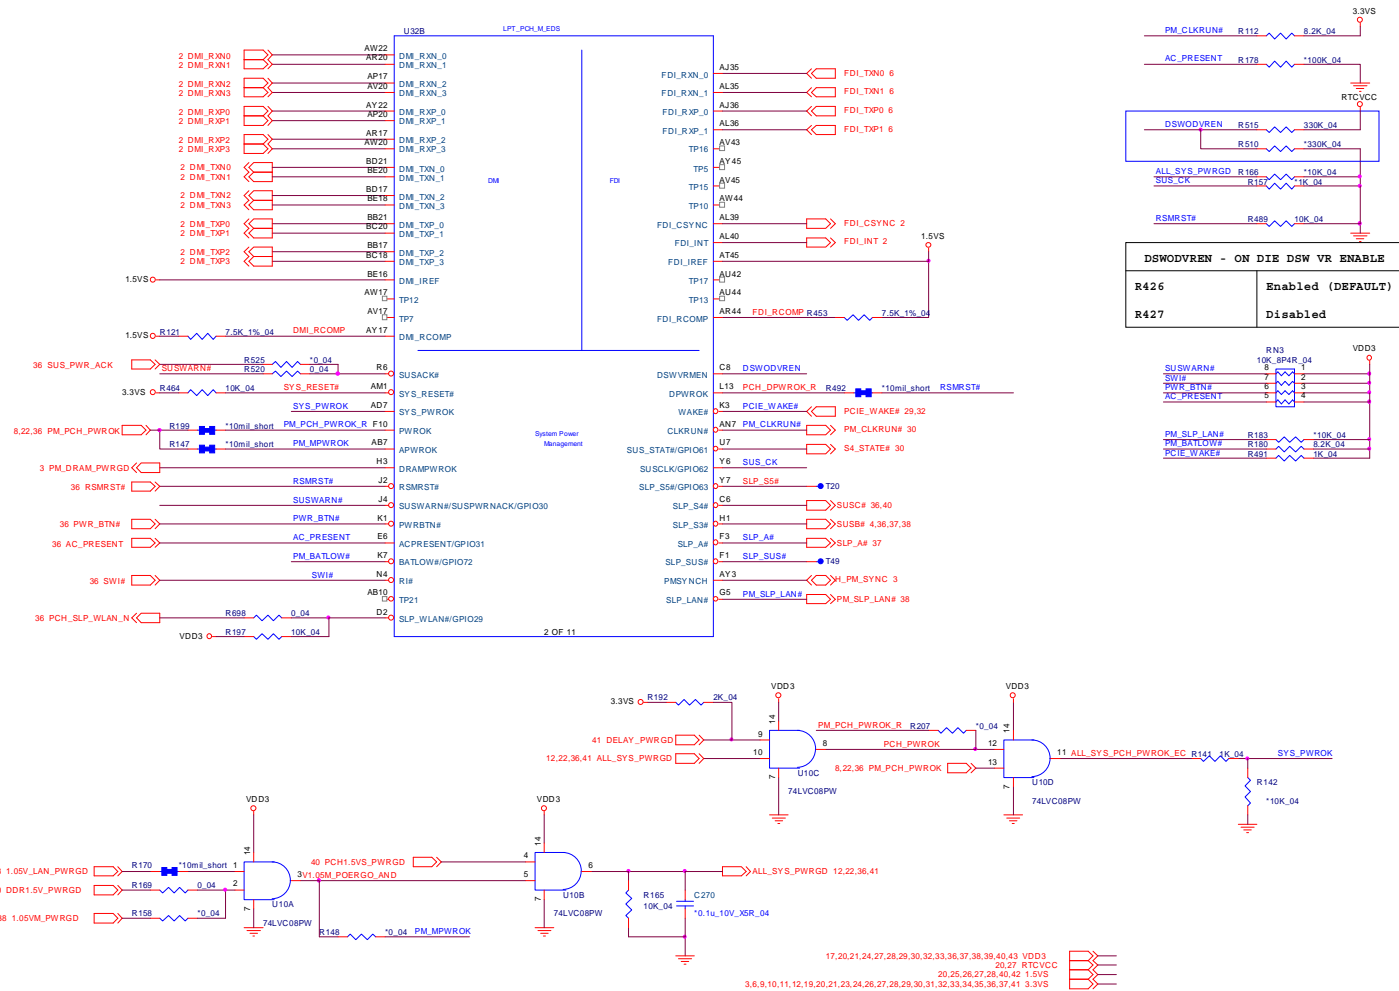

Sheet 22 of 46
Lynx 3/9

DSWODVREN - ON DIE DSW VR ENABLE	
R426	Enabled (DEFAULT)
R427	Disabled

B.Schematic Diagrams


Lynx 4/9

Sheet 23 of 46
Lynx 4/9




Boot BIOS Strap		
BBS_BIT1	BBS_BIT0	Boot BIOS Location
0	0	LPC
0	1	Reserved (NAND)
1	0	PCI
1	1	SPI



A16 SWAP OVERRIDE STRAP	
STP_A16OVR	LOW = A16 SWAP OVERRIDE HIGH = DEFAULT
LOW	A16 SWAP OVERRIDE
HIGH	DEFAULT

 


Lynx Point -M (CRT, LVDS, PCI, DISPLAY)

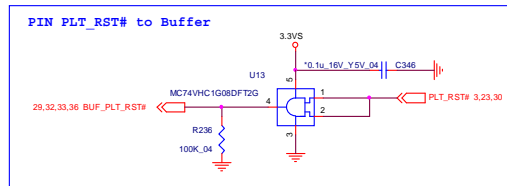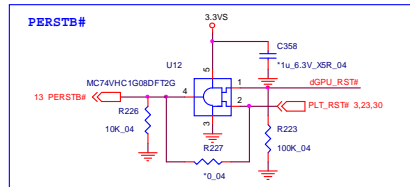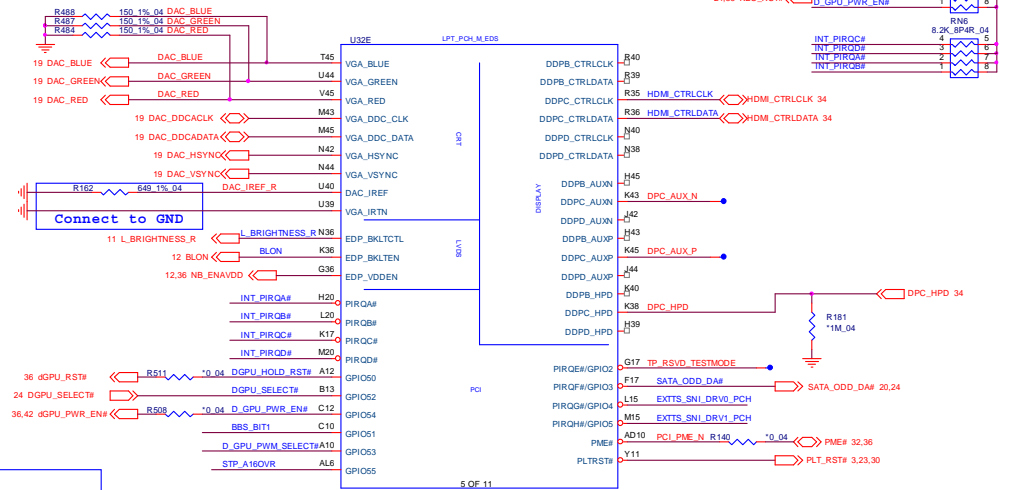

12,18,20,30,33,34,35,37,41,42 5V5
3,6,9,10,11,12,19,20,21,22,24,26,27,28,29,30,31,32,33,34,35,36,37,41 3.3V5

Lynx 5/9


Lynx Point - M (GPIO, CPU/MISC, NCTF)

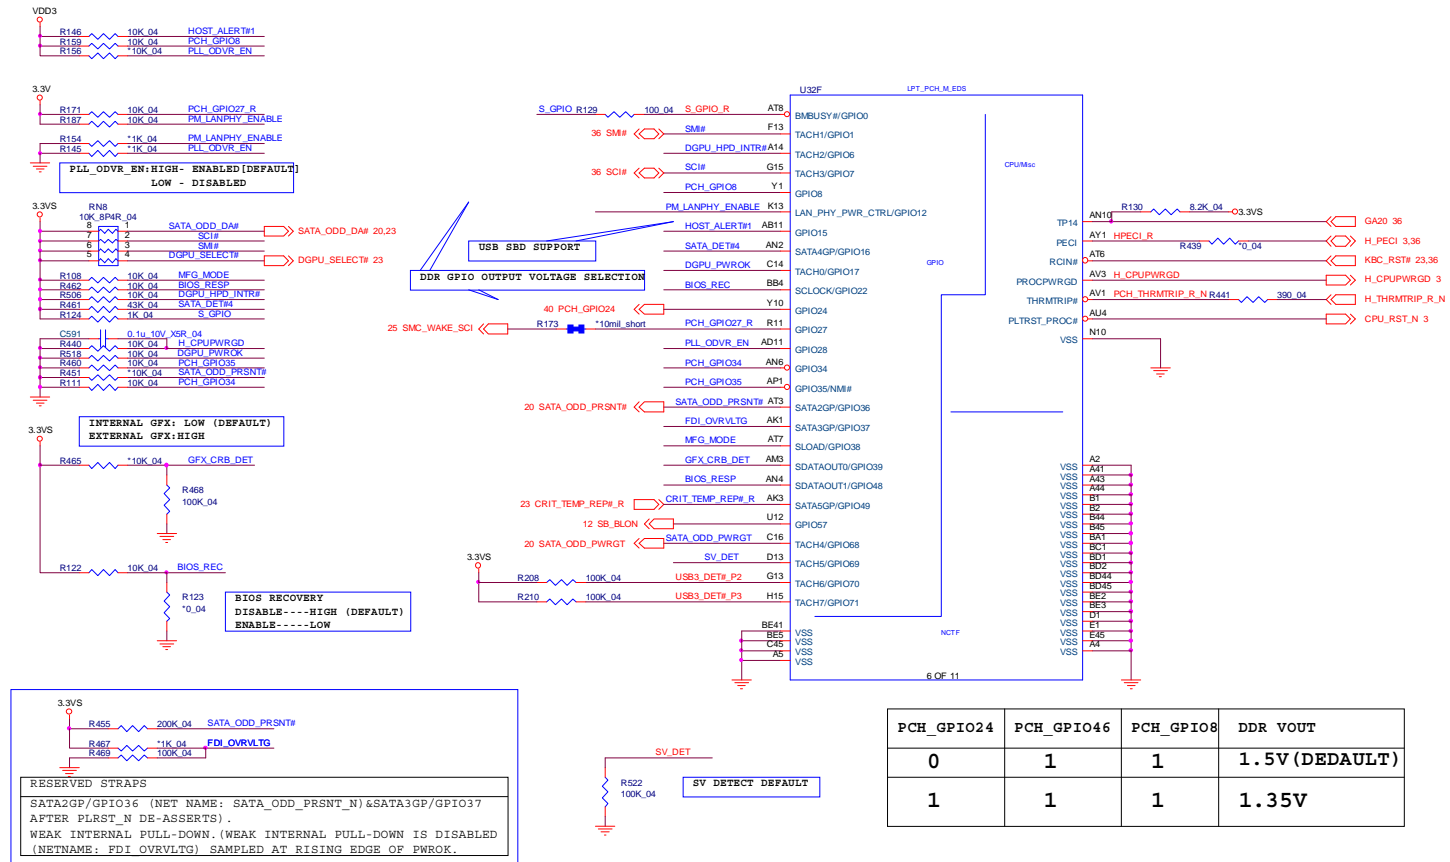

17,20,21,22,27,28,29,30,32,33,36,37,38,39,40,43 VDD3
2,3,12,17,20,25,27,28,29,31,33,35,37,38,40,42 3.3V
3,6,9,10,11,12,19,20,21,22,23,26,27,28,29,30,31,32,33,34,36,37,41 3.3VS

Sheet 24 of 46
Lynx 5/9

Lynx 7/9

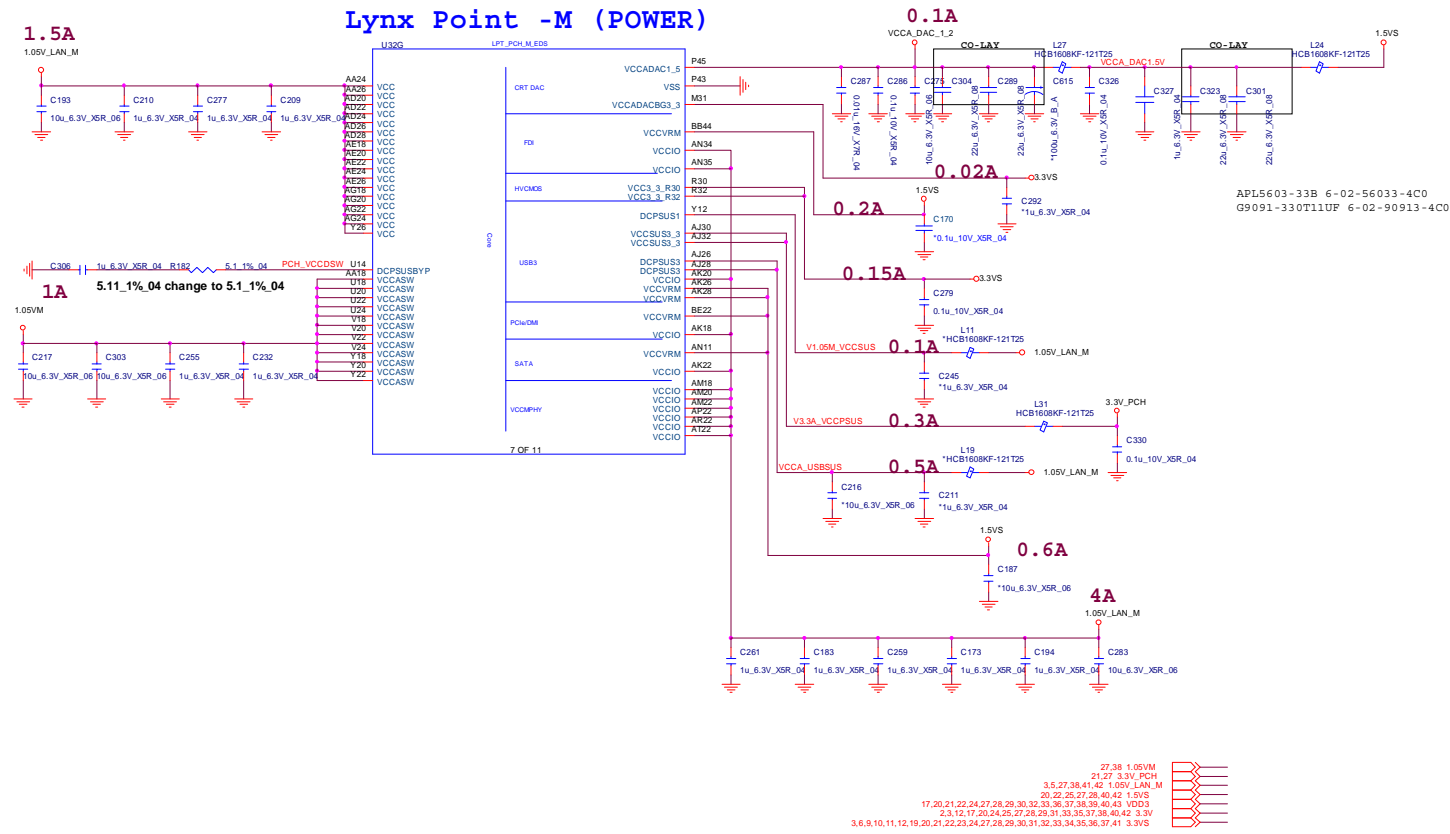


Sheet 26 of 46
Lynx 7/9

B.Schematic Diagrams

Lynx 8/9


Lynx Point - M (POWER)

Sheet 27 of 46
Lynx 8/9

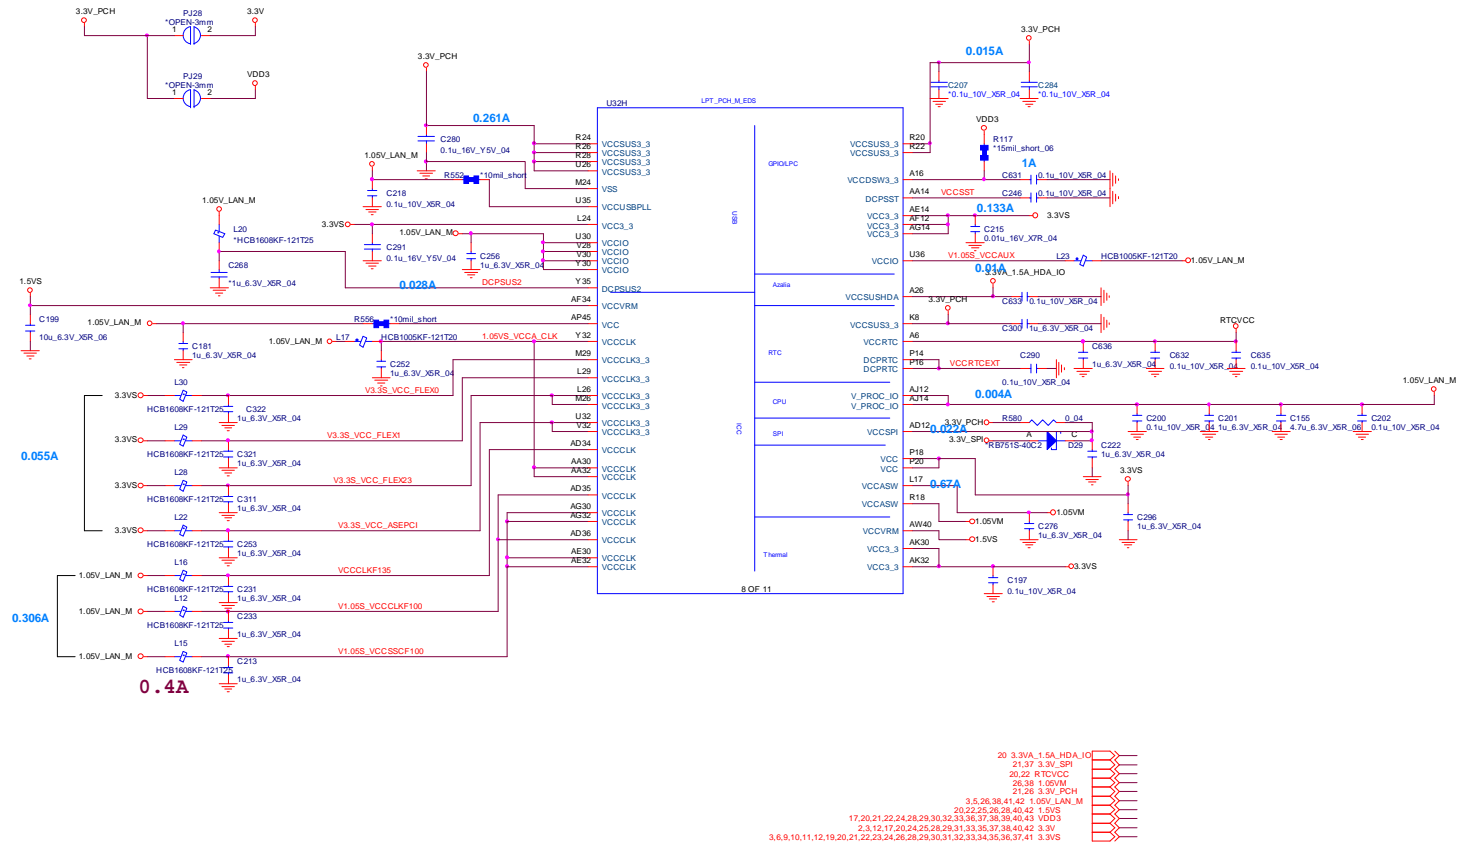


Lynx 9/9


Lynx Point -M (GND)

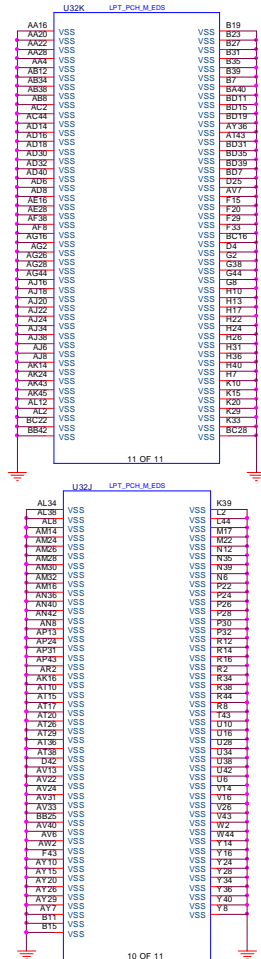

Lynx Point -M (CLK)

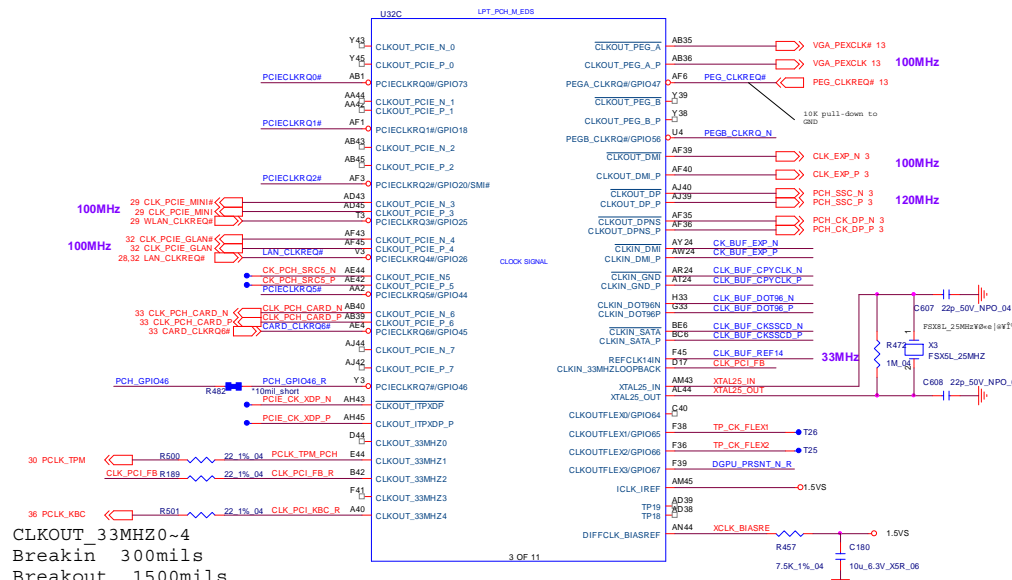

Voltage Rail	Voltage	SO	Iccmax	Current (A)
V_CPU_IO	1.05	1	(mA)	
V_SRF	5	1	(mA)	
V_SRF_Bus	5	1	(mA)	
Vcc3_3	3.3	0.266		
VccADAC3	1.05	1	(mA)	
VccADPLLA	1.05	0.08		
VccADPLL	1.05	0.08		
VccCore	1.05	1.3		
VccDMI	1.1	0.042		
VccIO	1.05	2.925		
VccASW	1.05	1.01		
VccSPI	3.3	0.020		
VccDSW3_3	3.3	2	(mA)	
VccDFTERR	1.8	0.19		
VccBus3_3	3.3	0.097		
VccBusHDA	3.3	1	(mA)	
VccWRM	1.5	0.16		
VccCLKDMI	1.05	0.02		
VccSC	1.05	0.095		
VccDIFFCLKN	1.05	0.055		
VccLVDS	3.3	1	(mA)	
VccTX_LVDS	1.8	0.06		

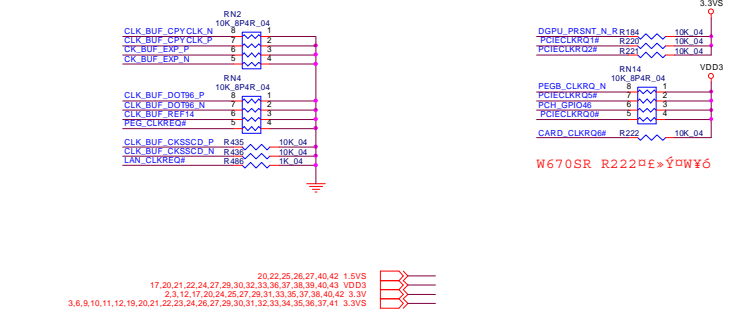

Sheet 28 of 46
Lynx 9/9

B.Schematic Diagrams




Schematic Diagrams

3G, WLAN, PCIE, CON


B.Schematic Diagrams

Sheet 29 of 46
3G, WLAN, PCIE,
CON


3G/MSATA MINI CARD

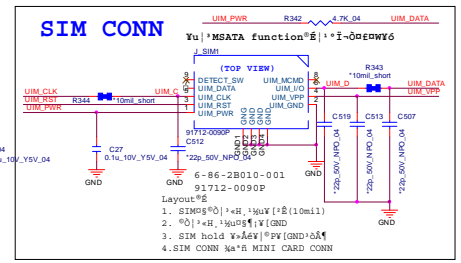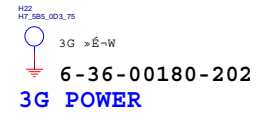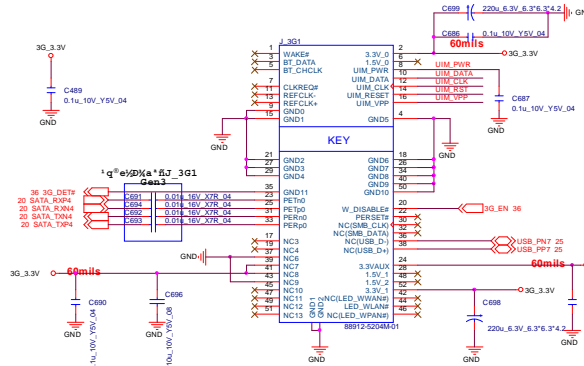

WLAN MINI CARD

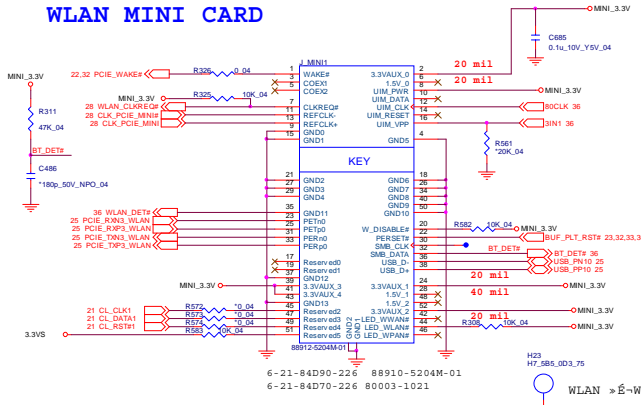


MINI POWER Smart Connect Function

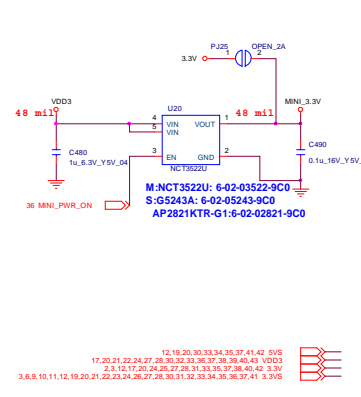


USB Charge, CCD, TPM, Power Con


USB Charge PORT

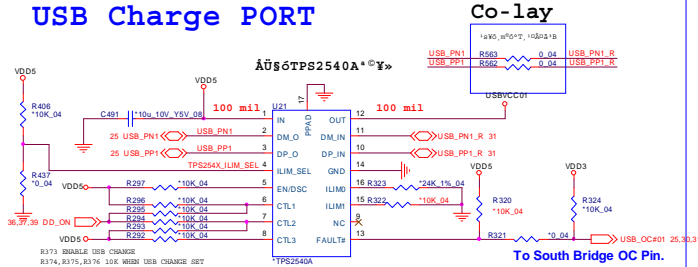

CTL1	CTL2	CTL3:	0	0	0	→ Out discharge, power switch Off
CTL1	CTL2	CTL3:	0	x	1	→ Dedicated charging port, auto-detect
CTL1	CTL2	CTL3:	1	0	1	→ Dedicated charging port, Divider Mode only
CTL1	CTL2	CTL3:	1	1	1	→ Charging downstream port, BC1.2.

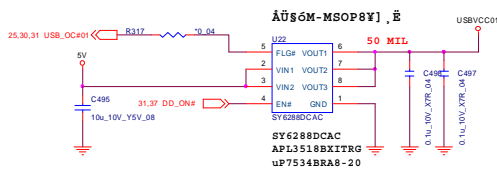


CCD+Mic

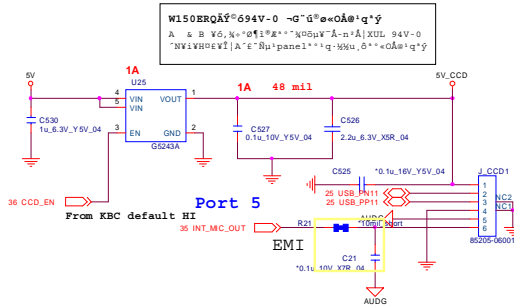

Co-layer

TPM 2.0

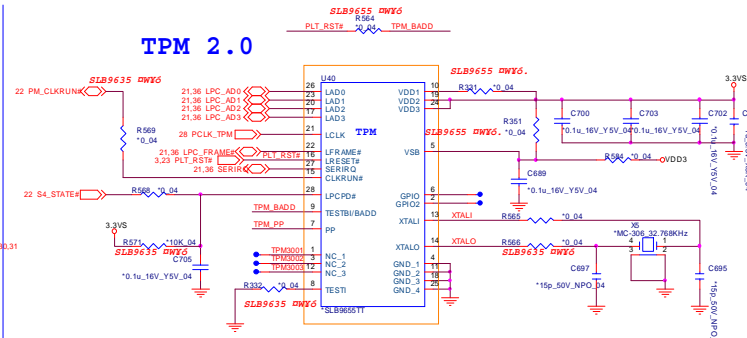


Asserted before entering S3
LPC PD# inactive to LRST# inactive 32-96us

TPM_PP	HI ACCESS
TPM_BADD	LOW: NORMAL (Internal PD)
TPM_PP	HI: 4E' AF H
TPM_BADD	LOW: 2E' 2F H


Sheet 30 of 46
USB Charge, CCD,
TPM, Power Con

B.Schematic Diagrams

LID

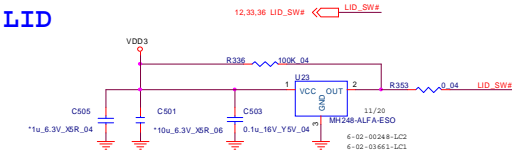


FOR POWER SWITCH BOARD

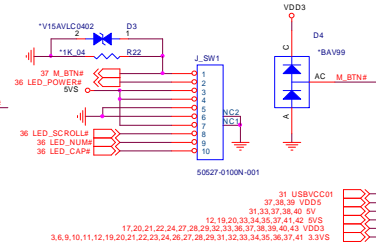


eSATA/USB3.0, LED

Sheet 31 of 46
eSATA/USB3.0,
LED


ESATA+USB3.0 USB3.0 PORT(PORT1)

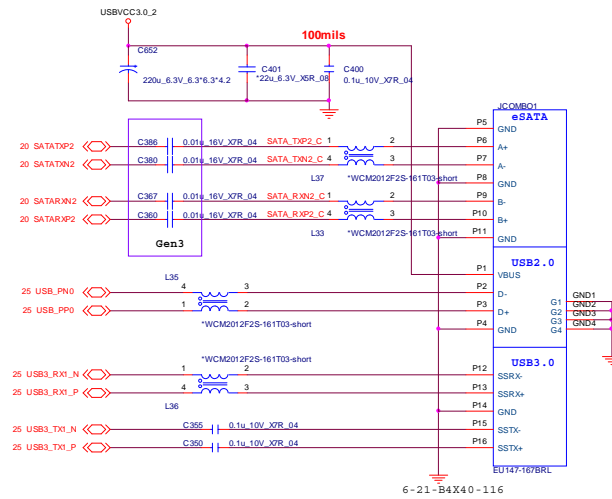


USB POWER SWITCH

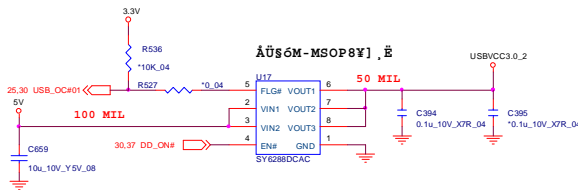


LED

 


WLAN/BLUETOOTH LED

 

	WLAN ON	WLAN LED
Windows 7	WLAN ON	«G
	WLAN OFF	«E«G
Windows 8	Airplane ON	«G
	Airplane OFF	«E«G

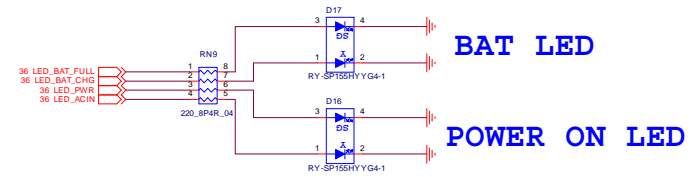


USB3.0 PORT(PORT3)

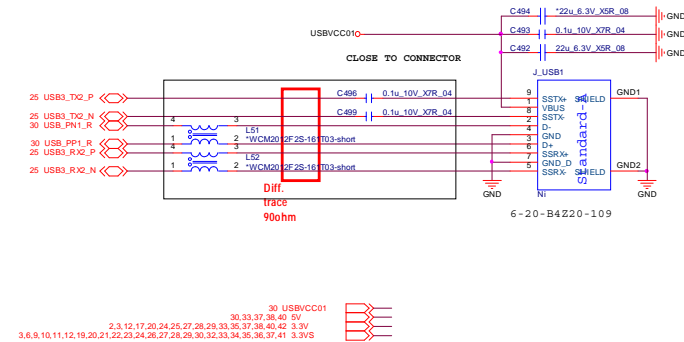

Card Reader (RTL8411)


LAN (RTL8411)

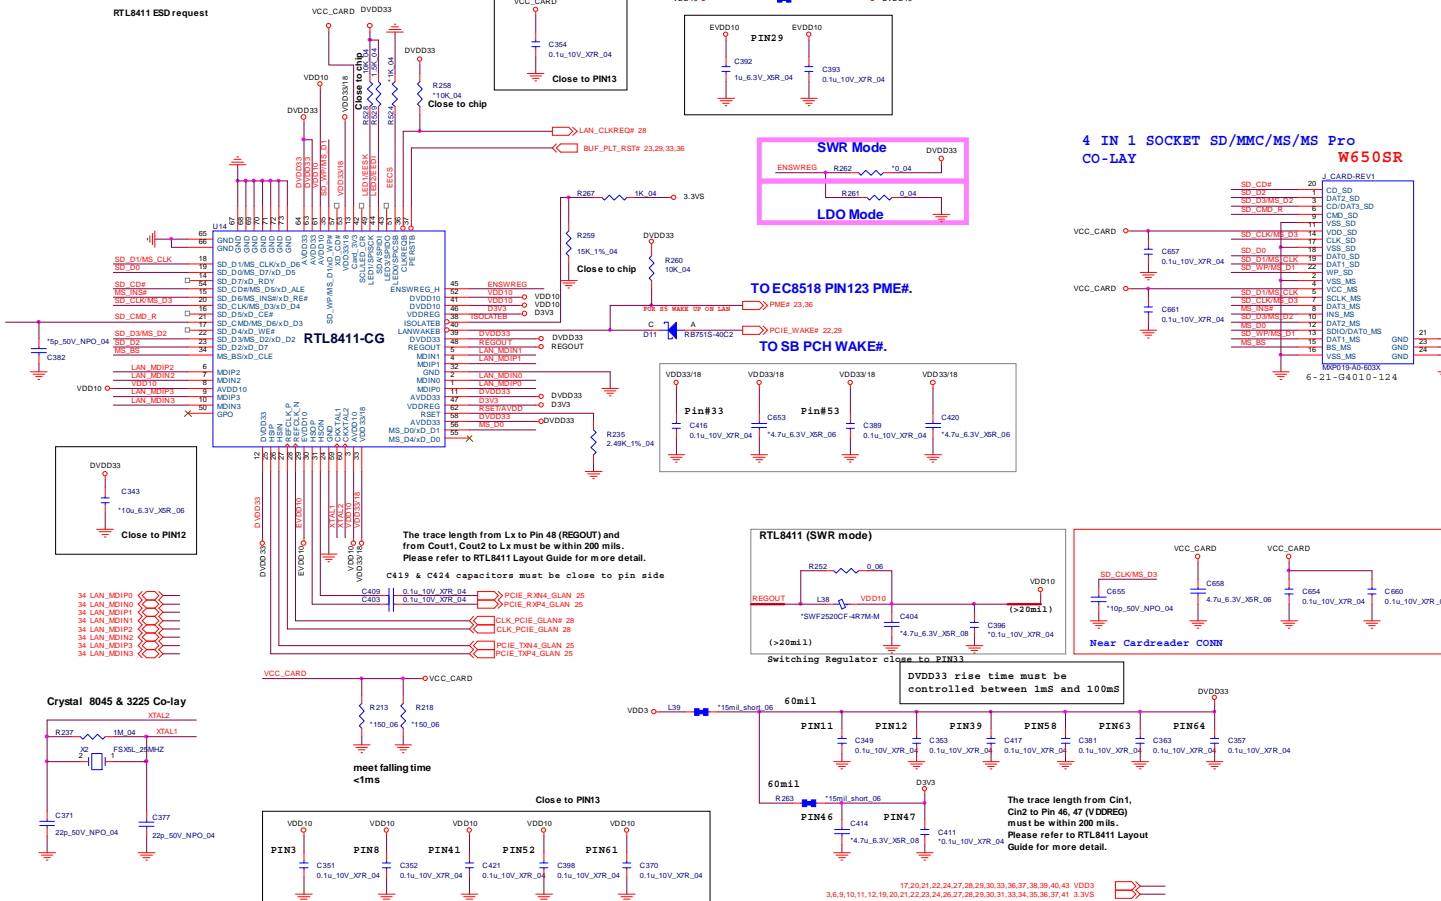


Sheet 32 of 46
Card Reader
(RTL8411)

HDD, TP, Audio, USB


CLICK TP

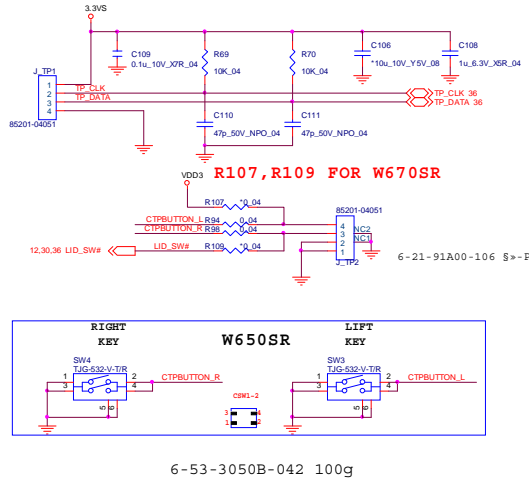

HDD CONNECT1 (MASTER)

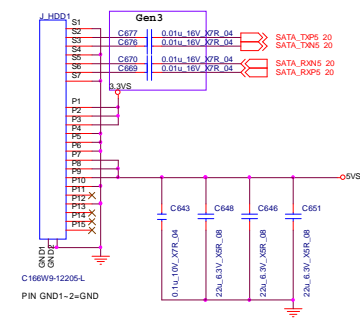

FOR AUDIO BOARD

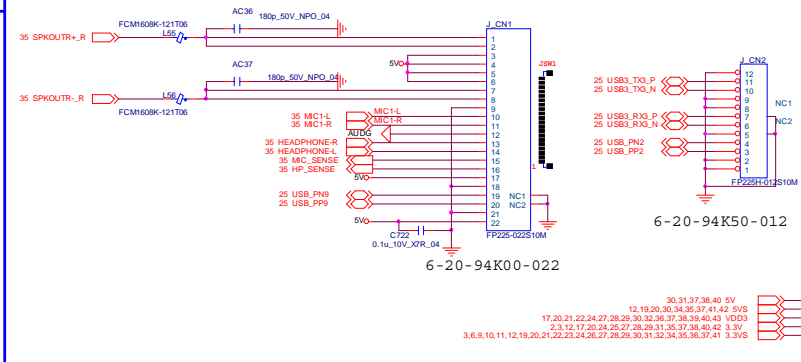


B.Schematic Diagrams


Sheet 33 of 46
HDD, TP, Audio,
USB

HDMI, RJ45, Fan, KBC, LED

HDMI LEVEL SHIFT

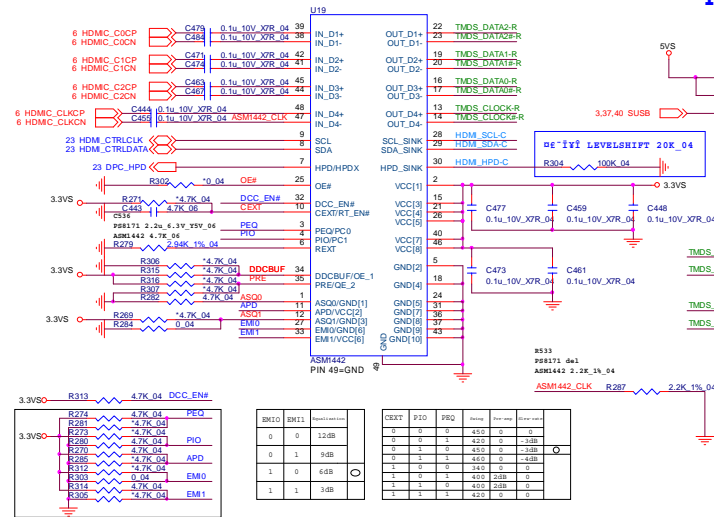


HDMI CONNECTOR

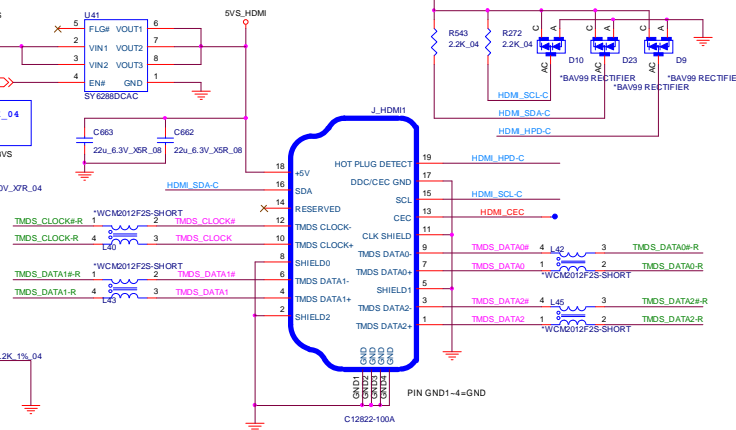


Sheet 34 of 46
HDMI, RJ45, Fan,
KBC, LED

B.Schematic Diagrams


GIGA LAN (RTL8411) LAN POART

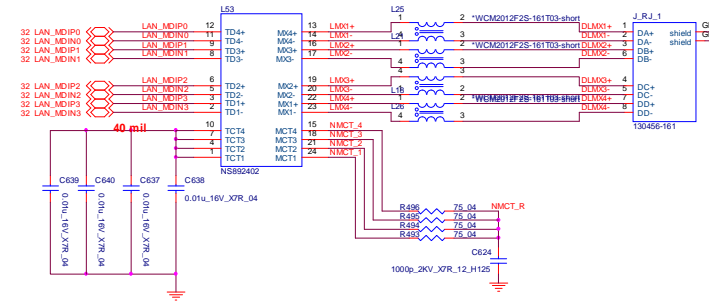

KBC LED CONTROL

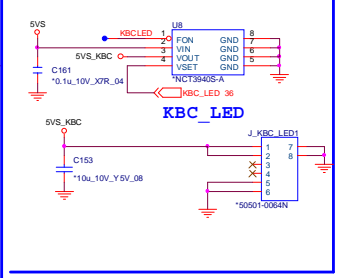


CPU FAN CONTROL

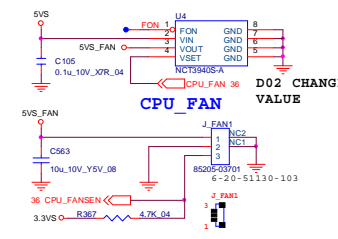

12, 19, 20, 30, 33, 35, 37, 41, 42 5VS
3, 6, 9, 10, 11, 12, 19, 20, 21, 22, 23, 24, 26, 27, 28, 29, 30, 31, 32, 33, 35, 36, 37, 41 3.3VS

KBC-ITE IT8587










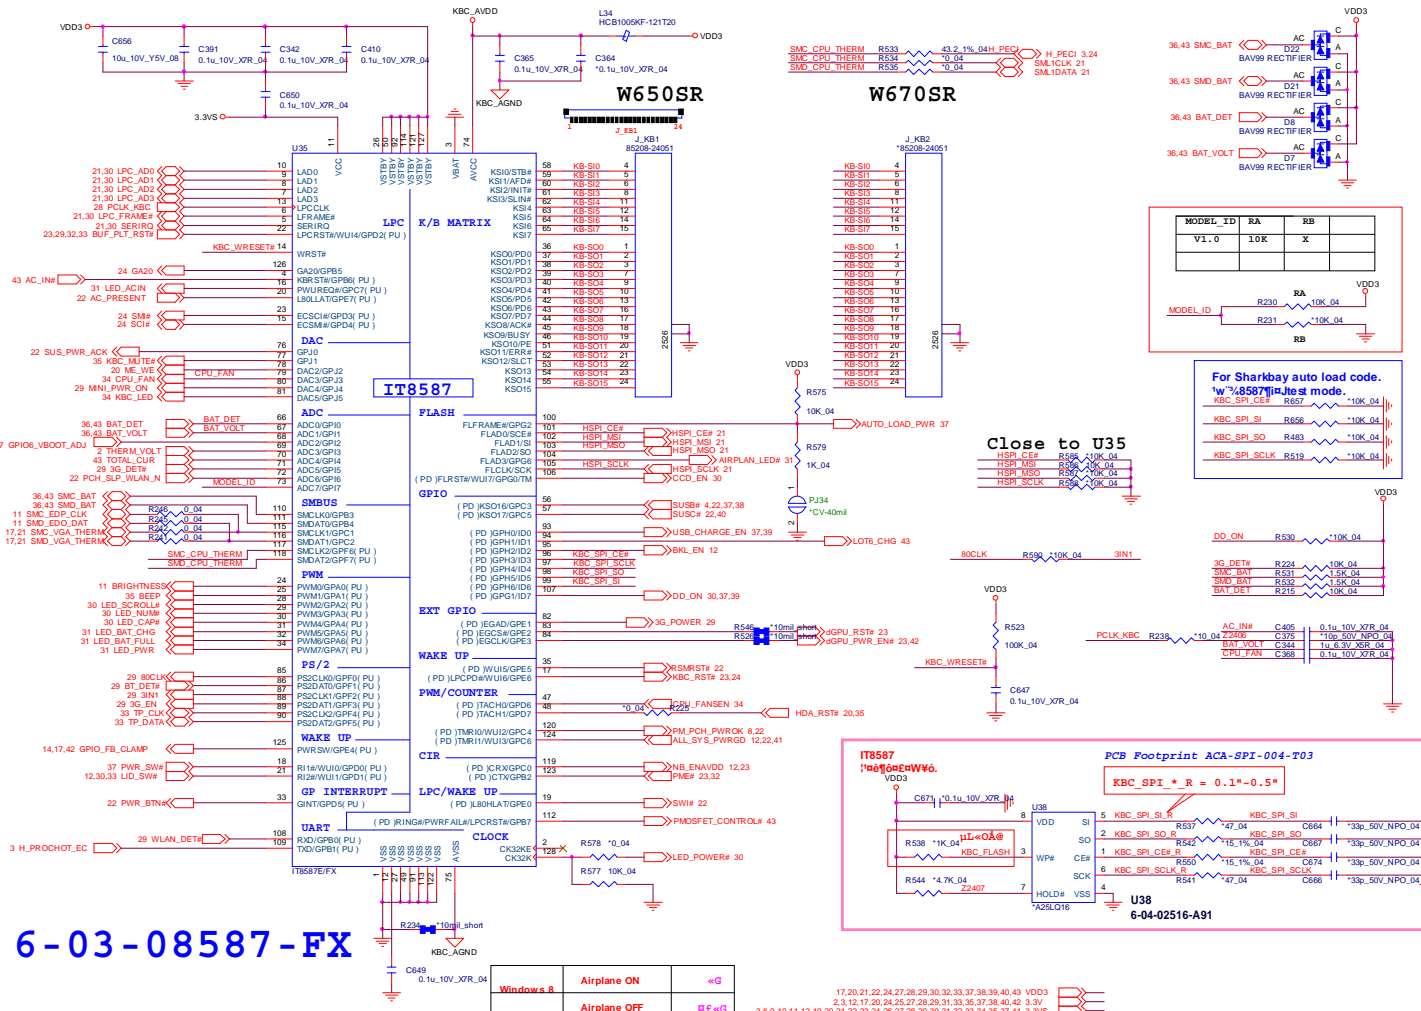


Sheet 36 of 46
KBC-ITE IT8587

Schematic Diagrams


5VS, 3VS, 3.3VM, 5VM

Sheet 37 of 46
5VS, 3VS, 3.3VM,
5VM

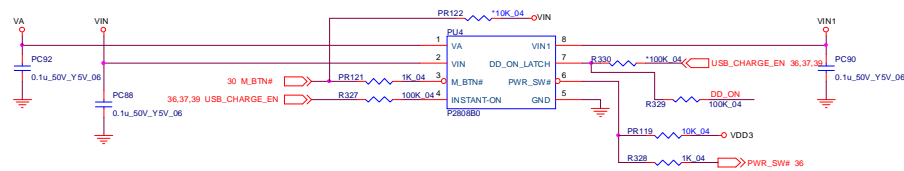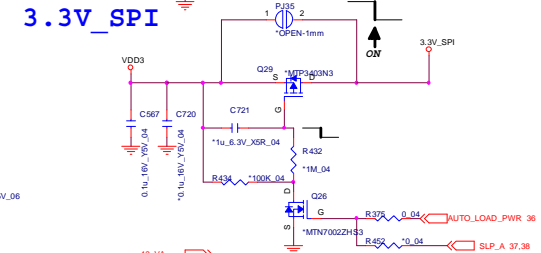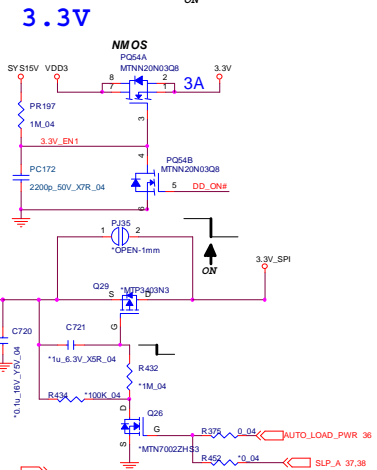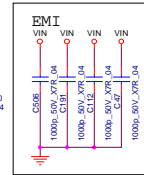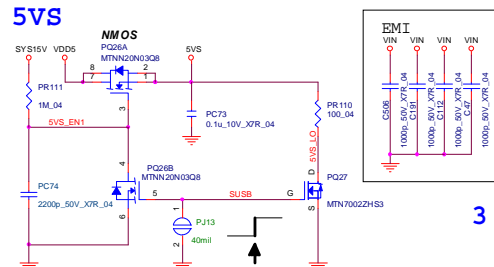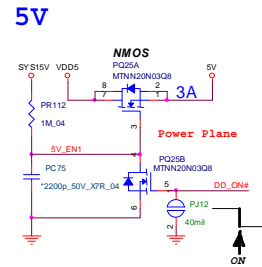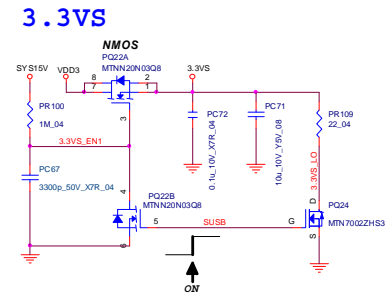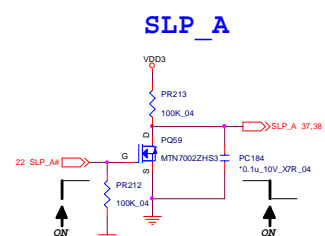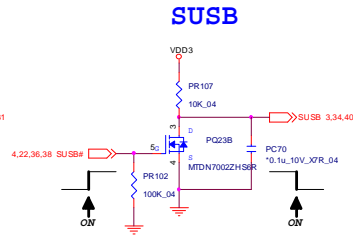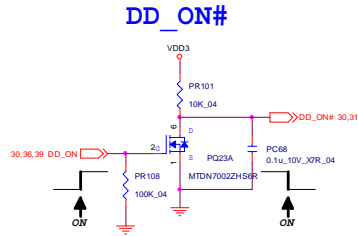

- 43 VA
- 21,27 3.3V_SPI
- 39 VIN1
- 30,38,39 VDD5
- 38,39,42 SV15V
- 12,38,39,40,41,42,43 VIN
- 12,19,20,30,33,34,35,41,42 5VS
- 17,20,21,22,24,27,28,29,30,32,33,36,38,39,40,43 VDD3
- 2,3,12,17,20,24,25,27,28,29,31,33,35,38,40,42 3.3V
- 3,6,9,10,11,12,19,20,21,22,23,24,26,27,28,29,30,31,32,33,34,35,36,41 3.3VS




1.05V

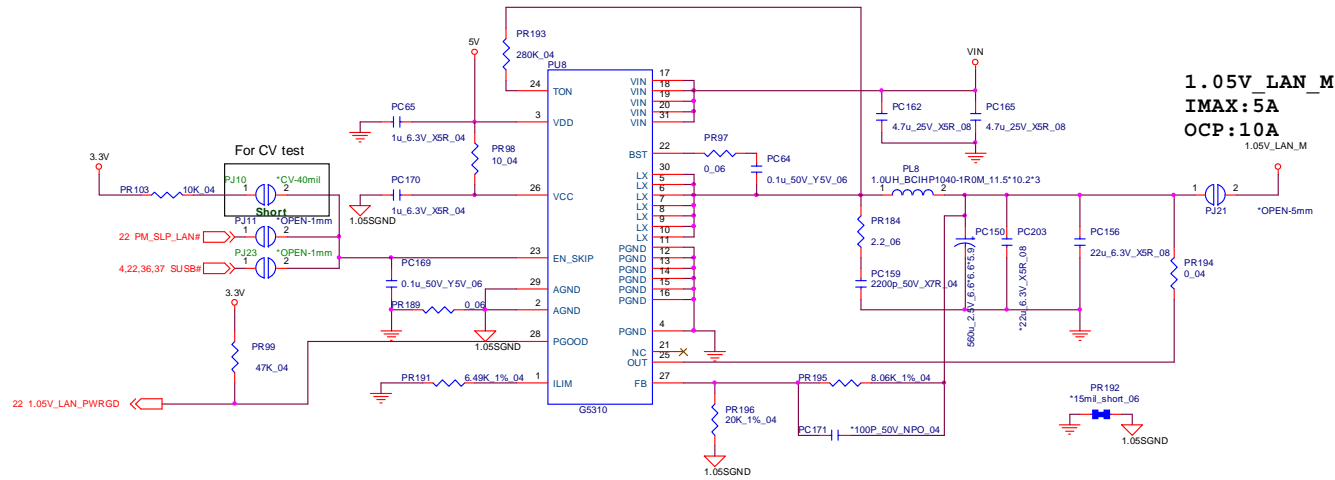

Sheet 38 of 46
1.05V


B.Schematic Diagrams

 1.05VM

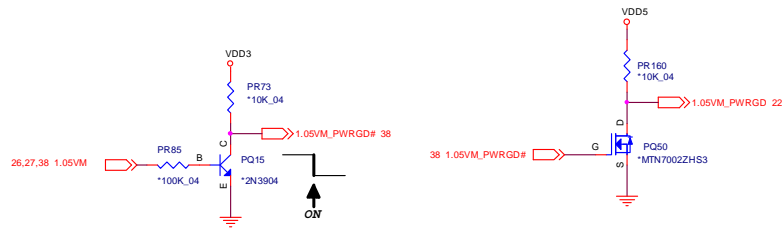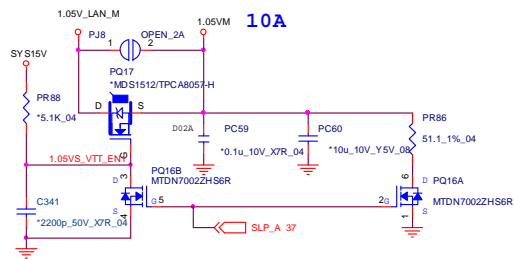

VDD3, VDD5


VDD3 / VDD5

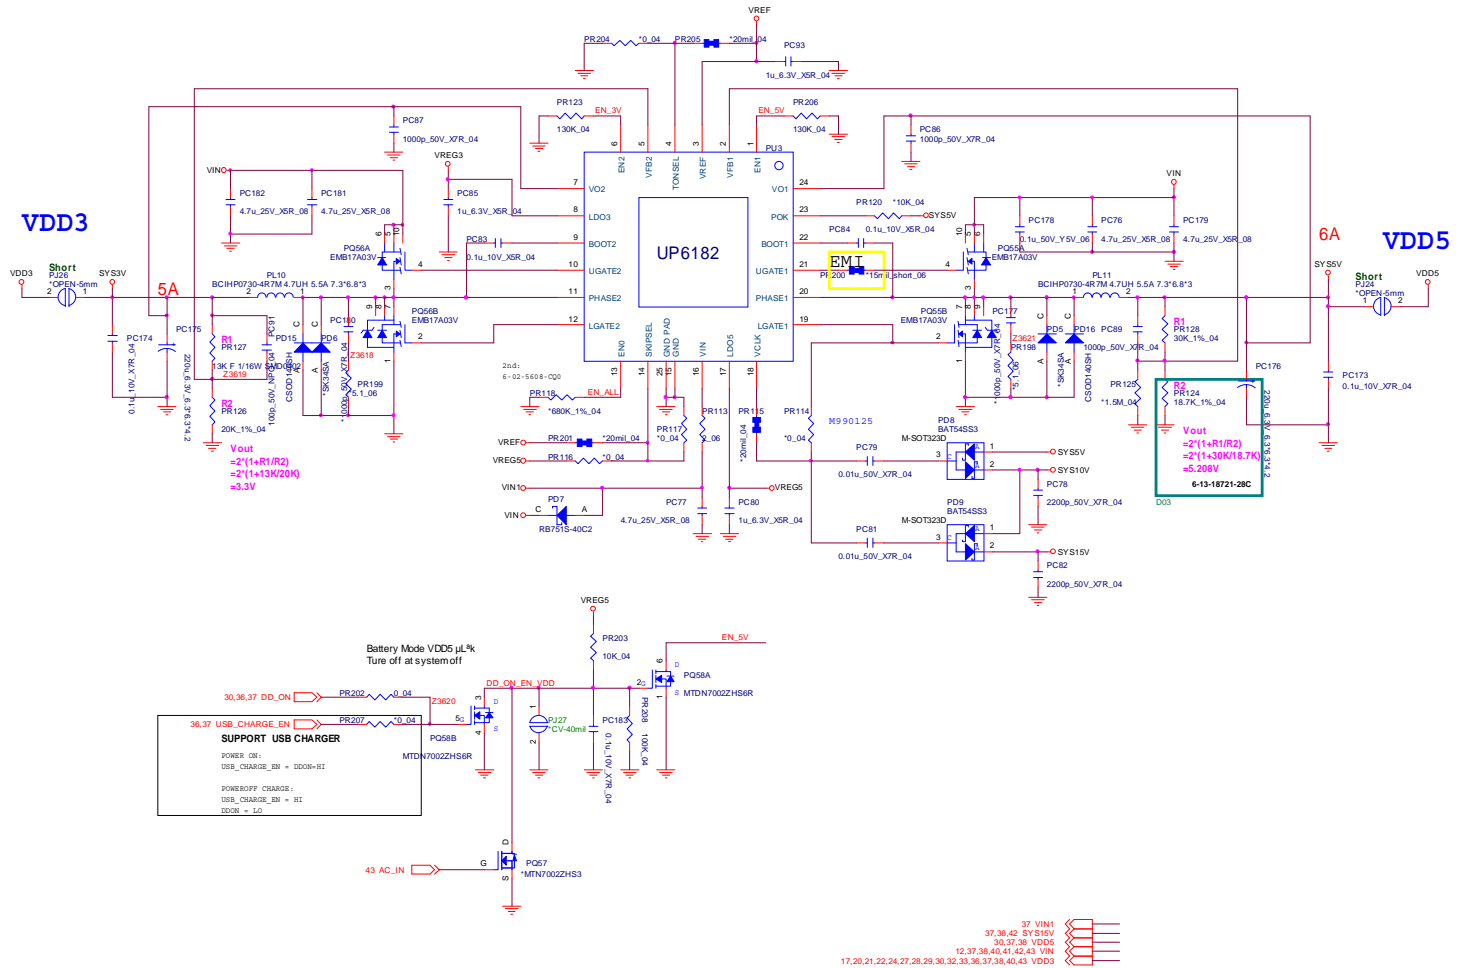



Sheet 39 of 46
 VDD3, VDD5

B.Schematic Diagrams

1.5V or 1.35V / 0.75VS, 1.5VS

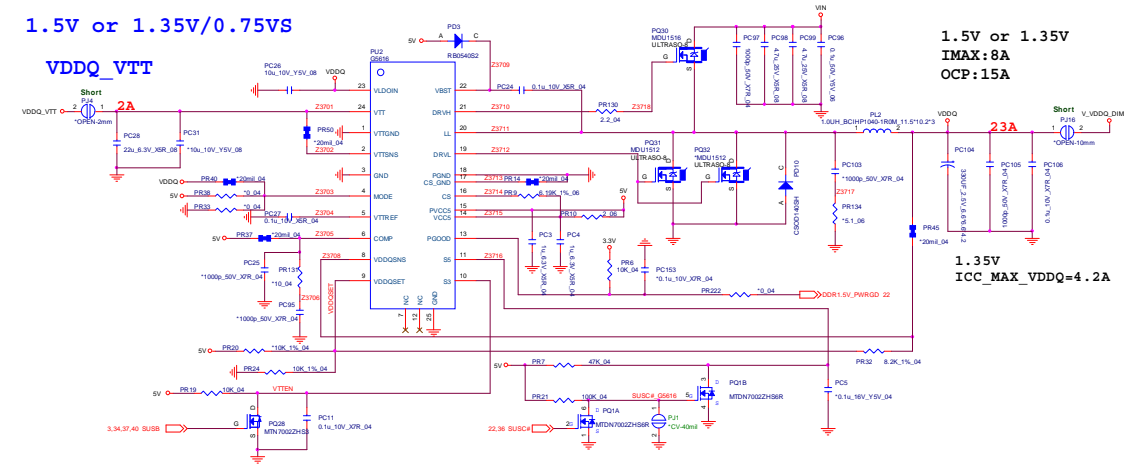


PCH_GPI024	PCH_GPI046	PCH_GPI08	DDR VOUT
0	1	1	1.5V (DEDAULT)
1	1	1	1.35V

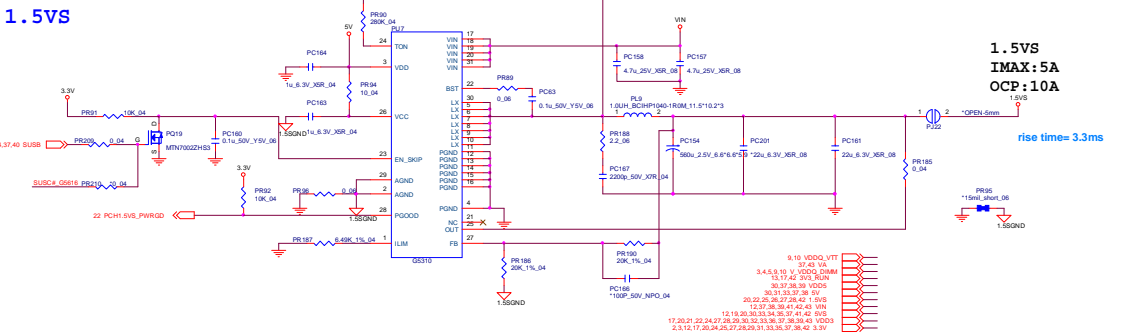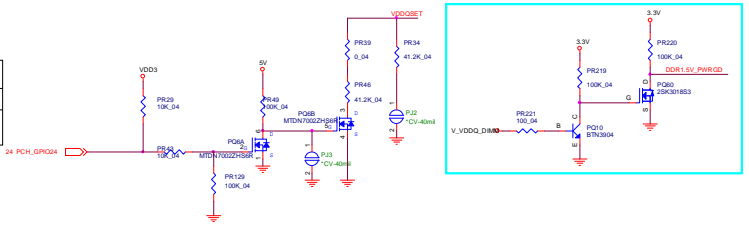

Sheet 40 of 46
1.5V or 1.35V /
0.75VS, 1.5VS


N14P, NVVDD, PEX, FBVDDQ

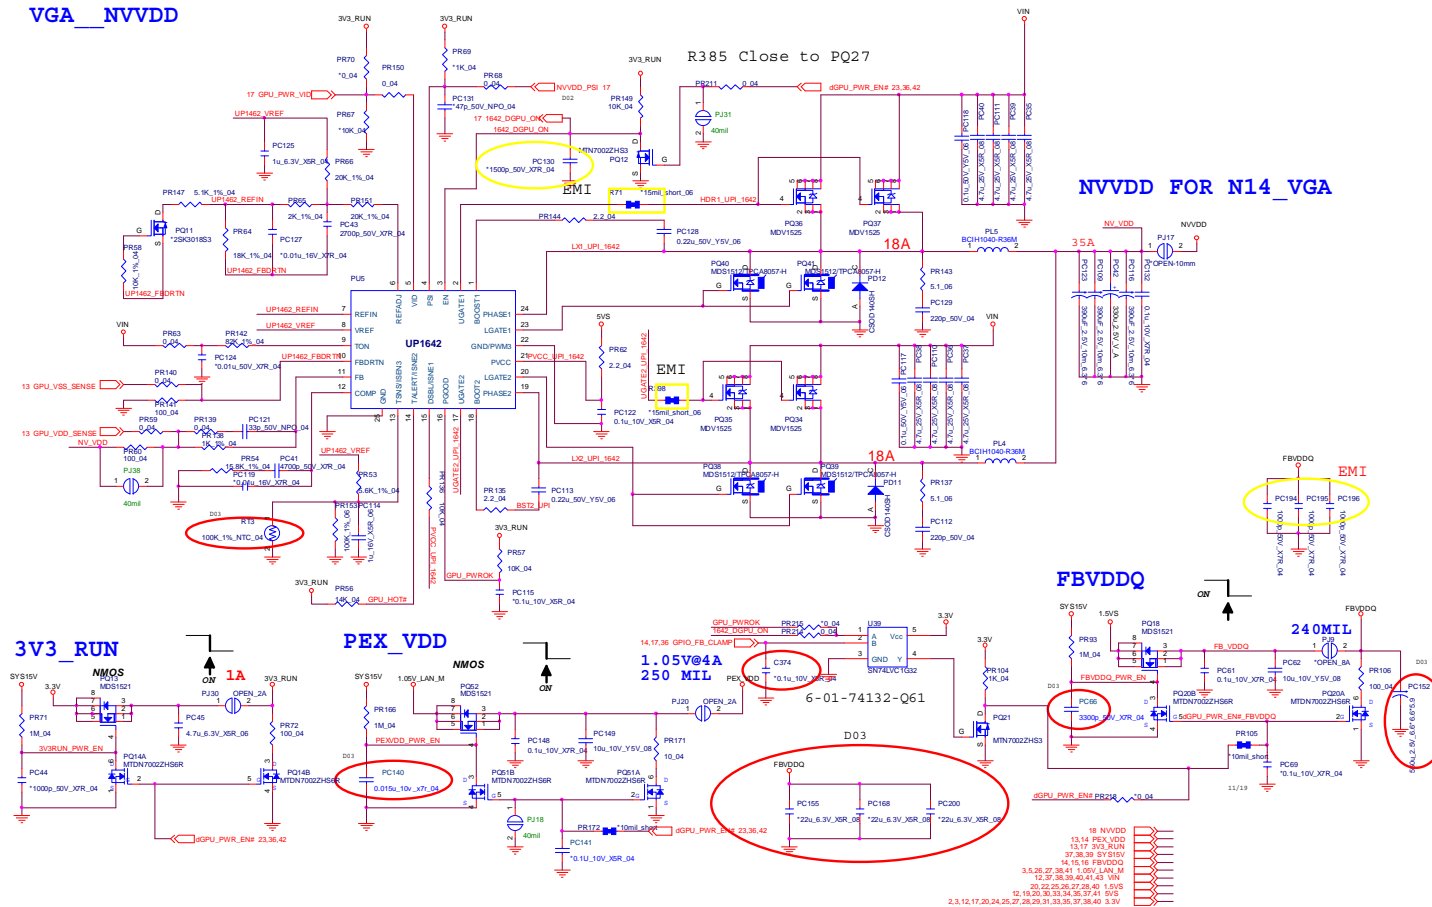

Sheet 42 of 46
 N14P, NVVDD, PEX,
 FBVDDQ

AC IN, CHARGER

SMART CHARGER

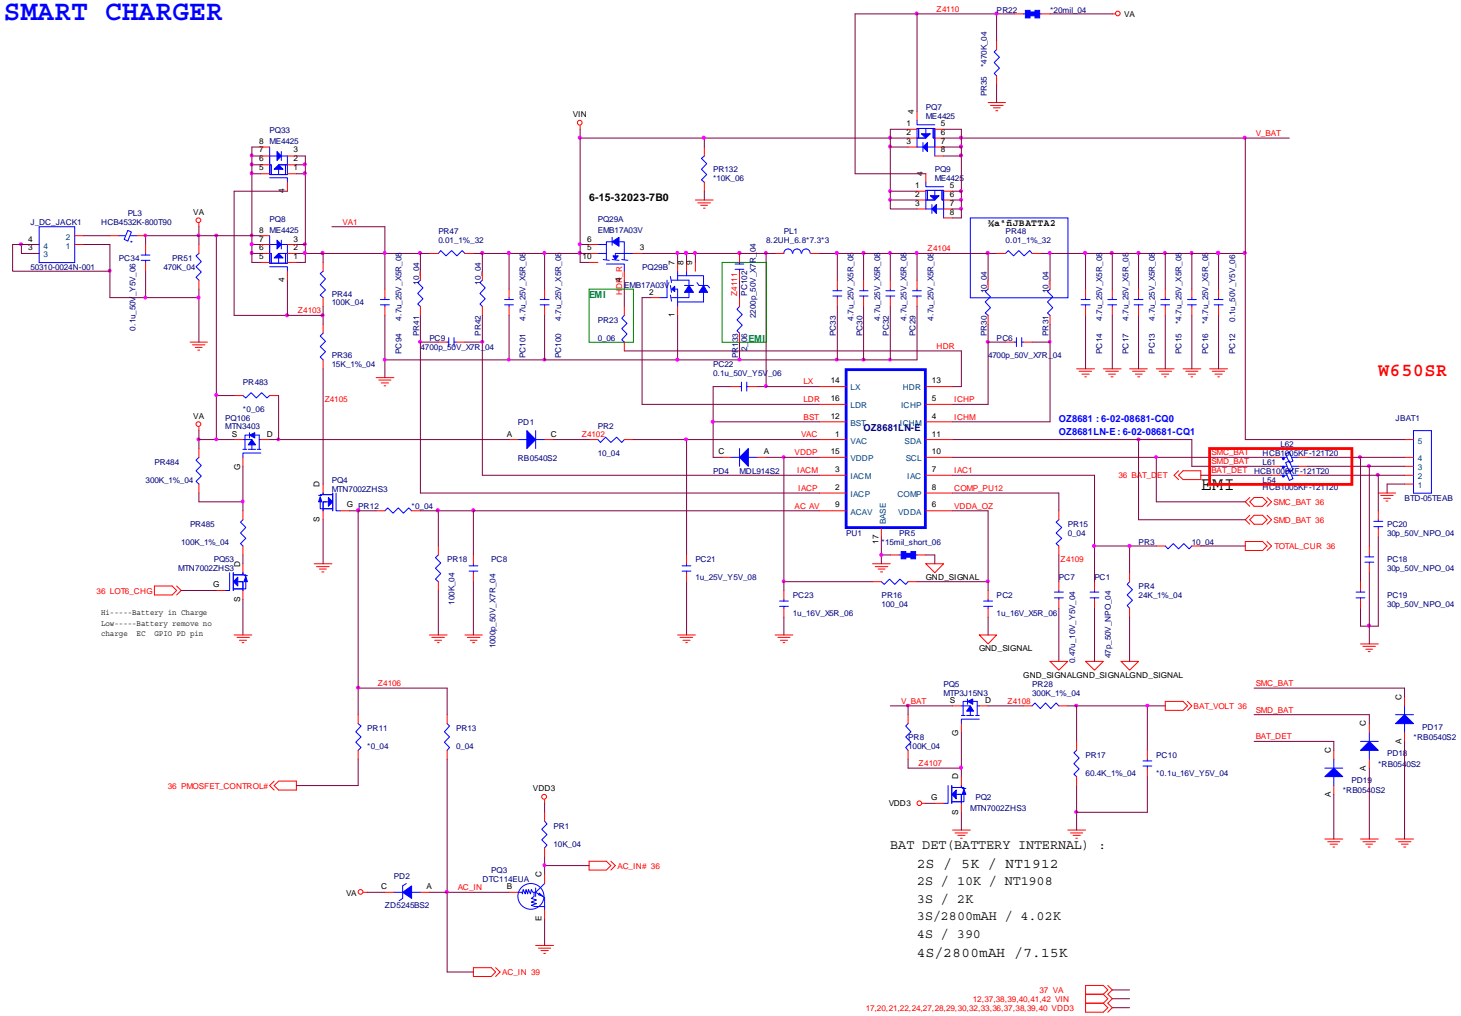


Sheet 43 of 46
AC IN, CHARGER


AUDIO BOARD

6-71-W6508-D05


AUDIO BOARD Connect

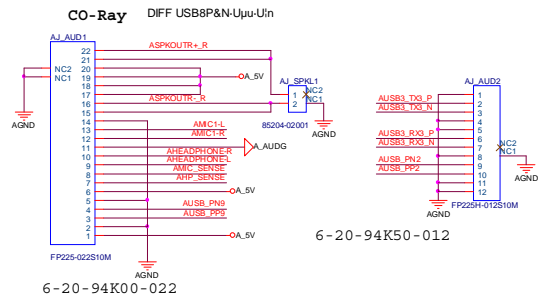


USB PORT (PORT9)

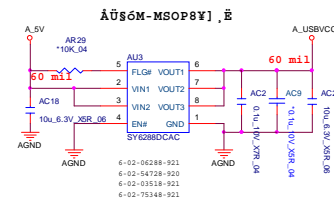

USB2.0 CON

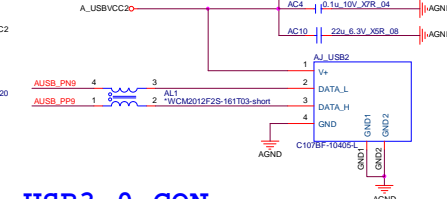


USB3.0 CON

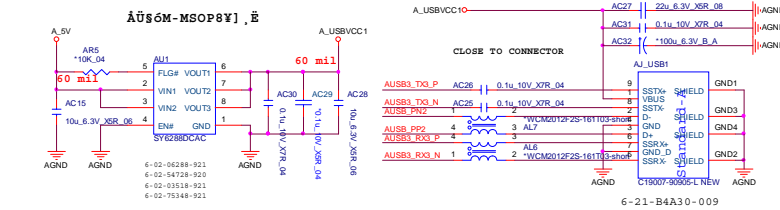

Sheet 44 of 46
AUDIO BOARD

AUDIO JACK

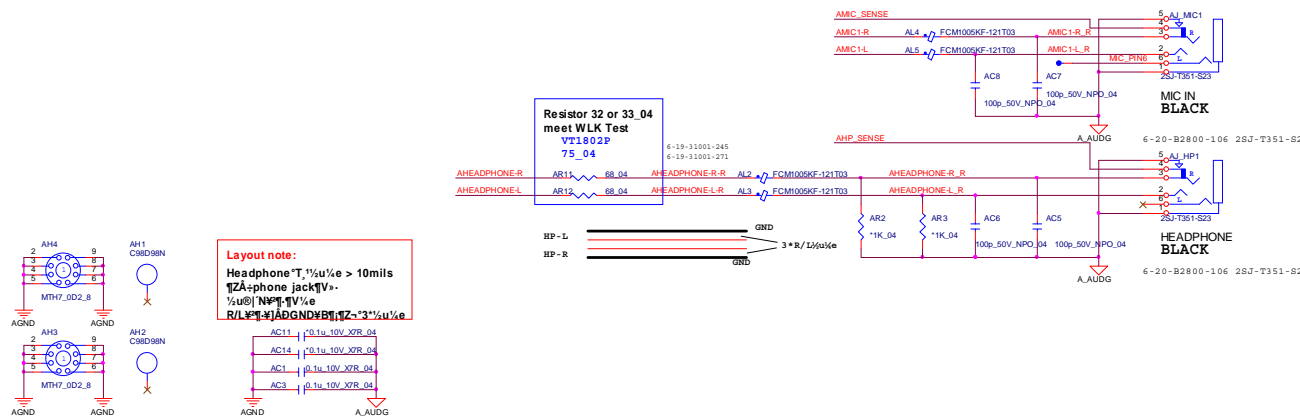

Layout note:
Headphone trace > 10mils
Headphone jack trace > 10mils
Headphone jack trace > 10mils
Headphone jack trace > 10mils

 



B.Schematic Diagrams

POWER SWITCH BOARD

Sheet 45 of 46
POWER SWITCH
BOARD

POWER & LED BOARD


6-71-W650S-D03-A

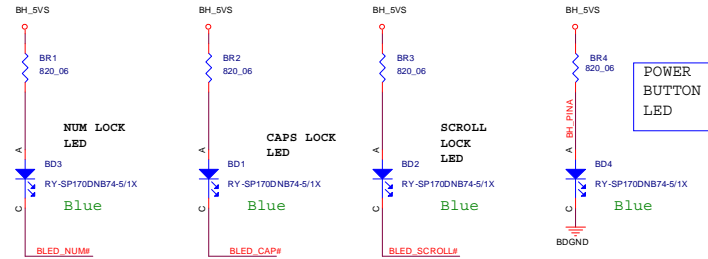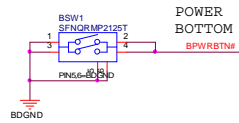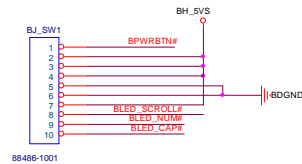

ODD to HDD BOARD

6-71-W650N-D03

ODD TO HDD BOARD

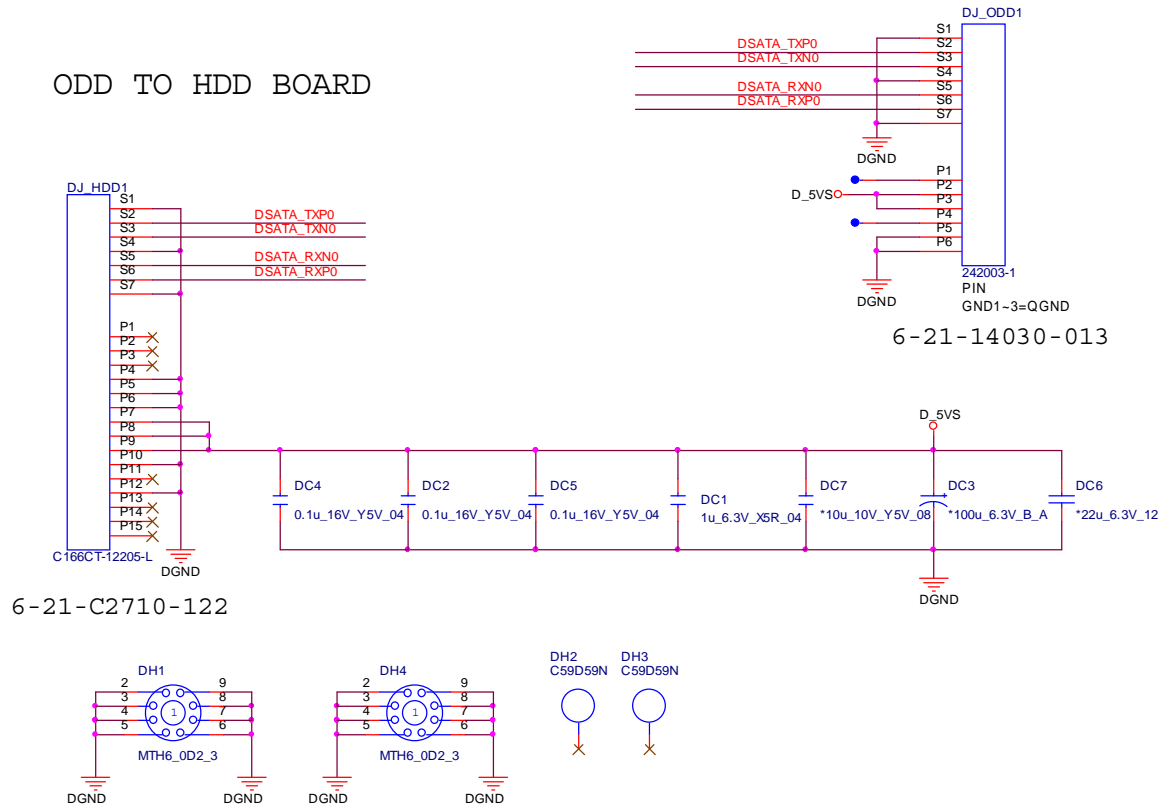

Sheet 46 of 46
ODD to HDD
BOARD

B.Schematic Diagrams

Schematic Diagrams

Appendix C: Updating the FLASH ROM BIOS

To update the FLASH ROM BIOS, you must:

- Download the BIOS update from the web site.
- Unzip the files onto a bootable CD/DVD/USB Flash Drive.
- Reboot your computer from an external CD/DVD/USB Flash Drive.
- Use the flash tools to update the flash BIOS using the commands indicated below.
- Restart the computer booting from the HDD and press **F2** at startup enter the BIOS.
- Load setup defaults from the BIOS and save the default settings and exit the BIOS to restart the computer.
- After rebooting the computer you may restart the computer again and make any required changes to the default BIOS settings.

Download the BIOS

1. Go to www.clevo.com.tw and point to **E-Services** and click **E-Channel**.
2. Use your user ID and password to access the appropriate download area (BIOS), and download the latest BIOS files (the BIOS file will be contained in a batch file that may be run directly once unzipped) for your computer model (see sidebar for important information on BIOS versions).

Unzip the downloaded files to a bootable CD/DVD/ or USB Flash drive

1. Insert a bootable CD/DVD/USB flash drive into the CD/DVD drive/USB port of the computer containing the downloaded files.
2. Use a tool such as Winzip or Winrar to unzip all the BIOS files and refresh tools to your bootable CD/DVD/USB flash drive (you may need to create a bootable CD/DVD with the files using a 3rd party software).

Set the computer to boot from the external drive

1. With the bootable CD/DVD/USB flash drive containing the BIOS files in your CD/DVD drive/USB port, restart the computer and press **F2** (in most cases) to enter the BIOS.
2. Use the arrow keys to highlight the **Boot** menu.
3. Use the “+” and “-” keys to move boot devices up and down the priority order.
4. Make sure that the CD/DVD drive/USB flash drive is set first in the boot priority of the BIOS.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.



BIOS Version

Make sure you download the latest correct version of the BIOS appropriate for the computer model you are working on.

You should only download BIOS versions that are **V1.01.XX or higher** as appropriate for your computer model.

Note that BIOS versions are not backward compatible and therefore **you may not downgrade your BIOS to an older version** after upgrading to a later version (e.g if you upgrade a BIOS to ver 1.01.05, you **MAY NOT** then go back and flash the BIOS to ver 1.01.04).

BIOS Update

Use the flash tools to update the BIOS

1. Make sure you are not loading any memory management programs such as HIMEM by holding the **F8** key as you see the message “**Starting MS-DOS**”. You will then be prompted to give “**Y**” or “**N**” responses to the programs being loaded by DOS. Choose “**N**” for any memory management programs.
2. You should now be at the DOS prompt e.g: DISK C:\> (C is the designated drive letter for the CD/DVD drive/USB flash drive).
3. **Type the following command** at the DOS prompt:

C:\> Flash.bat

4. The utility will then proceed to flash the BIOS.
5. You should then be prompted to press any key to restart the system or turn the power off, and then on again but make sure you remove the CD/DVD/USB flash drive from the CD/DVD drive/USB port before the computer restarts.

Restart the computer (booting from the HDD)

1. With the CD/DVD/USB flash drive removed from the CD/DVD drive/USB port the computer should restart from the HDD.
2. Press **F2** as the computer restarts to enter the BIOS.
3. Use the arrow keys to highlight the **Exit** menu.
4. Select **Load Setup Defaults** (or press **F3**) and select “**Yes**” to confirm the selection.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.

Your computer is now running normally with the updated BIOS

You may now enter the BIOS and make any changes you require to the default settings.